

BesLowe A925

BesLowe 15-inch Motion Sensor Outdoor Wall Lights (Model A925) Instruction Manual

Brand: BesLowe | Model: A925

1. INTRODUCTION

Thank you for choosing BesLowe Motion Sensor Outdoor Wall Lights. This manual provides essential information for the safe and efficient installation, operation, and maintenance of your new lighting fixtures. Please read these instructions thoroughly before installation and retain them for future reference.

Key Features:

- **Advanced PIR Motion and Photocell Sensors:** For intelligent, energy-efficient illumination.
- **3 Lighting Modes:** Dual-bright, ON/OFF, and Manual Override for versatile use.
- **Easy Mode Switching:** Simple one-click operation to switch between modes.
- **Adjustable Brightness:** 15-50% brightness adjustment in Dual-bright mode.
- **All-Weather Resistant:** Crafted from durable metal and sturdy glass to withstand various weather conditions.
- **E26 Socket:** Compatible with various E26 base bulbs (100W Max, bulbs not included).
- **Modern Design:** Clean lines complement various outdoor aesthetics.

2. WHAT'S IN THE BOX

Each BesLowe Motion Sensor Outdoor Wall Light package includes:

- Outdoor Wall Light Fixture
- Mounting Hardware (wire nuts, screws, extra nut, rubber washer)
- Instruction Manual

Note: E26 base bulbs are not included and must be purchased separately. Dimmable LED bulbs or incandescent bulbs are recommended for optimal performance, especially for Dual-bright mode.

3. SPECIFICATIONS

Brand	BesLowe
Model Number	A925
Color	Black
Material	Glass, Metal
Style	Modern
Light Fixture Form	Sconce
Room Type	Porch, Patio, Front Door, Hallway, Entryway, Corridor, Backyard
Indoor/Outdoor Usage	Outdoor
Power Source	Hard-wired
Light Source	LED (Bulb not included)
Voltage	120 Volts
Wattage	100 watts (Max)
Bulb Base	E26
Switch Type	Motion Sensor, Manual Switch
Water Resistance Level	Water Resistant
Mounting Type	Wall Mount
Item Dimensions (L x W x H)	5.9"L x 5.9"W x 15"H

4. SETUP & INSTALLATION

The BesLowe outdoor wall light is designed for straightforward installation. It comes pre-assembled with all necessary mounting accessories. For safety, always ensure the power supply to the installation area is turned off at the circuit breaker before beginning any electrical work.

Installation Steps:

- 1. Prepare the Area:** Turn off power at the main circuit breaker.
- 2. Mount the Fixture:** Attach the mounting bracket to your wall junction box. Connect the fixture's wires (black to black, white to white, ground to ground) using the provided wire nuts. Secure the light fixture to the mounting bracket using the provided screws.
- 3. Install Bulb:** Insert an E26 base bulb (max 100W) into the socket. The open-bottom design allows for easy bulb replacement.
- 4. Restore Power:** Turn the power back on at the circuit breaker.



Product dimensions (5.9"L x 5.9"W x 15"H) and details on the E26 bulb base (100W Max), sturdy metal structure, and clear glass.

Official video demonstrating the features and operation of the BesLowe Upgraded Motion Sensor Outdoor Wall Light, including mode switching and sensor capabilities.

5. OPERATING INSTRUCTIONS

Your BesLowe outdoor wall light features an advanced PIR motion sensor and photocell sensor, offering three distinct lighting modes. The latest sensor design allows for easy one-press mode switching.

Switching Lighting Modes:

Locate the small button on the top of the fixture. A simple click will cycle through the available modes:

- **Dual-bright Mode:** The light stays at 40% brightness at night (adjustable from 15-50%). When motion is detected, it increases to 100% brightness. After motion ceases, it returns to 40%.
- **ON/OFF Mode:** The light remains off until motion is detected, then lights up at 100% brightness. It turns off again after no motion is detected.

- **Manual Override Mode:** To activate this mode, quickly turn the wall switch "on-off-on" within 2 seconds. The light will stay at 100% brightness for 6-8 hours, regardless of motion, then automatically turn off at dawn and revert to the previously selected mode (Dual-bright or ON/OFF).

Adjusting Brightness (Dual-bright Mode):

In Dual-bright mode, you can adjust the low-level brightness (15-50%) by long-pressing the mode switch button on the fixture.



Diagram illustrating the three lighting modes: Dual-bright, ON/OFF, and Manual Override, with examples of light behavior.

Manual Override Mode

Perfect for family reunions and outdoor parties



Stay on with 100% brightness for 8 hours



Automatically turn off at dawn and back to "Dual-bright" mode or "ON/OFF" mode



Turn the wall switch "on-off-on" within 2 secs to set this mode.

Illustration of the Manual Override mode, providing continuous 100% brightness for up to 8 hours, suitable for outdoor gatherings.

6. MAINTENANCE

Cleaning:

To maintain the appearance and functionality of your light fixture, clean it periodically with a soft, damp cloth. Avoid using harsh chemicals or abrasive cleaners, as these can damage the finish or glass. The durable metal construction and sturdy glass are designed for easy cleaning.

Bulb Replacement:

Thanks to the open-bottom design, replacing the E26 base bulb is simple. Ensure the power is off before replacing the bulb. Use an E26 base bulb with a maximum wattage of 100W. Dimmable LED or incandescent bulbs are recommended for optimal performance, especially when utilizing the Dual-bright mode.

7. TROUBLESHOOTING

If you encounter any issues with your BesLowe Motion Sensor Outdoor Wall Light, please consider the following common solutions:

- **Light Not Turning On:** Check the power supply at the circuit breaker. Ensure the bulb is correctly installed and not faulty. Verify the selected lighting mode is appropriate for current light conditions (e.g., ON/OFF mode will not activate without motion).
- **Motion Sensor Not Responding:** Ensure the sensor is clean and unobstructed. Confirm the light is in a motion-sensing mode (Dual-bright or ON/OFF). Test the sensor's range and sensitivity.
- **Light Stays On Continuously:** Check if the Manual Override mode has been activated. If so, the light will remain on for 6-8 hours. Ensure the photocell sensor is not obstructed, as it might detect darkness prematurely.
- **Difficulty Switching Modes:** Ensure you are pressing the mode button correctly. For Manual Override, the "on-off-on" sequence on the wall switch must be performed within 2 seconds.

If problems persist after attempting these steps, please contact BesLowe customer support for further assistance.

8. WARRANTY & SUPPORT

Your BesLowe Motion Sensor Outdoor Wall Light comes with a **12-month manufacturer's warranty**, covering defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims.

For product support, technical assistance, or warranty inquiries, please visit the official BesLowe Store on Amazon: [BesLowe Official Store](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

