

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [NOHON](#) /

> [NOHON 10000mAh Magnetic Wireless Power Bank \(Model NX-YSP04\) User Manual](#)

NOHON NX-YSP04

NOHON 10000mAh Magnetic Wireless Power Bank (Model NX-YSP04) User Manual

INTRODUCTION

This manual provides essential information for the safe and efficient use of your NOHON 10000mAh Magnetic Wireless Power Bank, Model NX-YSP04. Please read this manual thoroughly before using the product and retain it for future reference.

The NOHON Magnetic Wireless Power Bank offers a convenient and portable charging solution with its 10000mAh capacity, magnetic wireless charging, and fast wired charging capabilities. Its compact design makes it ideal for travel and daily use.

PACKAGE CONTENTS

Verify that all items are present in your package:

- 1 x NOHON 10000mAh Magnetic Wireless Power Bank
- 1 x USB-C Charging Cable
- 1 x User Manual

PRODUCT OVERVIEW

Familiarize yourself with the components of your power bank.

Genießen Sie die Ladeart, die Ihnen gefällt

Kabelgebundenes Laden / kabelloses Laden



20W

Typ-C Ausgang

10W

Lightning-Eingang

18W

Typ-C-Eingang

5W 7.5W 10W

Kabelloser Ausgang

Image: NOHON Magnetic Wireless Power Bank showing its Type-C In/Out port, Lightning Input, and LED indicators.

- **Magnetic Wireless Charging Pad:** For wireless charging compatible devices.
- **USB-C Port (In/Out):** Supports 20W PD fast charging for both input and output.
- **Lightning Input Port:** For charging the power bank using a Lightning cable (10W).
- **LED Indicators:** Display battery level and charging status.
- **Power Button:** To activate/deactivate the power bank and check battery level.

SETUP

Initial Charging of the Power Bank

Before first use, fully charge your NOHON Power Bank.

1. Connect the provided USB-C cable to the USB-C port on the power bank.
2. Connect the other end of the USB-C cable to a compatible USB wall adapter (not included).

3. The LED indicators will illuminate to show the charging progress. All LEDs will be solid when fully charged.
4. Alternatively, you can use a Lightning cable (not included) to charge the power bank via its Lightning input port.



Image: Close-up view of the USB-C and Lightning input ports on the power bank.

OPERATING INSTRUCTIONS

Checking Battery Level

Press the power button once to check the remaining battery level via the LED indicators.

Wireless Charging

The power bank features magnetic wireless charging for compatible devices (e.g., iPhone 12/13/14 series).

1. Ensure your device supports magnetic wireless charging. For other devices, a MagSafe-compatible case may be required.
2. Align your device with the magnetic charging pad on the power bank. The magnets will securely attach the device.
3. Wireless charging will begin automatically. The power bank supports 5W/7.5W/10W wireless output.

10000mAh Kabelloses Magnetisches Aufladen unmittelbar



Image: An iPhone is shown magnetically attached to the NOHON power bank, indicating active wireless charging.

Starke Magnete, Stabil im Gebrauch

Ohne Sich um Unterbrechungen zu Sorgen



! Hinweis:

Nur iPhone 12 13 14 Serie mit drahtlosen magnetischen Ladefunktion, andere müssen mit Magsafe Telefon Fall verwenden.

Image: A hand demonstrates the strong magnetic attachment of the power bank to a smartphone, ensuring stable charging.

Kompatible Handytasche



Image: Illustration differentiating between MagSafe-compatible cases (green check) and non-MagSafe cases (red cross) for optimal magnetic charging.

Wired Charging

Use the USB-C port for wired charging of your devices.

1. Connect one end of a USB-C cable to the USB-C port on the power bank.
2. Connect the other end of the cable to your device's charging port.
3. The power bank will automatically begin charging your device with up to 20W PD fast charging.

Charging Multiple Devices Simultaneously

The NOHON Power Bank supports charging two devices at the same time: one wirelessly and one via the USB-C port.



Image: The power bank is shown charging an iPhone wirelessly while simultaneously being recharged via a USB-C cable from a wall adapter.

MAINTENANCE

- Keep the power bank dry and away from moisture.
- Do not expose to extreme temperatures (hot or cold).
- Clean the surface with a soft, dry cloth. Avoid harsh chemicals or abrasive materials.
- Store in a cool, dry place when not in use for extended periods.
- Avoid dropping or subjecting the power bank to strong impacts.

TROUBLESHOOTING

Power bank not charging:

- Ensure the charging cable is securely connected to both the power bank and the power source.

- Try a different charging cable or wall adapter.
- Check if the power source is active.

Device not charging wirelessly:

- Ensure your device is wirelessly charging compatible and properly aligned with the power bank's magnetic pad.
- Remove any thick cases or metal objects between the device and the power bank.
- Ensure the power bank has sufficient charge.
- Press the power button on the power bank to activate wireless charging if it doesn't start automatically.

Device not charging via cable:

- Ensure the cable is securely connected to both the power bank and your device.
- Try a different cable or device to rule out cable or device issues.
- Ensure the power bank has sufficient charge.

SPECIFICATIONS

Model Number	NX-YSP04
Battery Capacity	10000mAh
USB-C Input/Output	20W PD (Power Delivery)
Lightning Input	10W
Wireless Output	5W / 7.5W / 10W
Battery Type	Lithium-polymer
Dimensions (L x W x H)	9.6 x 6.4 x 1.8 cm
Weight	250 g
Compatible Devices	Smartphones (e.g., iPhone 12/13/14 series), Tablets, Wireless Earbuds

Breite Kompatibilität

iOS



iPhone 14/13/12 Serien

Andere



Muss mit Magsafe-Telefonhülle verwendet werden



Image: Visual representation of the power bank's broad compatibility with iOS devices (iPhone 12/13/14 series) and other smartphones (requiring a MagSafe case).

SAFETY INFORMATION

To ensure safe operation and prevent damage, please observe the following safety precautions:

- Do not disassemble, modify, or repair the device yourself.
- Do not expose to fire, water, or extreme temperatures.
- Avoid dropping or strong impacts.
- Keep out of reach of children.
- Do not use if the power bank is damaged or swollen.
- Dispose of the product responsibly according to local regulations.
- The product features Multi-Protect safety technology to prevent overcharge, over-discharge, over-current, and short-circuit.

WARRANTY AND SUPPORT

NOHON is committed to product quality and customer satisfaction. If you encounter any issues or have questions regarding your NOHON Magnetic Wireless Power Bank, please contact our customer support.

Please refer to the contact information provided on the product packaging or the official NOHON website for support details.

The product includes a standard manufacturer's warranty. Please retain your proof of purchase for warranty claims.

