

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Astarama](#) /

› [Astarama 12L Portable Mini Washing Machine with Spin Basket User Manual](#)

## Astarama 12L Portable Mini Washing Machine

# Astarama 12L Portable Mini Washing Machine with Spin Basket User Manual

Model: 12L Portable Mini Washing Machine

### INTRODUCTION

Thank you for choosing the Astarama 12L Portable Mini Washing Machine. This compact and foldable appliance is designed for efficient cleaning of small items, offering convenience for various living situations. Please read this manual thoroughly before use to ensure safe and optimal operation.

- **Lightweight and Portable:** Designed for easy transport and storage in small spaces, ideal for apartments, dorms, hotels, travel, or camping.
- **12L Large Capacity:** Upgraded capacity allows for more laundry per cycle compared to traditional mini washing machines.
- **Intelligent Cleaning Modes:** Features three timer buttons (3-minute, 5-minute, and 10-minute) for flexible washing requirements, from quick cleans to deep washing.
- **Removable Spin-dry Basket:** Automatically separates residual water from garments after washing, saving time and effort. Note: The spin-dry basket removes most water but does not completely dry clothes.
- **Space-saving Folding Design:** Folds down to a compact size (11.81x9.45x6.3 inches / 30x24x16 cm) for easy storage between shelves or under a bed.

### PRODUCT OVERVIEW

The Astarama Portable Mini Washing Machine is engineered for convenience and efficiency. Its unique foldable design and multiple wash modes make it a versatile solution for your small laundry needs.



Figure 1: Dimensions of the Astarama Portable Mini Washing Machine when expanded and folded, showing the spin basket.

Expanded dimensions are approximately 13 inches (33 cm) high and 12.2 inches (30.9 cm) wide. Folded dimensions are approximately 5.9 inches (14.9 cm) high and 12.2 inches (30.9 cm) wide. The spin basket is 4.5 inches (11.4 cm) high and 6.3 inches (16 cm) wide.



Figure 2: This image highlights the advantages of the portable washing machine, such as convenience, time-saving, cost-effectiveness, and safety for delicates, contrasted with the disadvantages of a laundromat, including distance, waiting times, expense, and unsuitability for delicates.



Figure 3: This visual guide shows that the mini washing machine is suitable for small items like underwear, shirts, towels, and baby clothes. It is not compatible with large items such as thick coats, jeans, down jackets, or sweaters.

# Upgrade Design Large Capacity & Strong Power Motor

36W Strong Power Upgraded Motor

- Up to 520 RPM, fast and stable
- Longer service life, more durable
- 360° all-round imitation hand washing isn't damage to the clothes

Others 6.5L



Ours 12L



**Note:** The motor is promoted to better washing effect, it may produce some sound after starting, pls put it in the space of isolating the sound, the use effect is better.

Figure 4: The machine features an upgraded 36W strong power motor, offering up to 520 RPM for fast and stable operation, ensuring a longer service life and 360° all-round imitation hand washing without damaging clothes. A note advises that the motor may produce some sound after starting, suggesting placement in a sound-isolating space for better effect.

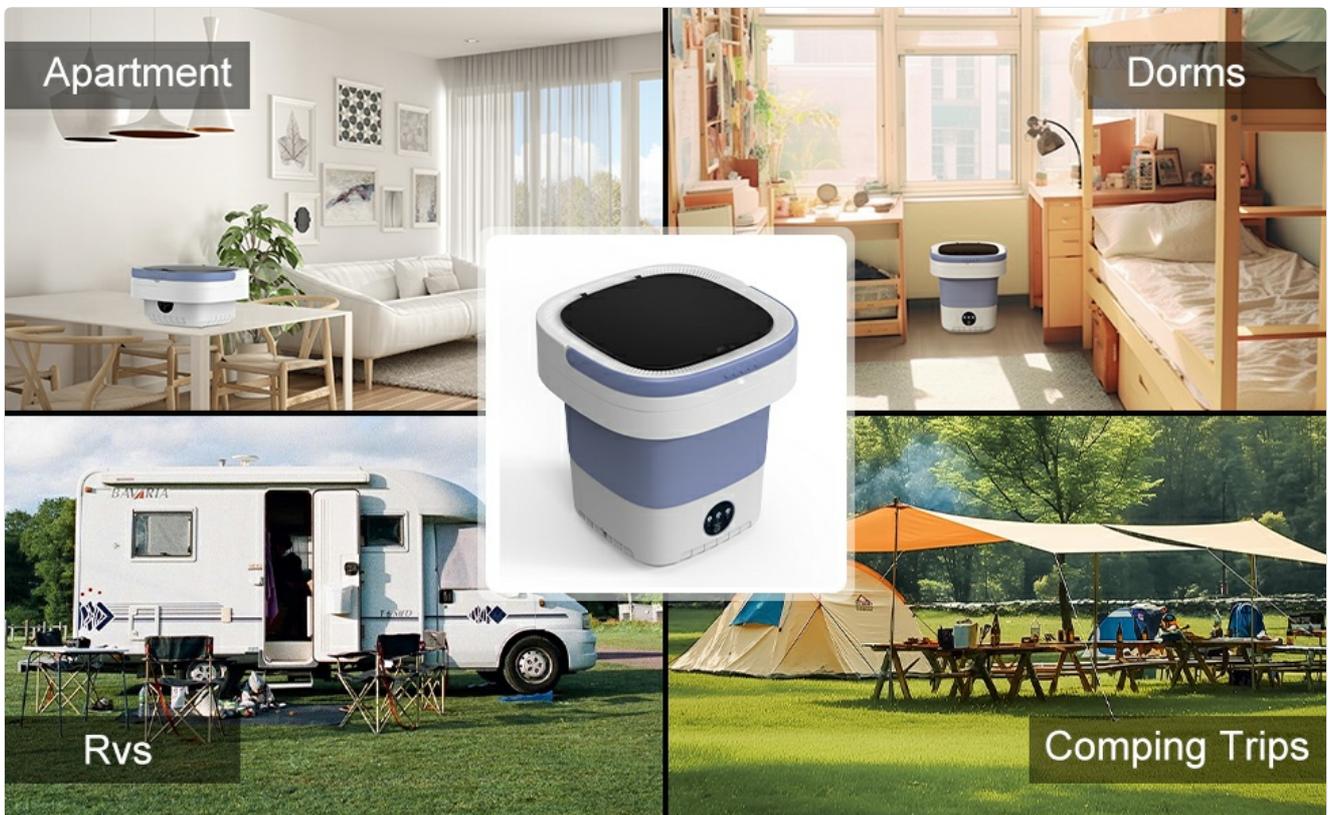


Figure 5: The portable washing machine is versatile and suitable for use in various environments, including apartments, dorms, RVs, and camping trips, providing a convenient laundry solution wherever needed.

## SETUP

1. **Unfold the Washer:** Gently pull up the top rim of the washing machine until it fully expands. Ensure the collapsible silicone body is fully extended and stable.
2. **Connect Power:** Plug the adapter into the designated port on the washing machine and then into a standard electrical outlet.
3. **Position for Drainage:** Place the washing machine near a sink, bathtub, or any area where water can be safely drained. Ensure the drain plug at the bottom is securely closed before adding water. If using the extended drain hose, attach it to the drain outlet.
4. **Prepare for Washing:** Open the lid and ensure the internal pulsator is clear of any obstructions.

# Easy To Use

3 Timing modes sdjus, long press for 2 seconds to star/stop the washer

## Blue Light Design

## Power Wash

Remove Stubborn Stains

## Deeper

Into the fibers to clean

## Effective

Remove the stain



Figure 6: The control panel features three timer buttons: 3-minute for spin-drying, 10-minute for standard washing, and 5-minute for quick washing. A blue light indicates operation and aids in deep cleaning.

## OPERATING INSTRUCTIONS

- Add Clothes:** Place a suitable amount of small, delicate items into the washing machine. Do not overload (maximum 12L capacity).
- Add Water and Detergent:** Fill the washer with water, ensuring the water level is less than 2/3 of the machine's height. Add an appropriate amount of detergent.
- Select Wash Mode:** Long press the power button for 2 seconds to turn on the machine. The blue light will illuminate. Press the button repeatedly to cycle through the 3-minute (spin-drying), 5-minute (quick washing), and 10-minute (standard washing) modes. The selected mode's indicator light will be on.
- Start Washing:** The machine will automatically start the selected wash cycle.
- Drain Water:** Once the wash cycle is complete, open the drain plug to release the dirty water. If using the drain hose, direct it into a sink or drain.

6. **Rinse (Optional):** For rinsing, close the drain plug, refill with clean water, and run a short wash cycle (e.g., 5 minutes) without detergent. Drain the water again after rinsing.
7. **Spin-Dry:** After draining the water, install the draining basket inside the washer. Place the washed clothes evenly into the basket. Select the 3-minute spin-dry mode. Ensure the clothes' center of gravity is in the center of the basket to prevent instability.
8. **Power Off:** Long press the power button for 2 seconds to turn off the machine.



Figure 7: A visual guide to the four main steps of using the washing machine: 1. Adding small delicates, water (less than 2/3 full), and detergent. 2. Long pressing the switch for 2 seconds to start, then pressing to adjust washing time (3, 5, or 10 minutes). 3. Turning on the drain switch, draining dirty water, and refilling for rinsing. 4. Placing clothes in the center of the draining basket for water separation.



Figure 8: The washing machine incorporates UV blue light technology to disinfect clothes during the wash cycle, enhancing cleanliness. The image shows a visual comparison of fabric before and after washing with this feature.

### Official Product Videos

Video 1: This video demonstrates the folding and unfolding of a similar mini washer, showcasing its compact size and various operational modes. It highlights the convenience of its portable

and foldable design for easy storage and use.

Video 2: A short video showcasing the washing action of a mini washing machine, emphasizing its convenience for handling small laundry loads efficiently.

Video 3: This user-generated video demonstrates the washing process of the portable machine with small clothing items, highlighting its effectiveness for personal laundry.

## MAINTENANCE

- **Cleaning:** After each use, rinse the interior of the washing machine with clean water. Wipe down the exterior with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Drying:** Allow the interior to air dry completely before folding and storing to prevent mold or mildew.
- **Storage:** Fold the machine down to its compact size and store it in a cool, dry place away from direct sunlight.
- **Spin Basket:** Clean the spin basket regularly to remove any lint or residue.

## TROUBLESHOOTING

- **Machine not turning on:** Ensure the power adapter is securely plugged into both the machine and a working electrical outlet.
- **Water not draining:** Check if the drain plug is open and not obstructed. Ensure the drain hose (if used) is properly positioned.
- **Clothes not spinning properly:** Ensure the machine is not overloaded. Distribute clothes evenly in the spin basket to maintain balance.
- **Unusual noise during operation:** Check for any foreign objects inside the pulsator or if the machine is on an uneven surface.

## SPECIFICATIONS

Feature	Detail
Brand Name	Astarama
Model Info	Washing machine
Item Weight	4.49 pounds (2.04 Kilograms)
Product Dimensions (Expanded)	12.99 x 9.45 x 9.45 inches
Product Dimensions (Folded)	11.81"D x 9.45"W x 6.3"H (30x24x16 cm)
Capacity	12 Liters
Installation Type	Countertop

Special Features	12L, 3 Modes, Foldable, Portable
Color	Purple
Control Console	Push Button
Standard Cycles	3
Access Location	Top Load
Material Type	Food-grade silicone material

### WHAT'S IN THE BOX

- 1x 12L Folding washing machine
- 1x Draining Basket
- 1x Adapter

### WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the Astarama official website. Keep your purchase receipt as proof of purchase.