

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [LIBREFLY](#) /

> [LIBREFLY S36 Full HD 1080P WiFi Camera Clock Instruction Manual](#)

LIBREFLY S36

LIBREFLY S36 Full HD 1080P WiFi Camera Clock Instruction Manual

Model: S36 | Brand: LIBREFLY

1. PRODUCT OVERVIEW

The LIBREFLY S36 is a discreet Full HD 1080P WiFi Camera Clock designed for wireless security surveillance. It functions as a regular digital clock while secretly capturing high-quality video. Key features include remote access via a dedicated app, smart motion detection alerts, expandable storage, and enhanced night vision.



Image: LIBREFLY S36 Full HD 1080P WiFi Camera Clock, showcasing its discreet design and surveillance capabilities.

2. PACKAGE CONTENTS

Verify that all items are present in the package:

- LIBREFLY S36 Camera Clock
- USB Charging Cable
- User Manual

A Micro SD card (up to 256GB) is required for local storage and is not included.

Video: Unboxing the LIBREFLY S36 Camera Clock, showing the device and included accessories.

3. SETUP GUIDE

3.1 Inserting the Micro SD Card

Before operating the camera, insert a Micro SD card (not included) into the designated slot. Ensure the card is inserted correctly to enable video recording and storage.

Video: Demonstrates the correct procedure for inserting a Micro SD card into the camera clock.

3.2 Powering On and Charging

Connect the camera clock to a power source using the provided USB charging cable. The device can operate on battery power or continuous power when plugged in.

3.3 App Installation and WiFi Connection

To access remote viewing and advanced features, download the dedicated mobile application (refer to the user manual for app name and QR code). Follow the in-app instructions to connect the camera to your 2.4GHz WiFi network. This enables P2P IP camera network functionality for remote monitoring.

Live View on the APP



Image: Illustrates the live view functionality of the camera clock through its dedicated mobile application.

4. OPERATING INSTRUCTIONS

4.1 Continuous Recording Mode

To activate continuous recording, ensure a Micro SD card is inserted. Set the mode switch to the 'L' position (Continuous Recording Mode). Press the camera button until the red and blue indicator lights turn on and then off. The camera will then automatically begin recording. Video files are saved every 5 minutes, and the oldest files are overwritten when the card is full. No lights will flash during recording to maintain discretion.

Video: Demonstrates how to set the camera to continuous recording mode and initiate recording.

4.2 Motion Detection Recording Mode

For motion-activated recording, set the mode switch to the 'M' position (Motion Detection Mode). Press the camera button until the red and blue indicator lights turn on, then the blue light will blink three times and go out. The camera will automatically start recording when motion is detected. Video files are saved every 5 minutes, and the oldest files are overwritten when the card is full. No lights will flash during recording.

Motion Detection Alarm & Push



Image: Visual representation of the camera's motion detection alert system.

4.3 Night Vision

The camera features enhanced night vision technology, allowing for clear and detailed recordings even in low-light conditions. This ensures continuous monitoring day and night.

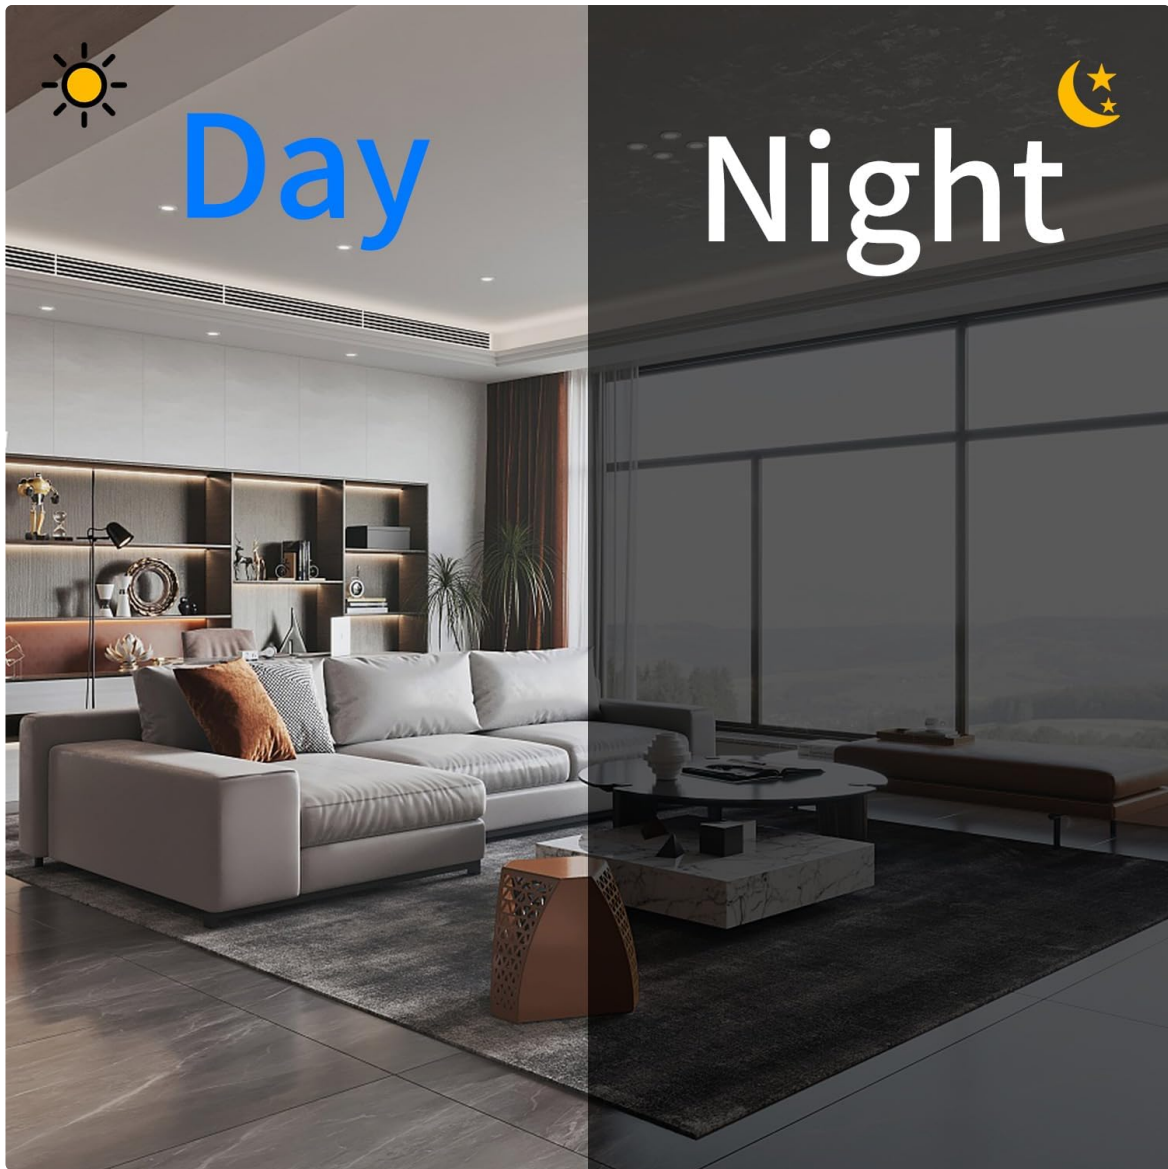


Image: Illustrates the camera's ability to capture clear images in both day and night settings.

4.4 Viewing Recorded Files

To view recorded files, first turn off the camera. Then, remove the Micro SD card by firmly pressing it with the reset pin until it pops up. Insert the Micro SD card into a card reader and connect it to your computer's USB port. Alternatively, connect the camera directly to your computer using the USB cable. Open the 'Removable Disk' drive on your computer and access the video files.

5. MAINTENANCE

To ensure optimal performance and longevity of your LIBREFLY S36 Camera Clock, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the device. Avoid abrasive cleaners or solvents that may damage the surface.
- **Storage:** Store the camera in a cool, dry place away from direct sunlight and extreme temperatures when not in use.
- **Battery Care:** If the device will not be used for an extended period, fully charge the battery before storage and recharge it periodically to maintain battery health.

- **Firmware Updates:** Check the manufacturer's website or app for any available firmware updates to ensure the device has the latest features and bug fixes.

6. TROUBLESHOOTING

If you encounter issues with your LIBREFLY S36 Camera Clock, refer to the following common troubleshooting steps:

- **Device Not Powering On:** Ensure the device is fully charged or connected to a power source. Check the USB cable and adapter for damage.
- **Recording Issues:** Verify that a Micro SD card is properly inserted and has sufficient free space. The card may need to be formatted (refer to the app or user manual for instructions). Ensure the correct recording mode (continuous or motion detection) is selected.
- **WiFi Connectivity Problems:** Confirm that the camera is within range of a 2.4GHz WiFi network. Ensure the WiFi password is entered correctly in the app. Try resetting the camera (refer to the user manual for the reset procedure).
- **Poor Night Vision:** Ensure there are no obstructions blocking the camera lens. While night vision is enhanced, extreme darkness may still limit visibility.
- **App Connection Issues:** Ensure the app is updated to the latest version. Restart the app and the camera. Check your smartphone's network settings.

For further assistance, consult the full user manual or contact LIBREFLY customer support.

7. SPECIFICATIONS

Feature	Detail
Model Name	S36
Video Capture Resolution	1080p
Connectivity Technology	Wireless (Wi-Fi)
Indoor/Outdoor Usage	Indoor
Power Source	Battery Powered
Compatible Devices	Smartphone
Viewing Angle	140 Degrees
Night Vision Range	10 Feet
Frame Rate	15-20 frames_per_second
Max SD Card Capacity	256GB (Not Included)
Alert Type	Motion Only

Item Dimensions (L x W x H)	1 x 1 x 1 inches
Item Weight	7.8 ounces

8. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the contact details provided in your product packaging or visit the official LIBREFLY website. Keep your purchase receipt for warranty claims.