

[Manuals.plus](#) /

› [Momcozy](#) /

› Momcozy Portable Milk Warmer User Manual

Momcozy MW05

Momcozy Portable Milk Warmer User Manual

Model: MW05

1. INTRODUCTION

Thank you for choosing the Momcozy Portable Milk Warmer. This device is designed to provide a convenient and efficient way to warm breast milk or water for formula, ensuring your baby's feeding needs are met anytime, anywhere. With its dual heating modes, fast warming capabilities, and long-lasting battery, it's an ideal companion for parents on the go.



The Momcozy Portable Milk Warmer, designed for convenience and portability.

Larger Capacity For Multiple Babies

17
oz



The warmer's compact design makes it suitable for use in cars, bags, airplanes, and during outdoor activities like camping.

2. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using the Momcozy Portable Milk Warmer. Failure to follow these safety guidelines may result in injury or damage to the product.

- **Do not immerse the main unit in water or other liquids.** The electronic base is not waterproof.
- Ensure the charging port cover is securely closed before cleaning or if liquid is inside.
- Keep out of reach of children. This is not a toy.
- Always check the temperature of the milk/water before feeding your baby.
- Use only the provided charging cable and adapter.
- Do not use if the product is damaged.
- Avoid overheating milk, especially breast milk, as it can destroy nutrients.

3. PRODUCT COMPONENTS

The Momcozy Portable Milk Warmer package includes the following items:

- 1 x Portable Milk & Water Warmer (Main Unit)
- 1 x 36W Super-fast Charger
- 1 x USB Cable




What's in the Box: Portable milk & water warmer, 36W Super-fast charger, and USB Cable.

4. SETUP AND FIRST USE

4.1 Initial Charging

Before first use, fully charge the warmer. It takes approximately 1.5 hours for a full charge using the provided 36W fast charger.

1. Connect the USB cable to the charging port on the base of the warmer.
2. Plug the adapter into a power outlet.
3. The display will show the charging progress.

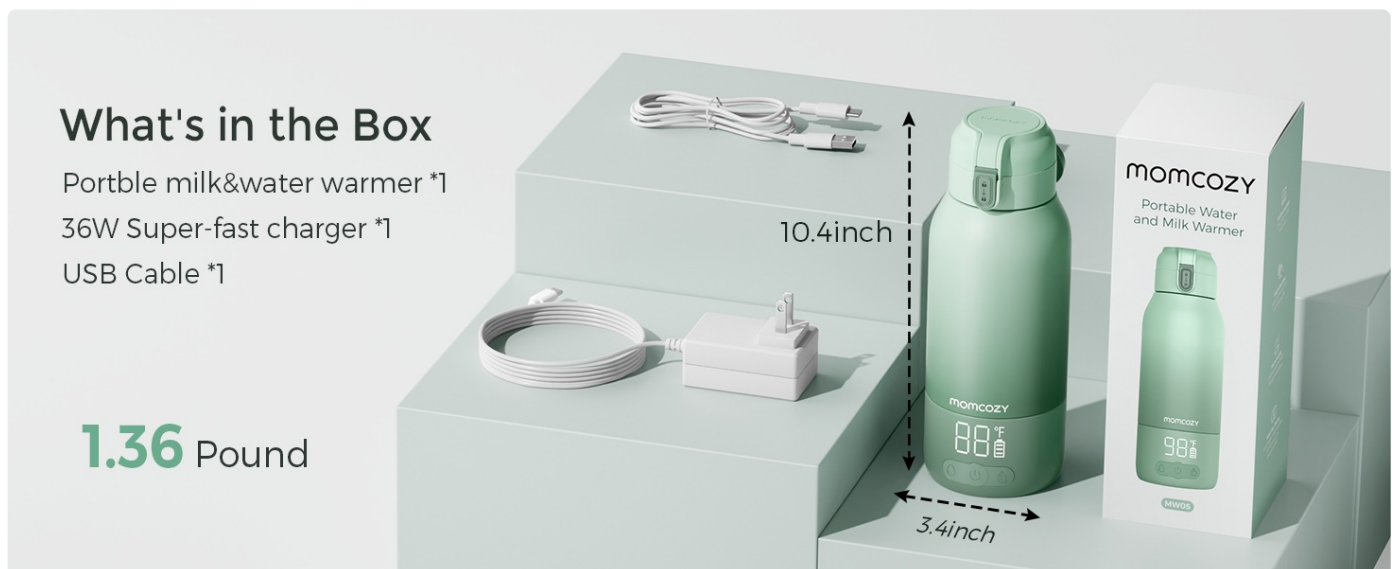

Charge your warmer using the provided 36W fast charger for optimal performance.

4.2 Initial Cleaning

Clean the warmer before its first use. Refer to the

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

How do I safely dispose of my broken Momcozy MW05 Portable Milk Warmer?

Because the Momcozy MW05 Portable Milk Warmer contains an integrated rechargeable battery and electronic components, it should not be disposed of in regular household trash. Proper disposal is important for environmental safety.Follow these steps...

[Read full answer](#)