

[manuals.plus](#) /

- › [Beautiful by Drew Barrymore](#) /
- › [Beautiful by Drew Barrymore 6 Qt Programmable Slow Cooker \(Model Beauti-19163\) Instruction Manual](#)

Beautiful by Drew Barrymore Beauti-19163

Beautiful by Drew Barrymore 6 Qt Programmable Slow Cooker

MODEL: BEAUTI-19163

Product Overview

The Beautiful by Drew Barrymore 6 Qt Programmable Slow Cooker is designed for convenient and efficient slow cooking. It features a large 6-quart capacity, suitable for serving up to 7 people, and a touch-activated display that illuminates only when in use. This appliance combines elegant design with practical functionality, making it a valuable addition to any kitchen.

Key features include 5 preset slow cooking functions (Meat, Poultry, Stew, Soup, and Chili), a programmable digital countdown timer for up to 24 hours, and an automatic 'keep warm' function. The removable cooking pot and tempered glass lid are dishwasher-safe for easy cleaning. For added convenience, it includes a stainless-steel lid rest and cool-touch handles for safe portability.

Components

Familiarize yourself with the various parts of your slow cooker:

- **Tempered Glass Lid:** Allows you to monitor cooking progress without releasing heat.
- **Lid Rest:** A convenient stainless-steel holder to keep the lid off your countertop while serving or stirring.
- **Removable Ceramic Pot:** The inner cooking vessel, designed for even heat distribution and easy serving.
- **Cool-Touch Handles:** Ergonomically designed handles on the main unit for safe transport.
- **Flat Screen Control Panel:** Touch-activated digital display for setting cooking functions and time.



Image: Exploded view of the Beautiful by Drew Barrymore Slow Cooker, showing the tempered glass lid, lid rest, removable ceramic pot, cool-touch handles, and flat screen control panel.

Setup

- Unpack:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.
- Clean Before First Use:** Wash the removable ceramic pot and tempered glass lid in warm, soapy water or in the dishwasher. Wipe the exterior of the main unit with a damp cloth. Ensure all parts are completely dry before assembly.
- Assemble:** Place the ceramic pot securely into the heating base. Position the tempered glass lid on top of the ceramic pot.
- Placement:** Place the slow cooker on a flat, stable, heat-resistant surface, away from walls or cabinets to allow for proper ventilation.
- Connect Power:** Plug the power cord into a standard 220-volt electrical outlet. The touch-activated display will illuminate.

Operating Instructions

The slow cooker features an intuitive touch-activated control panel for easy operation.



Image: The Beautiful by Drew Barrymore Slow Cooker, highlighting the digital control panel, cool-touch handles, and the stainless steel lid rest.

- 1. Power On:** Touch the power symbol (U) on the control panel to turn the unit on.
- 2. Select Mode:** Press the 'Mode' button to cycle through the 5 preset cooking functions: Meat, Poultry, Stew, Soup, and Chili. Each mode has a default cooking time and temperature setting.
- 3. Adjust Time:** Use the '+' and '-' buttons to adjust the cooking time in 30-minute increments, up to a maximum of 24 hours.
- 4. Start Cooking:** Once the desired mode and time are set, the slow cooker will automatically begin the cooking process.
- 5. Keep Warm Function:** After the set cooking time has elapsed, the slow cooker will automatically switch to a 'Keep Warm' setting to maintain food temperature without overcooking.
- 6. Using the Lid Rest:** When stirring or serving, place the tempered glass lid into the stainless-steel lid rest to keep condensation and food drips off your countertop.
- 7. Power Off:** To turn off the slow cooker, press and hold the power symbol (U) until the display turns off. Unplug the unit from the electrical outlet when not in use.

Maintenance and Cleaning

Proper maintenance ensures the longevity and optimal performance of your slow cooker.

- **Always Unplug:** Before cleaning, always ensure the slow cooker is unplugged and completely cooled.
- **Dishwasher Safe Parts:** The removable ceramic pot and tempered glass lid are dishwasher-safe for convenient cleaning.
- **Hand Washing:** If hand washing, use warm, soapy water and a non-abrasive sponge or cloth. Rinse thoroughly and dry completely.
- **Exterior Cleaning:** Wipe the exterior of the heating base with a damp cloth. Do not immerse the heating base in water or any other liquid.
- **Avoid Abrasives:** Do not use abrasive cleaners, scouring pads, or harsh chemicals on any part of the slow cooker, as this may damage the finish or non-stick coating.

Troubleshooting

If you encounter any issues with your slow cooker, please refer to the following common solutions:

Problem	Possible Cause	Solution
Unit does not power on.	Not plugged in or power outlet is faulty.	Ensure the unit is securely plugged into a working electrical outlet. Test the outlet with another appliance.
Food is not cooking properly.	Incorrect setting or insufficient cooking time.	Verify that the correct cooking mode and time have been selected. Adjust time as needed for your recipe. Ensure the lid is properly seated.
Display is not visible.	Unit is off or in standby mode.	Touch the power symbol to activate the display. The display illuminates only when needed.

Specifications

- **Brand:** Beautiful by Drew Barrymore
- **Model Number:** Beuti-19163
- **Capacity:** 6 Quarts
- **Color:** Black Sesame
- **Material:** Ceramic, Stainless Steel, Tempered Glass
- **Product Dimensions:** 11.22"D x 11.92"W x 17.16"H
- **Wattage:** 210 watts
- **Voltage:** 220 Volts
- **Control Method:** Touchpad
- **Number of Settings:** 5 preset functions
- **Dishwasher Safe:** Yes (removable pot and lid)
- **Item Weight:** 14 Pounds

Warranty and Support

For warranty information or customer support, please refer to the documentation included with your

product or contact the manufacturer directly. Keep your purchase receipt as proof of purchase for any warranty claims.

© 2024 Beautiful by Drew Barrymore. All rights reserved.