

Saved from manuals.plus.

Open the live page for links to other documents and user manuals.

[Manuals.plus](#) /

› [ECONTROLLY](#) /

› ECONTROLLY AA59-00639A Replacement Remote Control User Manual

ECONTROLLY AA59-00639A

ECONTROLLY AA59-00639A Replacement Remote Control User Manual

For Samsung Smart TV Models

INTRODUCTION

This manual provides essential information for the proper setup, operation, and maintenance of your ECONTROLLY AA59-00639A replacement remote control. This remote is designed to be compatible with a wide range of Samsung Smart TV models, offering a direct replacement experience without the need for complex programming.



Image: Angled view of the ECONTROLLY AA59-00639A replacement remote control, showcasing its button layout and ergonomic design.

SETUP

Battery Installation

To begin using your remote control, you must first install the batteries. This remote requires two (2) AAA batteries.

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover downwards to remove it.
3. Insert two AAA batteries, ensuring that the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

Once batteries are installed, the remote is ready for use with compatible Samsung Smart TVs without any additional

programming.





Image: The back of the remote control with the battery cover removed, showing the two AAA battery slots.

OPERATING INSTRUCTIONS

The ECONTROLLY AA59-00639A remote control is designed for intuitive operation. Simply point the remote towards your Samsung Smart TV and press the desired button. No programming or pairing is required.





Image: Front view of the ECONTROLLY AA59-00639A remote control, displaying all buttons including power, source, number pad, volume, channel, menu, guide, and playback controls.

Key Functions:

- **Power ()**: Turns the TV on or off.
- **Source**: Selects the input source (e.g., HDMI 1, AV).
- **Number Pad (0-9)**: Directly enters channel numbers.
- **Volume (+/-)**: Adjusts the volume level.
- **Mute**: Silences the TV audio.
- **Channel (CH +/-)**: Changes TV channels.
- **Menu**: Accesses the TV's main menu.
- **Guide**: Displays the electronic program guide.
- **Navigation Buttons (Up, Down, Left, Right, OK)**: Navigates through menus and confirms selections.
- **Return/Back**: Returns to the previous screen or menu.
- **Exit**: Exits the current menu or application.
- **Colored Buttons (A, B, C, D)**: Performs specific functions depending on the TV's context or application.
- **Playback Controls (Play, Pause, Stop, Rewind, Fast Forward)**: Controls media playback.

COMPATIBILITY

This ECONTROLLY AA59-00639A replacement remote control is compatible with numerous Samsung Smart TV models, including but not limited to:

- UE40ES7000U, UE40ES7005U, UE40ES7080U, UE40ES7090S, UE40ES7500S, UE40ES7507U, UE40ES8000S,

- UE40ES8000U, UE40ES8005U, UE40ES8007U, UE40ES8080U, UE40ES8090S
- UE46ES7000S, UE46ES7000U, UE46ES7005U, UE46ES7080U, UE46ES7090S, UE46ES7500S, UE46ES7507U, UE46ES8000S, UE46ES8000U, UE46ES8005U, UE46ES8007U, UE46ES8080U, UE46ES8090S
 - UE55ES7000S, UE55ES7000U, UE55ES7005U, UE55ES7080U, UE55ES7090S, UE55ES7500S, UE55ES7507U, UE55ES8000S, UE55ES8000U, UE55ES8005U, UE55ES8007U, UE55ES8080U, UE55ES8090S, UE55ES8000SXXC
 - UE65ES8000S, UE65ES8000U

This remote also replaces models AA59-00638A and AA59-00637A.

MAINTENANCE

Proper care and maintenance will extend the life of your remote control.

- **Cleaning:** Use a soft, dry cloth to clean the remote's surface. Avoid using liquid cleaners or abrasive materials, as these can damage the remote.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type (AAA).
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage.
- **Environment:** Keep the remote away from extreme temperatures, direct sunlight, and moisture.

TROUBLESHOOTING

If you encounter issues with your remote control, please refer to the following common solutions:

- **Remote Not Responding:** Ensure the batteries are correctly installed with the correct polarity (+/-). Replace old batteries with new AAA batteries.
- **Intermittent Functionality:** Check for any obstructions between the remote control and the TV's infrared receiver. Ensure you are within the effective operating range (approximately 10 meters or 33 feet).
- **Specific Buttons Not Working:** This may indicate a dirty contact under the button. While not user-serviceable, ensure the remote is clean and free of debris. If the issue persists, consider replacing the remote.
- **No Programming Required:** Remember that this remote does not require any programming. If it's not working, the issue is likely with batteries, line of sight, or the TV's IR receiver.

SPECIFICATIONS

Feature	Detail
Model Number	AA59-00639A (ECO-AA59-00639A)
Brand	ECONTROLLY
Product Dimensions	5 x 1 x 0.25 inches
Item Weight	2.3 ounces
Batteries Required	2 x AAA batteries
Material	ABS Material
Transmitting Distance	Up to 10 meters (33 feet)

Feature	Detail
Special Feature	No Programming Required





Image: The back of the ECONTROLLY AA59-00639A remote control, showing its smooth, ergonomic design.

WARRANTY AND SUPPORT

Information regarding product warranty and customer support was not provided in the available product data. Please refer to the seller's policies or contact the retailer where the product was purchased for details on warranty coverage and support options.

© 2024 ECONTROLLY. All rights reserved. This manual is for informational purposes only.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

Open the live page

<https://manuals.plus/asin/B0DKJSR357>

More documents and user manuals: <https://manuals.plus/>