



Manuals.plus /

› Waver /

› Waver WP-140 Digital Piano Instruction Manual

Waver WP-140

Waver WP-140 Digital Piano

INSTRUCTION MANUAL

1. Introduction

Thank you for choosing the Waver WP-140 Digital Piano. This instrument is designed to provide a rich musical experience for both beginners and experienced musicians. Featuring 88 sensitive, graded hammer-action keys, a wide range of sounds, automatic rhythms, and versatile connectivity options, the WP-140 allows for diverse musical exploration and skill development. Please read this manual thoroughly to understand the piano's functions and ensure proper use and maintenance.

2. Safety Information

- **Power Supply:** Use only the provided USB-C power adapter. Ensure the voltage matches the requirements specified on the adapter.
- **Water and Moisture:** Do not expose the piano to water or excessive moisture. Avoid placing liquids near the instrument.
- **Heat Sources:** Keep the piano away from direct sunlight, radiators, or other heat sources.
- **Ventilation:** Ensure adequate ventilation around the instrument to prevent overheating.
- **Cleaning:** Disconnect the power before cleaning. Use a soft, dry cloth. Do not use liquid cleaners or aerosols.
- **Handling:** Handle the piano with care. Avoid dropping or subjecting it to strong impacts.
- **Servicing:** Do not attempt to repair the instrument yourself. Refer all servicing to qualified personnel.

3. Package Contents

Verify that all the following items are included in your package:

- 1 x Waver WP-140 Digital Piano
- 1 x Note Auxiliary Sticker
- 1 x USB-C Power Adapter
- 1 x User Manual (this document)

4. Product Overview

The Waver WP-140 is an 88-key digital piano crafted from wood, offering a realistic playing experience with its sensitive, graded hammer-action keys. It features a comprehensive sound library, automatic rhythms, and various connectivity options for enhanced musical versatility.



Figure 4.1: Waver WP-140 Digital Piano (stand not included).

4.1 Key Features

- **88 Sensitive Keys:** Graded hammer-action keys provide an authentic acoustic piano feel.
- **Extensive Sound Library:** Explore a wide range of high-quality sounds including pianos, organs, strings, and percussion.
- **Automatic Rhythms:** Play along with various pre-defined rhythms covering multiple musical genres.

- **Bluetooth Connectivity:** Wirelessly connect to smartphones, tablets, or computers for audio playback or learning applications.
- **USB-C Power Input:** Modern and convenient power connection.
- **Multiple Connections:** Includes USB, MIDI, Pedal, Sustain Pedal, Microphone, and two Headphone outputs.
- **Built-in Speaker:** Integrated speakers for immediate sound output.

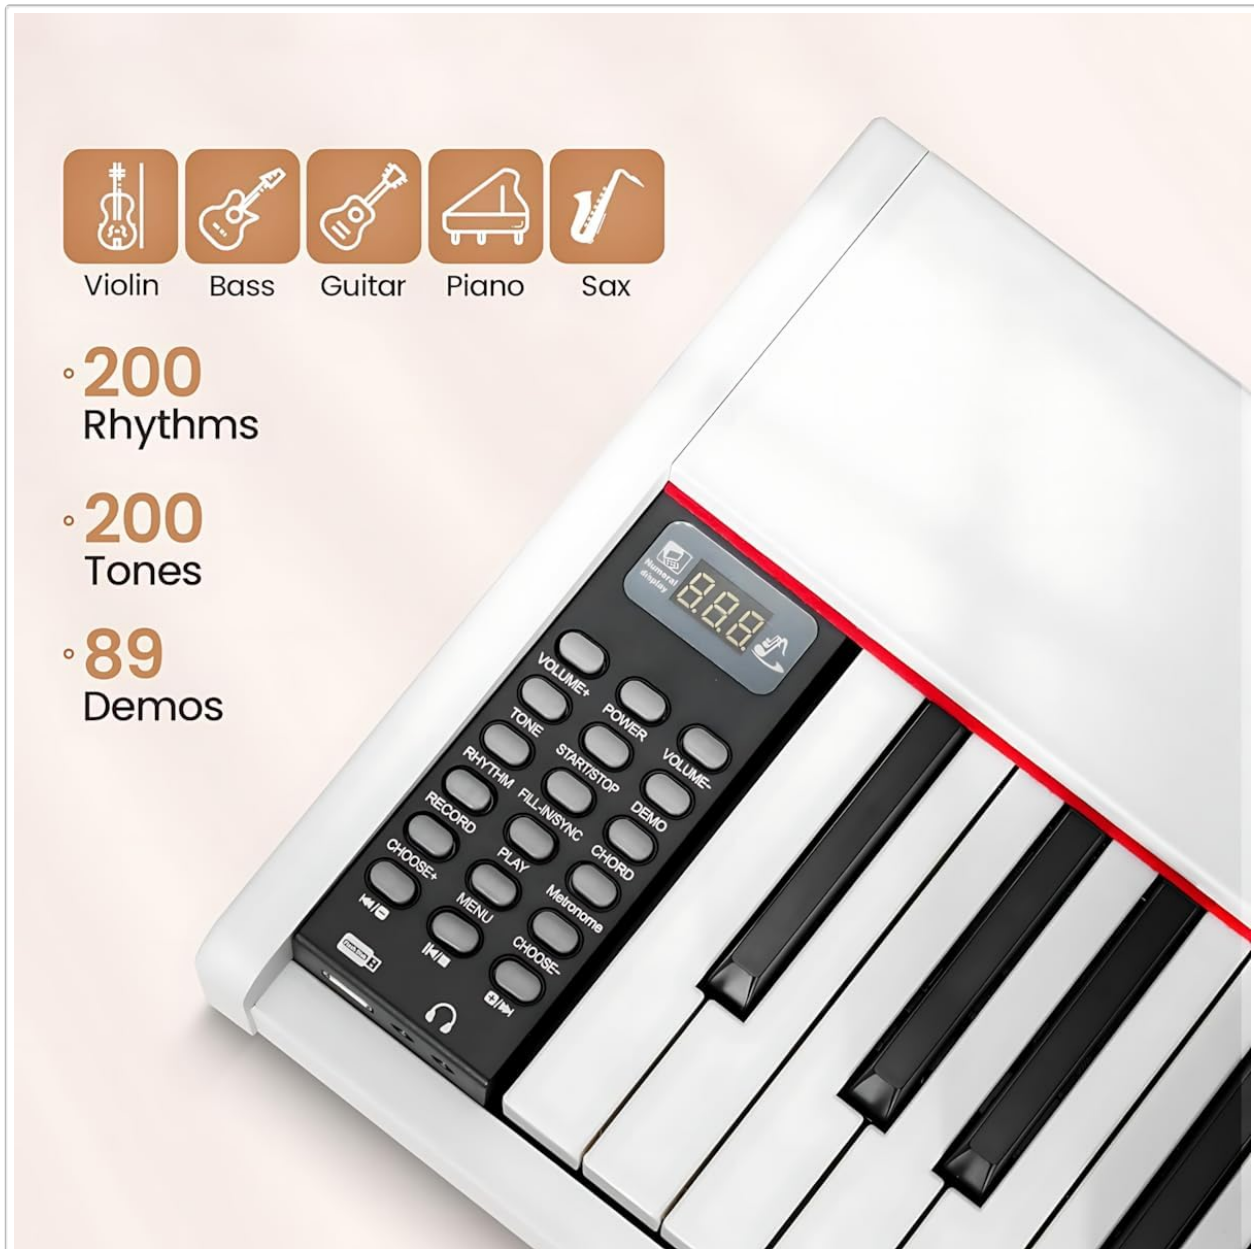


Figure 4.2: Overview of available rhythms, tones, and demo songs.

DO INICIANTE AO AVANÇADO TODOS PODEMOS NOS ENCONTRAR

PODE SER USADO POR ADULTOS E CRIANÇAS



TOQUE PESADO
DE TECLADO



CONEXÃO
HEADSET



EFEITO SONORO
DE PIANO



CONEXÃO
BLUETOOTH



VERDADEIRO
TIMBRE



TREINAMENTO
PROFISSIONAL

Figure 4.3: Additional key features of the WP-140 Digital Piano.

4.2 Control Panel

The control panel is located on the top left of the piano, providing access to all primary functions. It includes buttons for power, volume, tone selection, rhythm control, recording, and more.



Figure 4.4: Main control panel layout.

4.3 Connections

The rear panel of the piano features various ports for external devices, including power, pedals, MIDI, USB, microphone, and headphones.

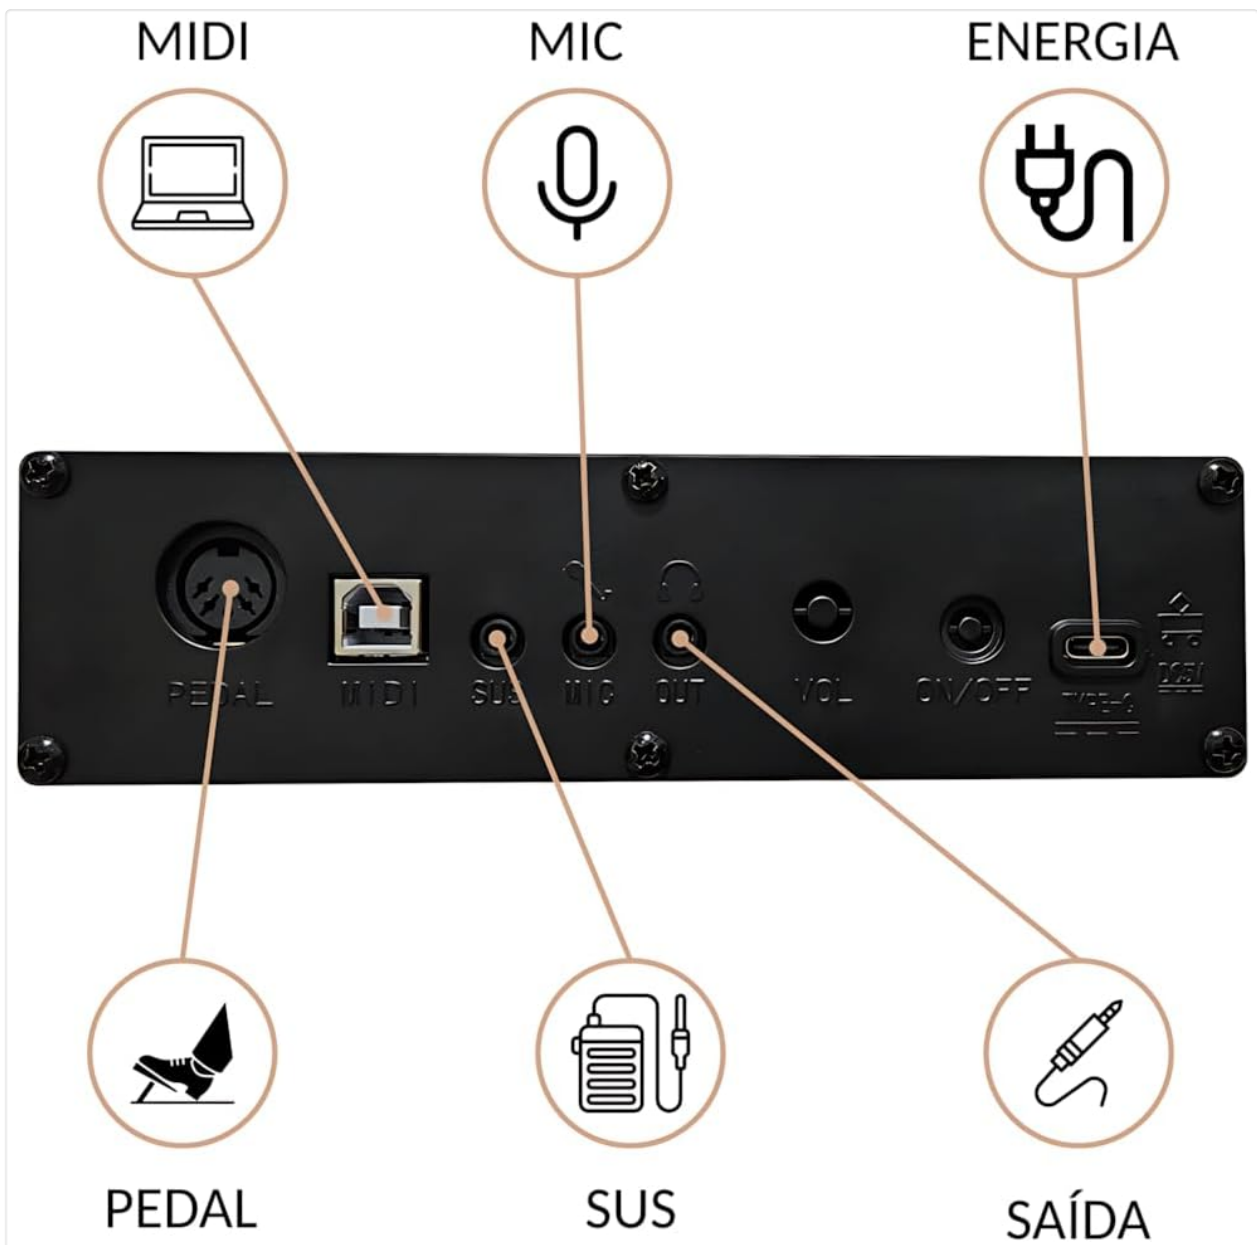


Figure 4.5: Rear panel connections.

5. Setup

5.1 Unpacking

1. Carefully remove the piano and all accessories from the packaging.
2. Place the piano on a stable, flat surface. Ensure there is enough space for comfortable playing.
3. Retain the packaging for future transport or storage.

5.2 Power Connection

1. Connect the provided USB-C power adapter to the 'ENERGY' (USB-C) port on the rear panel of the piano.
2. Plug the adapter into a standard electrical outlet.

5.3 Connecting Accessories

- **Pedals:** Connect a sustain pedal to the 'PEDAL SUSTAIN' port and an expression pedal (if applicable) to the 'PEDAL' port.

- **Headphones:** For private practice, connect headphones to either of the two headphone jacks on the rear panel.
- **Microphone:** Connect a microphone to the 'MICROPHONE' input for vocal accompaniment.
- **USB/MIDI:** Use the USB or MIDI ports to connect to a computer or other MIDI devices for recording or advanced control.

6. Operating Instructions

6.1 Power On/Off

Press the **POWER** button on the control panel to turn the piano on or off. The digital display will illuminate when the piano is on.

6.2 Adjusting Volume

Use the **VOLUME +/-** buttons to increase or decrease the overall sound output.

6.3 Selecting Tones

1. Press the **TONE** button. The display will show the current tone number.
2. Use the **CHOOSE +/-** buttons to scroll through the available tones.
3. Press **TONE** again or wait a few seconds for the selection to be confirmed.

6.4 Using Rhythms

1. Press the **RHYTHM** button.
2. Use the **CHOOSE +/-** buttons to select a rhythm.
3. Press **START/STOP** to begin or end the rhythm playback.
4. Use **FILL-IN/SYNC** for rhythm variations or synchronization.

6.5 Demo Songs

Press the **DEMO** button to play through the built-in demonstration songs. Press it again to stop.

6.6 Recording and Playback

1. Press the **RECORD** button to start recording your performance.
2. Play your desired piece.
3. Press **RECORD** again to stop recording.
4. Press the **PLAY** button to listen to your recorded performance.

6.7 Metronome

Press the **METRONOME** button to activate the metronome. Press it again to turn it off.

6.8 Bluetooth Connectivity

1. Press the **BLUETOOTH/MP3 MODE** button to activate Bluetooth pairing mode.
2. On your external device (smartphone, tablet), search for available Bluetooth devices and select "Waver WP-140".
3. Once paired, you can stream audio from your device through the piano's speakers or use musical learning applications.

7. Maintenance

7.1 Cleaning

- Always disconnect the power adapter before cleaning.
- Use a soft, dry, lint-free cloth to wipe the surface of the piano.
- For stubborn dirt, slightly dampen the cloth with water, then wipe dry immediately.
- Do not use abrasive cleaners, waxes, or solvents, as these can damage the finish.

7.2 Storage

- When not in use for extended periods, store the piano in a cool, dry place, away from direct sunlight and extreme temperatures.
- Cover the piano with a dust cover to protect it from dust and dirt.

8. Troubleshooting

Problem	Possible Cause	Solution
No power	Power adapter not connected or faulty outlet.	Ensure the power adapter is securely connected to the piano and a working electrical outlet.
No sound	Volume too low; headphones connected; external speakers not connected or off.	Increase volume. Disconnect headphones. Check external speaker connections and power.
Keys not responding	Instrument may be in a specific mode (e.g., demo mode).	Restart the piano. Ensure no specific mode is active.
Bluetooth connection issues	Device too far; piano not in pairing mode; interference.	Ensure devices are close. Activate Bluetooth pairing mode on piano. Restart both devices.
Difficulty selecting specific tones	Scrolling through many tones with CHOOSE +/- buttons can be time-consuming.	While there is no rotary knob, familiarize yourself with frequently used tone numbers for quicker selection using the CHOOSE +/- buttons.

9. Specifications

Feature	Detail
Model Number	WP-140
Brand	Waver
Number of Keys	88
Key Action Type	Graded Hammer Action
Polyphony	64
Material Type	Wood
Color	White
Product Dimensions (D x W x H)	35 cm x 140 cm x 13 cm
Product Weight	9.3 Kilograms
Finish Type	Painted
Connectivity Technology	USB, Bluetooth
Connector Type	USB Type A, USB Type C, MIDI, Pedal, Microphone, Headphone (x2)
Power Source	Wired Electric (USB-C)
Special Features	Built-in speaker, Sound boost

10. Warranty and Support

10.1 Warranty Information

The Waver WP-140 Digital Piano comes with a **6-month warranty** covering manufacturing defects from the date of purchase. This warranty does not cover damage resulting from misuse, accidents, unauthorized modifications, or normal wear and tear. Please retain your proof of purchase for warranty claims.

10.2 Customer Support

For technical assistance, warranty claims, or any questions regarding your Waver WP-140 Digital Piano, please contact Waver customer support through the retailer where you purchased the product or visit the official Waver website for contact information.