

[Manuals.plus](#) /

› [Genérico](#) /

› A7 Pro Wireless Bluetooth Earbuds User Manual

Genérico A7 Pro

A7 Pro Wireless Bluetooth Earbuds User Manual

Model: A7 Pro | Brand: Genérico

INTRODUCTION

This manual provides instructions for the safe and effective use of your A7 Pro Wireless Bluetooth Earbuds. Please read this manual thoroughly before using the product and retain it for future reference.

Package Contents

- A7 Pro Wireless Bluetooth Earbuds (Left and Right)
- Charging Case
- USB Charging Cable
- User Manual
- Protective Cover



Image: The A7 Pro Wireless Bluetooth Earbuds are shown inside their open white charging case. A small green indicator light is visible on the front of the case, suggesting power or charging status. The earbuds themselves are white and have an in-ear design.

SETUP AND FIRST USE

1. Charging the Earbuds and Case

Before first use, ensure both the earbuds and the charging case are fully charged. Place the earbuds into the charging case. Connect the provided USB charging cable to the charging port on the case and to a compatible USB power source.

- The indicator light on the charging case will show charging status.
- A full charge typically takes approximately 1-2 hours.



Image: The white A7 Pro charging case, with earbuds inside, rests on a dark laptop keyboard. The laptop screen in the background displays a vibrant, blurred image of city lights at night, suggesting a modern usage environment.

2. Pairing with a Device

1. **Enable Bluetooth:** Ensure Bluetooth is enabled on your smartphone, tablet, or other compatible device.
2. **Open Case:** Open the charging case. The earbuds will automatically enter pairing mode.
3. **Select Device:** On your device's Bluetooth settings, search for "A7 Pro" (or similar name) in the list of available devices and select it to connect.
4. **Confirmation:** Once connected, a voice prompt or indicator light on the earbuds will confirm successful pairing.

The earbuds will automatically reconnect to the last paired device when taken out of the case, if Bluetooth is enabled on the device.

Wearing the Earbuds

Gently insert the earbuds into your ears, ensuring a comfortable and secure fit. Adjust them until the sound quality is optimal and they feel stable.



Image: A collage showing four different individuals using the A7 Pro earbuds during various activities. These include a person running on a treadmill, a person driving a car, a person skateboarding, and a person working at a desk. A close-up inset shows an earbud properly seated in an ear, highlighting the in-ear design.

Touch Controls

The A7 Pro earbuds feature intuitive touch controls on each earbud. The specific functions may vary slightly depending on your device and operating system.

- **Single Tap:** Play/Pause music, Answer/End call.
- **Double Tap (Left Earbud):** Previous track.

- **Double Tap (Right Earbud):** Next track.
- **Triple Tap:** Activate voice assistant (e.g., Siri).
- **Long Press (Left/Right Earbud):** Toggle Active Noise Cancellation (ANC) / Transparency Mode.
- **Long Press (during call):** Reject incoming call.

Active Noise Cancellation (ANC)

The earbuds are equipped with active noise cancellation technology to reduce ambient noise, providing a more immersive listening experience. Use the touch controls to switch between ANC, Transparency Mode (allowing you to hear your surroundings), and standard mode.

MAINTENANCE AND CARE

Cleaning

- Use a soft, dry, lint-free cloth to clean the earbuds and charging case.
- Do not use abrasive cleaners, alcohol, or chemical solvents.
- Regularly clean the ear tips and speaker mesh to prevent wax buildup, which can affect sound quality.

Storage

When not in use, always store the earbuds in their charging case to protect them from damage and to keep them charged.



Image: A hand is shown carefully placing the white A7 Pro earbud charging case into the side pocket of dark athletic pants, demonstrating the product's portability and ease of storage.

Water Resistance

The A7 Pro earbuds are rated IPX4 water-resistant, meaning they are protected against splashing water from any direction. This makes them suitable for workouts and light rain. They are not designed for swimming or submersion in water.

TROUBLESHOOTING

Problem	Possible Solution
---------	-------------------

Problem	Possible Solution
Earbuds not pairing	• Ensure earbuds are charged. • Turn off and on Bluetooth on your device. • Forget "A7 Pro" from your device's Bluetooth list and try pairing again. • Place earbuds back in case, close, wait 5 seconds, then open again to re-enter pairing mode.
No sound from one earbud	• Ensure both earbuds are charged. • Try resetting the earbuds (refer to manufacturer's specific reset instructions if available, otherwise re-pair). • Clean any debris from the earbud's speaker mesh.
Poor sound quality	• Ensure earbuds are fully charged. • Check for obstructions in the earbud's speaker mesh. • Ensure your device is within the Bluetooth range (up to 15 meters). • Try different ear tip sizes for a better seal.
Earbuds not charging	• Ensure the charging cable is securely connected to both the case and the power source. • Try a different USB cable or power adapter. • Clean the charging contacts on both the earbuds and inside the case.

PRODUCT SPECIFICATIONS

Feature	Detail
Model Name	A7 Pro
Brand	Genérico
Connectivity Technology	Wireless (Bluetooth 5.3)
Wireless Communication Technology	Bluetooth
Sound Features	HiFi Stereo Sound, Active Noise Cancellation, Surround Sound, 13mm Dynamic Drivers, SBC/AAC HD Decoding
Microphone	4 HD Microphones

Feature	Detail
Battery Life	Up to 48 hours (with charging case)
Control Method	Touch Control, Siri Voice Control
Water Resistance Level	IPX4 (Splash-proof)
Compatible Devices	Android, iOS (iPhone), MacOS, Cell Phones
Recommended Uses	Exercise, Video Games, Music, Sports, Travel
Impedance	32 ohms
Components Included	Protective Cover, Cable



Image: A detailed diagram showcasing the Bluetooth 5.3 chip technology. It highlights key features such as a 15-meter signal range, stable Bluetooth connectivity, and low latency, depicted with corresponding icons and text.

IPX8 WATERPROOF DESIGN



Unique earhook design



The best choice for sports, jogging or fitness exercises.



With ergonomic design, the wireless headphones fit your ears firmly.



Not easy to hurt the ear and not easy to fall off.



Image: An exploded view diagram illustrating the internal components and features contributing to the Hi-Fi Stereo Sound. Icons represent ENC Noise Cancelling, Dual Channel Transmission, SBC/AAC HD Decoding, and 13mm Dynamic Drivers.

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your purchase or contact the retailer. Keep your proof of purchase for any warranty claims.

For further assistance or technical inquiries, please visit the manufacturer's website or contact their customer service department.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

Why does the sound cut out alternately between the left and right Genérico A7 Pro earbuds?

If your Genérico A7 Pro earbuds are cutting out alternately (one side stops and then starts again), it usually indicates a Bluetooth interference or synchronization issue. Please try the following troubleshooting steps: Reset the Connection:...

[Read full answer](#)

How do I use the touch controls on the back of the Genérico A7 Pro earbuds?

The Genérico A7 Pro earbuds use touch-sensitive controls located on the back (outer surface) of each earbud. Here is how to use them: Single Tap (Either Earbud): Play or pause music, and answer or end...

[Read full answer](#)

How can I tell the difference between charging and fully charged on the Genérico A7 Pro earbuds?

Based on the Genérico A7 Pro manual and common behavior for this model, here is how to distinguish the charging status: Charging Status: The indicator light on the charging case will show that charging is...

[Read full answer](#)