

MOSTRUST YS-805C

MOSTRUST Digital Simple Stopwatch Timer User Manual

Model: YS-805C

1. INTRODUCTION

Thank you for choosing the MOSTRUST Digital Simple Stopwatch Timer. This device is designed for accurate timekeeping in various activities, including sports, training, and everyday use. It features both stopwatch and countdown timer functions, an easy-to-read display, and a user-friendly interface. Please read this manual carefully to ensure proper use and maintenance of your stopwatch.

 


Image 1.1: Front view of the MOSTRUST Digital Simple Stopwatch Timer (Model YS-805C) in yellow, showing the display and control buttons.

2. PRODUCT FEATURES

- **Ergonomic Design:** Comfortable and flexible to hold, suitable for kids, students, and coaches.
- **Countdown Function:** Maximum countdown time up to 9 hours, 59 minutes, 59 seconds.
- **Single Split/Lap:** Measures single lap and split events up to 9 hours, 59 minutes, 59 seconds.
- **Easy to Use:** Simple 3-button operation for stopwatch and countdown functions. Displays minutes, seconds, and 1/100th seconds.
- **On/Off with AAA Battery:** Powered by one standard AAA battery (included), with a convenient on/off function to conserve power.



Image 2.1: Visual representation of the stopwatch's key modes and features, including stopwatch mode, countdown mode, ON/OFF function, and large display.

3. PACKAGE CONTENTS

Please check the package for the following items:

- 1 x MOSTRUST Digital Simple Stopwatch Timer (Model YS-805C)
- 1 x AAA Battery
- 1 x Lanyard (neck strap)

4. SETUP

4.1. Battery Installation

1. Locate the battery compartment cover on the back of the stopwatch.
2. Gently slide the cover downwards to open the compartment.
3. Insert one AAA battery, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.



Image 4.1: Illustration of the battery compartment on the back of the stopwatch and how to insert the AAA battery.

4.2. Initial Power On/Off

To turn the stopwatch on or off, press and hold the **ON/OFF** button for approximately 5 seconds. The display will illuminate when powered on and turn off when powered off.

 


Image 4.2: Demonstrates the ON/OFF function by showing the stopwatch display turning on and off.

5. OPERATING INSTRUCTIONS

5.1. Button Functions

- **MODE / ON/OFF:** Switches between stopwatch and countdown modes. Press and hold for 5 seconds to turn the device on/off.
- **SPLIT / RESET:** In stopwatch mode, records split times. In stopwatch or countdown mode, resets the timer when stopped.
- **START / STOP:** Starts or stops the timer in both stopwatch and countdown modes.

5.2. Stopwatch Mode

1. Ensure the stopwatch is powered on. If not, press and hold the **MODE / ON/OFF** button for 5 seconds.
2. Press the **MODE / ON/OFF** button to cycle until "STOPWATCH" is displayed.
3. Press **START / STOP** to begin timing.
4. To record a split time, press **SPLIT / RESET** while the stopwatch is running. The display will momentarily show the split time before returning to the running total.
5. Press **START / STOP** again to pause the timer.
6. To resume timing, press **START / STOP**.

- To reset the stopwatch to zero, press **SPLIT / RESET** while the timer is stopped.

5.3. Countdown Timer Mode

- Ensure the stopwatch is powered on.
- Press the **MODE / ON/OFF** button to cycle until "TIMER" or "COUNTDOWN" is displayed.
- To set the countdown time, press **SPLIT / RESET** to enter setting mode. The digits will flash.
- Use **START / STOP** to adjust the value of the flashing digit (hours, minutes, seconds). Press **MODE / ON/OFF** to move to the next digit.
- Once the desired time is set, press **SPLIT / RESET** to confirm and exit setting mode.
- Press **START / STOP** to begin the countdown.
- Press **START / STOP** again to pause the countdown.
- To resume, press **START / STOP**.
- To reset the countdown timer to the last set time, press **SPLIT / RESET** while the timer is stopped.



Image 5.1: The stopwatch display indicating "TIMER" mode, used for countdown functions.

6. MAINTENANCE

- Cleaning:** Wipe the stopwatch with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Battery Replacement:** Replace the AAA battery when the display becomes dim or the stopwatch stops functioning. Refer to Section 4.1 for battery installation instructions.
- Storage:** Store the stopwatch in a cool, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, remove the battery to prevent leakage.
- Water Resistance:** This stopwatch is not waterproof. Avoid exposing it to water or high humidity.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Stopwatch does not turn on.	Battery is dead or incorrectly installed.	Check battery orientation or replace with a new AAA battery. Ensure you hold the ON/OFF button for 5 seconds.
Display is dim or flickering.	Low battery power.	Replace the AAA battery.
Buttons are unresponsive.	Device might be frozen or battery issue.	Remove and reinsert the battery. If the issue persists, replace the battery.
Countdown timer does not start.	Time not set or not in countdown mode.	Ensure the timer is in countdown mode and a time has been set. Press START/STOP to begin.

8. SPECIFICATIONS

Attribute	Value
Model Number	YS-805C
Brand	MOSTRUST
Color	Yellow
Material	Plastic
Product Dimensions (L x W x H)	2.9"D x 0.7"W x 2.3"H (approx. 7.4cm D x 1.8cm W x 5.8cm H)
Item Weight	1.6 ounces (approx. 45 grams)
Power Source	1 x AAA Battery (Included)
Max Countdown Time	9 hours 59 minutes 59 seconds
Time Accuracy	1/100th of a second



Image 8.1: Visual representation of the stopwatch's approximate dimensions.

9. WARRANTY AND SUPPORT

MOSTRUST products are designed for reliability and performance. This product comes with a standard manufacturer's warranty against defects in materials and workmanship. For specific warranty details, please refer to the product packaging or contact your retailer.

If you encounter any issues or have questions regarding your MOSTRUST Digital Simple Stopwatch Timer, please contact our customer support. Provide your model number (YS-805C) and a detailed description of the issue for faster assistance.

Customer Support Contact: Please refer to the contact information provided with your purchase or on the official MOSTRUST website.