

GROWNEER GTS001-1P

GROWNEER Trimming Scissors with Teflon Coated Non-Stick Blades - Instruction Manual

Model: GTS001-1P

[Introduction](#) [Features](#) [Setup](#) [Operating](#)
[Instructions](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

Thank you for choosing GROWNEER Trimming Scissors. These precision gardening shears are designed for efficient and clean cuts, ensuring the health and vitality of your plants. With their durable Teflon-coated stainless steel blades and ergonomic design, they are suitable for a wide range of gardening tasks.

2. PRODUCT FEATURES

- **Sharp Teflon Blades:** Equipped with razor-sharp, non-stick, Teflon-coated stainless steel blades (60mm/2.36in) for precise, rust-free, and consistent cuts.
- **Ergonomic Design:** Features an ergonomic rubber grip for comfortable use over extended periods, reducing hand fatigue.
- **Easy Operation:** Designed without a spring for enhanced work efficiency. Ambidextrous design for both right and left-handed users.
- **Wide Application:** Ideal for various general pruning tasks, including harvesting, trimming vegetables, flowers, houseplants, hydroponics, bonsai, and other garden cutting needs.



Image: Basic information and dimensions of the GROWNEER Trimming Scissors. The scissors measure 7.2 inches in length and 3.2 inches in width, with a blade length of 2.4 inches. They feature rust-proof, stainless steel blades.

Teflon Non-Stick Blades



- Straight Blades
- Non-Stick Teflon Coating
- Sharp
- Stainless Steel Blades

Image: A close-up view highlighting the straight, non-stick Teflon-coated stainless steel blades of the GROWNEER Trimming Scissors.

3. SETUP

1. **Unpacking:** Carefully remove the trimming scissors from their packaging.
2. **Safety Cap:** Each pair of scissors comes with a rubber tip cap for safety. Remove this cap before use.
3. **Unlocking:** To open the scissors, gently squeeze the handles together and then pull the safety switch downwards. This will release the blades, allowing them to open.
4. **Inspection:** Before first use, inspect the blades for any damage and ensure they open and close smoothly.

Your browser does not support the video tag.

Video: A user demonstrates how to unlock and use the GROWNEER Trimming Scissors, highlighting the safety switch and the smooth operation of the blades for trimming flowers.

4. OPERATING INSTRUCTIONS

The GROWNEER Trimming Scissors are designed for precision and ease of use. Follow these steps for optimal performance:

1. **Grip:** Hold the scissors comfortably in your hand, utilizing the ergonomic rubber grips. The design accommodates both right and left-handed users.
2. **Positioning:** Carefully position the sharp, pointed blades around the stem or leaf you wish to cut. The fine tips allow for access into tight spaces.
3. **Cutting:** Apply gentle pressure to the handles to make a clean, precise cut. The non-stick Teflon coating helps prevent sap and debris buildup, ensuring smooth operation.
4. **Clean Cuts:** Always aim for a clean cut to minimize damage to the plant, which helps prevent diseases and promotes healthy growth.

Stainless Steel Precision Teflon Blades



Rust resistance



Precise cutting



High hardness



Easy to clean



Image: A hand using the GROWNEER Trimming Scissors to make a precise cut on a thin plant stem, demonstrating the fine tips for accurate trimming.

For Precise Cuts



Image: The GROWNEER Trimming Scissors being used to harvest oranges from a tree, illustrating their suitability for delicate fruit harvesting.

5. MAINTENANCE

Proper maintenance will extend the life and performance of your GROWNEER Trimming Scissors:

- **Cleaning:** After each use, wipe the blades clean with a damp cloth to remove sap, soil, and plant debris. The Teflon coating makes cleaning easy.
- **Drying:** Ensure the blades are completely dry before storing to prevent rust.
- **Lubrication:** Periodically apply a light coat of oil to the pivot point and blades to maintain smooth operation and prevent corrosion.
- **Storage:** Always engage the safety lock and replace the rubber tip cap before storing the scissors. Store them in a dry place, away from children and pets.
- **Sharpening:** While the stainless steel blades are designed to stay sharp, if they become dull over time, they can be sharpened using a fine-grit sharpening stone or a specialized blade sharpener.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Blades feel dull or do not cut cleanly.	Accumulated sap/debris, or blades require sharpening.	Clean blades thoroughly. If still dull, sharpen the blades as per maintenance instructions.
Blades stick together during use.	Sap or resin buildup on the blades.	Clean the blades immediately after use. Apply a small amount of lubricant to the pivot point.
Safety lock is difficult to engage/disengage.	Minor debris or lack of lubrication.	Clean the locking mechanism and apply a drop of lubricant if necessary.

7. SPECIFICATIONS

Attribute	Detail
Brand	GROWNEER
Model Number	GTS001-1P
Style	Trimming scissors
Product Dimensions	7.2"L x 3.2"W
Blade Material	Stainless Steel
Blade Coating	Teflon
Blade Length	2.36 Inches
Handle Material	Rubber
Hand Orientation	Ambidextrous
Item Weight	2.39 ounces

8. WARRANTY & SUPPORT

GROWNEER is committed to providing high-quality gardening tools. For any questions, concerns, or support needs regarding your trimming scissors, please contact our customer service team.

Customer Service Phone: 1 (855) 626-9888

Brand Store: [Visit the GROWNEER Store on Amazon](#)

Growneer

Image: GROWNEER company logo, representing the brand's commitment to gardening tools.



© 2026 GROWNEER. All rights reserved.