

[Manuals.plus](#) /

› [ELYKEN](#) /

› ELYKEN Laundry Cart with Wheels (Model HLC04) Instruction Manual

ELYKEN HLC04

ELYKEN Laundry Cart with Wheels (Model HLC04) Instruction Manual

Comprehensive guide for assembly, operation, and maintenance of your ELYKEN Laundry Cart.

PRODUCT OVERVIEW

The ELYKEN Laundry Cart with Wheels is designed to simplify laundry tasks. It features a sturdy metal frame, a removable liner bag, and four casters for easy mobility, two of which include brakes for stability. Its elevated design reduces the need for bending, and the collapsible frame allows for convenient storage.



Image: Fully assembled ELYKEN Laundry Cart in gray, containing folded laundry.

SPECIFICATIONS

Brand	ELYKEN
Model Number	HLC04

Product Dimensions	25.6"L x 22"W x 33"H
Material	Metal, Polycotton
Color	Gray
Item Weight	7.41 pounds (3.37 Kilograms)
Capacity	118 Liters (31.2 Gallons)
Special Features	Foldable, Removable Liner, Wheeled

ASSEMBLY INSTRUCTIONS

Follow these steps to assemble your ELYKEN Laundry Cart. All necessary tools are included.

Step 1: Assemble the Base Frame

1. Connect the curved metal tubes (A-1, A-2, B) to form the rectangular base. Ensure the holes align.
2. Secure the connections using the provided screws (K) and the Allen wrench.
3. Repeat for the second side of the base frame.

Ours



Durable Metal Universal Wheels

Others



Without Support Rod

Not Durable Plastic Material Wheels

Image: Close-up of metal tubes being connected with screws and an Allen wrench.

Step 2: Attach Support Rods

1. Insert the horizontal support rods (H-1, H-2, I) into the designated slots on the assembled base frames.
2. Secure these rods with the remaining screws (J) and the Allen wrench.



**Removabel
Linner Bag**
Easy to Attach/Remove



Unique Side Pocket for Separate Storage



Upgraded Velcro Design

Image: Illustration of the horizontal support rods being attached to the main frame.

Step 3: Install Casters

1. Insert the four casters (G) into the bottom ends of the frame legs.
2. Two of the casters have brakes; position these on the same side for easier access.



Image: Detail of a caster wheel with its 360-degree rotation and brake lever.

Step 4: Attach the Liner Bag

1. Drape the removable liner bag (F) over the assembled metal frame.
2. Ensure the bag's straps are securely hung on the hooks located on the frame to prevent slipping.
3. The liner bag features Velcro reinforcement for a snug fit and a side pocket for small items.

Collapsible Design

Save Space When Not in Use



Image: The removable liner bag showing its side pocket and Velcro closure.

Assembly Video Guide

For a visual guide, please watch the official assembly video below:

Your browser does not support the video tag.

Video: Official ELYKEN Laundry Cart assembly guide. This video demonstrates the step-by-step process of putting together the laundry cart, including connecting frame pieces, attaching support rods, installing wheels, and securing the liner bag.

OPERATING INSTRUCTIONS

- **Loading Laundry:** Place dirty clothes directly into the removable liner bag. The cart's 33-inch height is designed to reduce bending.
- **Moving the Cart:** The cart features four 360-degree rotating casters for smooth movement across various floor types. Gently push or pull the cart to transport laundry.
- **Braking:** Two of the casters are equipped with brakes. To lock the cart in place, press down on the brake levers. To release, lift the levers.

- **Collapsible Design:** When not in use, the cart can be folded flat for compact storage. To fold, release the locking mechanisms on the side supports and collapse the frame.



Image: The laundry cart in its folded, compact state, demonstrating its space-saving design.

MAINTENANCE

- **Liner Bag Cleaning:** The removable liner bag is made of high-quality, preshrunk, machine washable cotton. Remove the bag from the frame and wash according to standard fabric care instructions. Air dry or tumble dry on low heat.
- **Frame Cleaning:** Wipe the metal frame with a damp cloth and mild detergent as needed. Dry thoroughly to prevent rust.
- **Caster Maintenance:** Periodically check the casters for lint or debris and clean them to ensure smooth rolling.

TROUBLESHOOTING

- **Cart not rolling smoothly:** Check casters for tangled hair, lint, or debris and clean as necessary. Ensure brakes are disengaged.
- **Liner bag slipping off the frame:** Ensure the bag's straps are properly hooked onto the frame's designated hooks. Verify the Velcro reinforcement is securely fastened.

- **Frame feels unstable:** Double-check all screw connections to ensure they are tightened. Make sure the side support locking mechanisms are fully engaged when the cart is open.

WARRANTY AND SUPPORT

For warranty information, product support, or to purchase replacement parts, please visit the official ELYKEN store or contact ELYKEN customer service directly. Refer to your purchase documentation for specific warranty terms.

Return Policy: This product is eligible for returns for up to 2026 days from the date of purchase, as per the seller's policy.

[Visit the ELYKEN Store](#)

© 2025 ELYKEN. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DKN361P5>

More documents and user manuals: <https://manuals.plus/>