

- Manuals.plus /
- > [Gueray](#) /
 - > Gueray Y-CD-146 Multi-Function CD Player Instruction Manual

Gueray Y-CD-146

Gueray Y-CD-146 Multi-Function CD Player Instruction Manual

Model: Y-CD-146 | Brand: Gueray

1. INTRODUCTION

Thank you for purchasing the Gueray Y-CD-146 Multi-Function CD Player. This device combines a classic CD player with modern connectivity options, including Bluetooth 5.0, FM radio, USB, AUX, and SPDIF. It is designed for versatile audio playback and is suitable for various environments. Please read this manual carefully before use to ensure proper operation and to maximize your listening experience.

レトロな多機能CD プレーヤー



Image 1.1: The Gueray Y-CD-146 CD Player showcasing its multi-functional capabilities including Bluetooth, stereo speakers, AUX, SPDIF, FM radio, USB, A-B repeat, sleep mode, and remote control.

2. PACKAGE CONTENTS

Please check the package for the following items:

- Gueray Y-CD-146 CD Player
- AC Adapter
- Remote Control
- Instruction Manual (Japanese)

3. PRODUCT OVERVIEW

3.1 Front and Top View



Image 3.1: Diagram illustrating the player's components including the dust cover, tone arm, Bluetooth transmit button, skip/rewind/fast-forward buttons, pause, mode button (also volume control), laser element, speakers, and LED indicator lights.

3.2 Rear View (Ports)



Image 3.2: Diagram showing the rear ports: S/PDIF fiber output, headphone jack, AUX port, USB port, power port (DC 5V-2A), and power ON/OFF button.

4. SETUP

4.1 Power Connection

1. Connect the provided AC adapter to the power port (DC 5V-2A) on the rear of the CD player.
2. Plug the AC adapter into a standard wall outlet.
3. Slide the power ON/OFF button on the rear to the 'ON' position to power on the device.

4.2 Loading a CD

1. Gently lift the transparent dust cover.
2. Place the CD onto the spindle, ensuring it is centered and flat.
3. Close the dust cover.



Image 4.1: Visual guide for loading a CD into the player, demonstrating the open dust cover, placing the CD, and closing the cover.

5. OPERATING INSTRUCTIONS

5.1 Mode Selection

Press the 'Mode' button on the player or remote control to cycle through available modes: CD, Bluetooth (Receive), Bluetooth (Transmit), FM Radio, USB, AUX, SPDIF.

5.2 CD Playback

1. Ensure a CD is loaded (refer to Section 4.2).
2. Select 'CD' mode. The player will automatically begin playback.
3. Use the skip/rewind/fast-forward buttons to navigate tracks.
4. Press the pause button to pause/resume playback.

Supported CD formats include CD, CD-R, CD-RM, CD-G, MP3, WMA, WAV.



Image 5.1: Overview of supported audio formats (WAV, MP3, WMA, CD, CD-RM, CD-G, CD-R) and playback modes (sequential, single repeat, all repeat, A-B repeat, random play).

5.3 Bluetooth Mode (Receive & Transmit)

The device supports Bluetooth 5.0 for both receiving and transmitting audio.

5.3.1 Bluetooth Receive Mode

1. Select 'Bluetooth Receive' mode. The device will enter pairing mode.
2. On your smartphone, PC, or other Bluetooth-enabled device, search for 'Gueray Y-CD-146' and connect.
3. Once connected, audio from your external device will play through the CD player's speakers.

5.3.2 Bluetooth Transmit Mode

1. Select 'Bluetooth Transmit' mode.
2. Press the dedicated Bluetooth transmit button on the player.
3. Ensure your Bluetooth headphones or speaker are in pairing mode.
4. The CD player will connect to your external Bluetooth audio device, transmitting the currently playing audio (e.g., CD, FM radio).

プレーヤー の説明

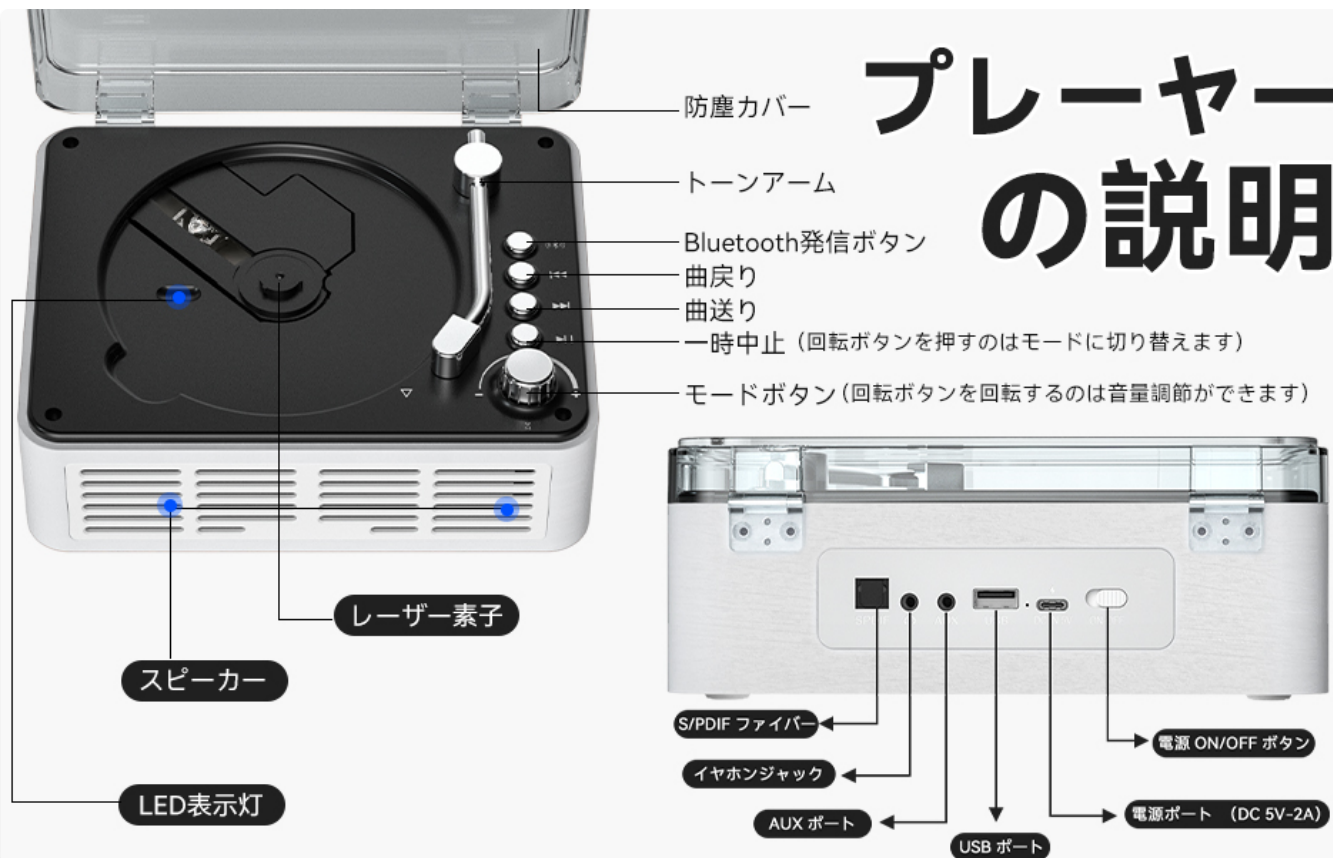


Image 5.2: Explanation of Bluetooth 5.0 functionality, showing the player receiving audio from a smartphone/PC and transmitting to wireless headphones/speakers.

5.4 FM Radio

1. Select 'FM Radio' mode.
2. The FM radio supports a wide frequency range from 76.0MHz to 108.0MHz.
3. Use the skip/rewind/fast-forward buttons to scan for stations. Long press to auto-scan.

FM76.0-108.0MHz



緊急放送



音樂番組



天氣予報



交通情報



Image 5.3: The FM radio function with a frequency range of 76.0-108.0MHz, suitable for receiving various broadcasts.

5.5 USB Playback

1. Insert a USB flash drive into the USB port on the rear.
2. Select 'USB' mode.
3. The player supports FAT16/FAT32 formatted USB drives and MP3/WMA audio files only. NTFS format is not supported.

5.6 AUX & SPDIF Mode

The player features AUX and SPDIF functions for external audio connections.

5.6.1 AUX Mode

1. Connect an external audio device (e.g., car audio, smartphone) to the AUX port using a 3.5mm AUX cable.
2. Select 'AUX' mode.
3. Audio from the external device will be played through the CD player.

5.6.2 SPDIF Mode

1. Connect an external audio device to the S/PDIF fiber output port.
2. Select 'SPDIF' mode.
3. This allows for high-quality digital audio transmission, minimizing sound degradation.

AUX&SPDIF機能付き

3.5mmAUXケーブルで、運転中も高音質の音楽を楽しめます



光ファイバ伝送で、音質の劣化を最小化を抑えます



Image 5.4: Demonstrates the AUX function for car audio connectivity and SPDIF for high-fidelity digital audio output to a home speaker system.

5.7 Remote Control Usage

The included remote control allows for convenient operation from a distance of up to 6 meters. Functions include:

- Mode switching
- Play/Pause
- Track navigation (skip forward/backward)
- Volume adjustment
- FM radio station search and playback

- Bluetooth transmit activation
- A-B Repeat function

5.8 Sleep Mode

The sleep mode function can be activated for a comfortable listening experience before sleep. Refer to the remote control instructions for activation.

5.9 A-B Repeat

The A-B repeat function allows you to repeat a specific segment of audio, which is particularly useful for language learning or music practice. Activate this function via the remote control.

6. MAINTENANCE

- Keep the device clean by wiping it with a soft, dry cloth.
- The transparent dust cover helps protect the laser lens and CD from dust. Ensure it is closed when not in use.
- Avoid exposing the device to extreme temperatures, direct sunlight, or high humidity.
- Do not attempt to disassemble or repair the device yourself. Contact customer support for assistance.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power adapter not connected; Power switch off	Ensure AC adapter is securely connected and plugged in; Turn power switch ON.
CD not playing	CD inserted incorrectly; Disc is dirty or scratched; Incorrect mode selected	Reinsert CD correctly; Clean or replace CD; Select 'CD' mode.
No sound	Volume too low; Mute activated; Incorrect output selected (e.g., headphones plugged in)	Increase volume; Deactivate mute; Check headphone jack.
Bluetooth pairing failed	Device not in pairing mode; External device too far; Interference	Ensure both devices are in pairing mode; Move devices closer; Reduce interference.
USB not recognized	Incorrect USB format; Unsupported audio file type	Ensure USB is FAT16/FAT32; Use MP3/WMA files.

8. SPECIFICATIONS

- **Brand:** Gueray
- **Model Name:** CD Player
- **Model Number:** Y-CD-146
- **Color:** White
- **Connectivity Technology:** AUX, Bluetooth 5.0, USB
- **Features:** A-B Repeat, Bluetooth v5.0 (Receive/Transmit), USB/FM/AUX, Built-in Stereo Speakers, Retro Design

- **Number of Discs:** 1
- **Supported Audio Formats:** CD-G, CD-R, CD-RM, MP3, WAV, WMA
- **Compatible Devices:** Smartphones, Tablets
- **Headphone Jack:** 3.5mm Jack
- **FM Radio Frequency:** 76.0MHz - 108.0MHz
- **Remote Control Range:** 6 meters
- **Power Input:** DC 5V-2A
- **Origin:** China

9. WARRANTY AND SUPPORT

9.1 Warranty Information

This Gueray CD Player comes with a **1-year manufacturer's warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

9.2 Customer Support

If you encounter any issues or have questions regarding your Gueray Y-CD-146 CD Player, please contact our customer support team. Refer to your purchase documentation or the seller's information for contact details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

Open the live page

<https://manuals.plus/asin/B0DKNSDLHM>

More documents and user manuals: <https://manuals.plus/>