

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Tupperware](#) /

› [Tupperware SuperSonic Chopper Compact User Manual](#)

Tupperware 179757

Tupperware SuperSonic Chopper Compact User Manual

Model: 179757



INTRODUCTION

Thank you for choosing the Tupperware SuperSonic Chopper Compact. This manual provides essential information for the safe and efficient operation, maintenance, and care of your new kitchen tool. Please read it thoroughly before first use and retain it for future reference.

IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using this appliance to reduce the risk of injury, including the following:

- **Blades are sharp:** Handle the blade assembly with extreme care. Always hold it by the plastic top.
- Keep fingers and utensils away from moving blades during operation.
- Do not overfill the container.
- Ensure the lid is securely locked in place before operating.
- This appliance is not intended for use by children. Keep out of reach of children.
- Do not use the chopper for purposes other than its intended use.
- Clean all parts thoroughly before first use and after each subsequent use.

PARTS AND COMPONENTS

The Tupperware SuperSonic Chopper Compact consists of the following main parts:

- **Container:** The transparent base for holding ingredients.
- **Blade Assembly:** Features ultra-sharp stainless steel blades for chopping.
- **Lid with Pull Cord Mechanism:** The top part with the integrated pull cord for manual operation.



Image: The Tupperware SuperSonic Chopper Compact, showing its main components: the red transparent container, the blade assembly inside, and the red lid with the white pull handle.

SETUP AND ASSEMBLY

- Clean Before First Use:** Wash all parts (container, blade assembly, and lid) with warm soapy water. Rinse thoroughly and dry completely.
- Insert Blade Assembly:** Carefully place the blade assembly onto the central pin inside the container. Ensure it sits firmly.
- Add Ingredients:** Place your desired ingredients into the container around the blade assembly. Do not fill above the maximum fill line or overfill to prevent jamming.
- Secure the Lid:** Place the lid onto the container, aligning the tabs on the lid with the grooves on the container. Twist the lid clockwise until it locks securely in place. The anti-skid bottom of the container will help keep it stable on your countertop.

Power through your kitchen tasks.



Tupperware®

Image: A user's hands are shown securing the red lid onto the transparent container of the Tupperware SuperSonic Chopper Compact, which contains green herbs ready for chopping.

OPERATING INSTRUCTIONS

The SuperSonic Chopper Compact operates manually using a pull-cord mechanism.

- Positioning:** Place the assembled chopper on a stable, flat surface. The anti-skid bottom will help prevent movement.
- Pull the Cord:** Hold the lid firmly with one hand. With the other hand, grasp the pull handle and pull the cord horizontally and quickly. Do not pull the cord vertically or at an angle.
- Chopping Action:** The blades will rotate rapidly inside the container with each pull, chopping the ingredients. The patented blade design ensures food is pushed up and down for even chopping.
- Control Consistency:** The number of pulls determines the fineness of the chop.
 - Few pulls:* Coarse chop (e.g., for salads).
 - More pulls:* Finer chop (e.g., for sauces, purees).

5. **Check Progress:** You can periodically remove the lid to check the consistency of your ingredients.
6. **Emptying:** Once chopping is complete, carefully remove the lid. Then, carefully remove the blade assembly by holding its plastic top. Empty the chopped ingredients from the container.

SuperSonic™ Chopper Compact

Cut your chopping time in half just by pulling the handle.



Tupperware®

Image: A person is shown operating the Tupperware SuperSonic Chopper Compact, pulling the white handle to activate the chopping mechanism. The text overlay indicates "SuperSonic™ Chopper Compact" and "Cut your chopping time in half just by pulling the handle."

CARE AND MAINTENANCE

Proper care will extend the life of your SuperSonic Chopper Compact.

- **Cleaning:**
 - *Container and Blade Assembly:* These parts are dishwasher safe. For hand washing, use warm soapy water and a brush for the blades. Handle blades with extreme caution.
 - *Lid:* The lid with the pull cord mechanism is **not** dishwasher safe. Wipe the lid clean with a damp cloth. Do not immerse the lid in water to avoid damaging the mechanism.

- **Drying:** Ensure all parts are completely dry before reassembling or storing to prevent odors or mold.
- **Storage:** Store the chopper in a clean, dry place. You can store the blade assembly inside the container with the lid secured for compact storage.
- **Avoid Abrasives:** Do not use abrasive cleaners or scouring pads, as they may scratch the plastic.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Blades not rotating or jamming.	Container is overfilled; ingredients are too large or too hard; lid not properly secured.	Reduce the amount of ingredients; cut larger ingredients into smaller pieces; ensure lid is twisted and locked into place.
Pull cord is stuck or difficult to pull.	Cord is tangled; mechanism is dirty; lid not properly secured.	Gently pull the cord straight out; clean the lid (do not immerse); ensure lid is securely locked.
Ingredients not chopped evenly.	Not enough pulls; ingredients stuck to sides.	Continue pulling the cord; open the lid and scrape down sides if necessary, then re-secure lid and continue chopping.

PRODUCT SPECIFICATIONS

- **Model:** 179757
- **Brand:** Tupperware
- **Material:** Plastic (BPA-free), Stainless Steel blades
- **Color:** Red / Stainless Steel
- **Operation Mode:** Manual (Pull Cord)
- **Dimensions:** Approximately 4.9 x 4.9 x 4.3 inches (12.4 x 12.4 x 10.9 cm)
- **Weight:** Approximately 9.6 ounces (0.27 kg)
- **Special Features:** Lightweight, Anti-skid bottom, Smart-Fast Bladez

11.15 oz / 329.74 mL

4.5 in (11.3 cm)



**3.7 in
(9.3 cm)**

Image: A diagram showing the dimensions of the Tupperware SuperSonic Chopper Compact, indicating a height of 3.7 inches (9.3 cm) and a width of 4.5 inches (11.3 cm), with a capacity of 11.15 oz / 329.74 mL.

WARRANTY AND SUPPORT

For information regarding product warranty, returns, or customer support, please refer to the official Tupperware website or contact their customer service directly. Keep your proof of purchase for any warranty claims.

Official Tupperware Website: www.tupperware.com

