Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Thomson /
- > THOMSON 40-inch QLED Google Smart TV (Model 40QG4S14) Instruction Manual

Thomson 40QG4S14

THOMSON 40-inch QLED Google Smart TV (Model 40QG4S14) Instruction Manual

Model: 40QG4S14

1. Introduction

This manual provides essential information for the safe and efficient operation of your new THOMSON 40-inch QLED Google Smart TV, model 40QG4S14. Please read this manual thoroughly before using the television and retain it for future reference.

Your THOMSON QLED Google Smart TV combines advanced display technology with smart features to deliver an immersive entertainment experience. Featuring Quantum Dot nanocrystals, the QLED display offers vibrant colors and high contrast. Integrated Google TV provides personalized content recommendations and access to a wide range of streaming services and applications.



Image 1.1: Front view of the THOMSON 40-inch QLED Google Smart TV, showcasing its slim bezel and stand.

2. SAFETY INFORMATION

Always follow basic safety precautions when using this television to reduce the risk of fire, electric shock, and injury.

- Do not expose the TV to rain or moisture.
- Do not open the TV casing; refer all servicing to qualified personnel.
- Ensure proper ventilation around the TV.
- Avoid placing the TV on unstable surfaces.
- Unplug the TV during lightning storms or when unused for long periods.

3. PACKAGE CONTENTS

Verify that all items are present upon unpacking:

- THOMSON 40-inch QLED Google Smart TV
- Remote Control (with backlighting)
- Power Cable
- TV Stands (if applicable) and screws
- · Quick Start Guide
- Warranty Card

4. SETUP

4.1 Physical Installation

Your TV can be placed on a stand or wall-mounted. Ensure the TV is placed on a stable, level surface if using the stands. For wall mounting, use a VESA-compatible bracket (not included) and follow the bracket manufacturer's instructions.

ANVÄNDBAR INNOVATION TILLGÄNGLIG FÖR ALLA

I 132 år har vårt mål varit detsamma: att erbjuda teknik som för människor samman.

Vi tror att den perfekta produkten är enkel, lätt att använda och anpassad efter dina verkliga behov.

Image 4.1: Product dimensions for installation planning. The TV measures approximately 89 cm in width, 56 cm in height (with stands), and 8 cm in depth.

4.2 Connecting Peripherals

Connect external devices such as set-top boxes, gaming consoles, or sound systems to the appropriate ports on the back of your TV.

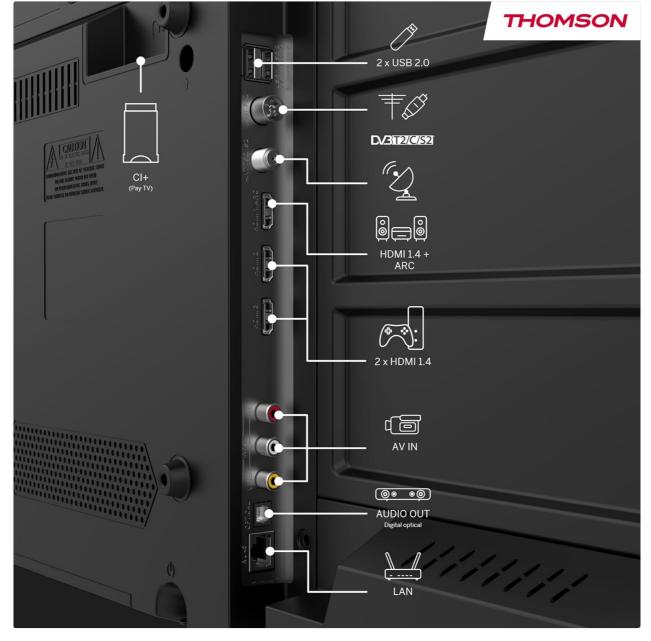


Image 4.2: Rear panel connections. This includes 2x USB 2.0 ports, DVB-T2/C/S2 antenna input, HDMI 1.4 + ARC, 2x HDMI 1.4, AV IN, Digital Optical Audio Out, and LAN port.

- **HDMI:** Connect high-definition devices using HDMI cables. The TV features multiple HDMI 1.4 ports, with one supporting Audio Return Channel (ARC).
- USB: Insert USB drives for media playback or software updates.
- Antenna/Cable/Satellite: Connect your terrestrial antenna, cable, or satellite dish to the DVB-T2/C/S2 input for broadcast reception.
- LAN: Connect an Ethernet cable for a wired internet connection.
- CI+: Insert a CI+ module for encrypted digital channels.

4.3 Initial Power On and Google TV Setup

- 1. Connect the power cable to the TV and a power outlet.
- 2. Press the power button on the remote control or TV.
- 3. Follow the on-screen instructions to complete the initial setup, including language selection, network connection (Wi-Fi or Ethernet), and Google account login.
- 4. The Google TV interface will guide you through setting up your preferred streaming services and user profiles.

5. OPERATING

5.1 Basic TV Functions

- Power: Press the power button on the remote to turn the TV on or off.
- **Volume:** Use the Volume +/- buttons to adjust the sound level.
- **Channel:** Use the Channel +/- buttons to change channels (for broadcast TV).
- Input: Press the Input button to select different input sources (HDMI, AV, Tuner).

5.2 Google TV Features

Google TV organizes content from your apps and subscriptions, providing personalized recommendations.

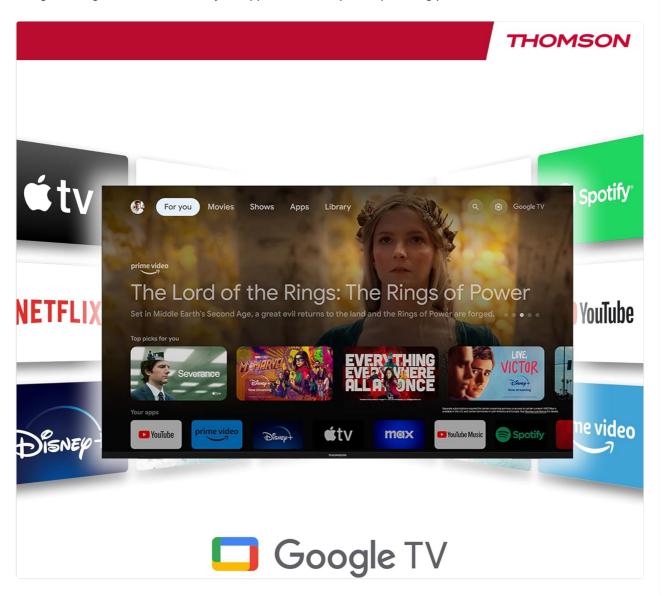


Image 5.1: The Google TV home screen, displaying personalized content suggestions and access to popular streaming applications.

- Navigation: Use the directional pad and OK button on the remote to navigate the Google TV interface.
- Apps: Access a wide range of applications like Netflix, Prime Video, YouTube, and Disney+ from the home screen.
- Voice Control (Google Assistant): Use the integrated Google Assistant for hands-free control. Press
 the Google Assistant button on your remote and speak your commands.

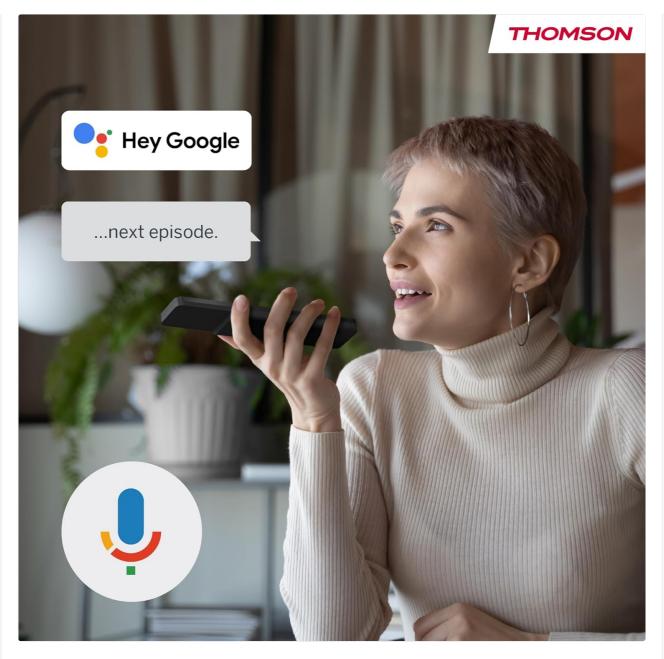


Image 5.2: A user interacting with the Google Assistant via the remote control, demonstrating voice command functionality.

- **Chromecast Built-in:** Stream content directly from compatible smartphones, tablets, or computers to your TV.
- User Profiles: Create multiple user profiles for personalized recommendations and watchlists.

5.3 Picture and Sound Settings

Your TV features QLED display technology and Dolby Audio for enhanced viewing and listening.

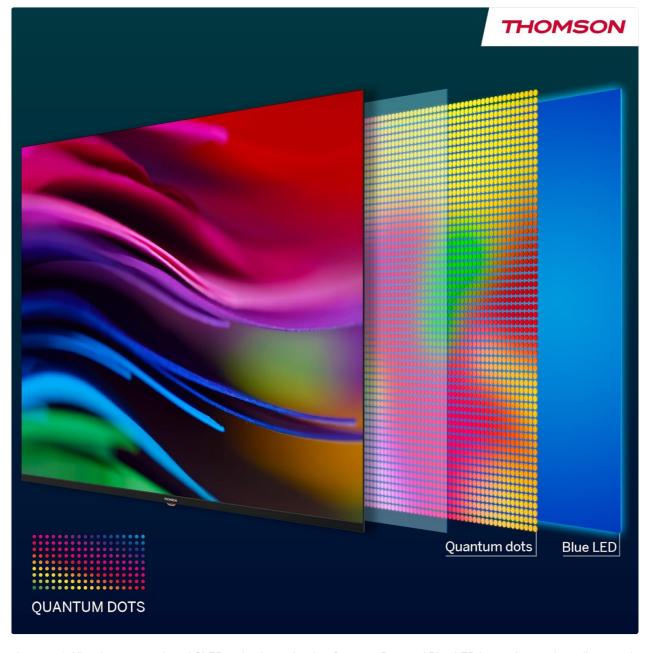


Image 5.3: Visual representation of QLED technology, showing Quantum Dots and Blue LED layers that produce vibrant and accurate colors.

- **Picture Modes:** Access picture settings to adjust brightness, contrast, color, and sharpness. Select from predefined modes (e.g., Standard, Vivid, Movie) or customize your own.
- HDR10: The TV supports HDR10, providing enhanced contrast and color detail with compatible content.
- **Dolby Audio:** Experience dynamic and clear sound. Adjust audio settings for different sound modes (e.g., Standard, Music, Movie) or use the equalizer.



Image 5.4: An illustration of the immersive audio experience provided by Dolby Audio, enhancing content like sports.

5.4 Remote Control

The ergonomic remote control features backlit buttons for easy use in dim lighting and dedicated buttons for quick access to functions.



Image 5.5: Key features of the remote control, highlighting the Profile Switch, Favorite App button, backlit buttons, and Voice Control functionality.

- Backlit Buttons: Buttons illuminate when pressed, improving visibility in low-light conditions.
- Star Button: Customize this button to quickly launch your favorite application.
- Profile Switch: Easily switch between different user profiles.

6. MAINTENANCE

Proper care ensures the longevity of your television.

- Cleaning the Screen: Gently wipe the screen with a soft, lint-free cloth. For stubborn marks, use a screen cleaner specifically designed for TVs, applied to the cloth, not directly to the screen.
- Cleaning the Casing: Use a soft, dry cloth to wipe the TV casing. Avoid abrasive cleaners or solvents.
- Ventilation: Ensure the ventilation openings are not blocked to prevent overheating.
- Power Cord: Regularly check the power cord for any damage.

7. TROUBLESHOOTING

If you encounter issues, refer to the following common solutions before contacting support.

Problem	Possible Cause	Solution
No power	Power cable disconnected; power outlet fault	Check power cable connection; try a different outlet.
No picture, but sound is present	Incorrect input source selected; external device issue	Press the Input button to select the correct source; check external device connections.
No sound, but picture is present	Volume muted or too low; audio settings incorrect	Unmute volume or increase level; check audio output settings.
Remote control not working	Batteries depleted; obstruction between remote and TV	Replace batteries; remove any obstructions.
Wi-Fi connection issues	Router issue; incorrect password	Restart your router; re-enter Wi-Fi password in TV settings.

8. SPECIFICATIONS

Detailed technical specifications for the THOMSON 40QG4S14 TV.

Feature	Specification
Brand	Thomson
Model	40QG4S14
Screen Size	40 Inches (101 cm)
Display Technology	QLED
Resolution	1920 x 1080 Pixels (FHD)
Refresh Rate	60 Hz
Operating System	Android (Google TV)
Audio Technology	Dolby Audio
HDR Support	HDR10
Connectivity	Wi-Fi, Bluetooth 5.1, HDMI (x3), USB (x2), LAN, AV In, Digital Optical Audio Out
Tuner Technology	DVB-T, DVB-S, DVB-C (Triple Tuner)
Special Features	Google Assistant, Chromecast Built-in, Backlit Remote Control, Multiple User Profiles, CI+
Product Dimensions (W x H x D)	89 x 56 x 8 cm (approximate, with stand)

Feature	Specification
Weight	8.44 kg (approximate)

9. WARRANTY AND SUPPORT

Your THOMSON TV comes with a manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions. For technical support, troubleshooting assistance, or warranty claims, please contact THOMSON customer service. Contact details can typically be found on the manufacturer's website or the warranty documentation.

© 2025 Thomson. All rights reserved.

Related Documents - 40QG4S14

THOMSON	Thomson Smart TV User Manual & Safety Information Comprehensive user manual and safety guide for Thomson Smart TVs, covering setup, features, safety precautions, and accessibility options. Features Google TV, Dolby Vision, Dolby Atmos, Bluetooth, and Wi-Fi connectivity.
THOMSON Google TV	Thomson Streaming Dongle 150 Cast with Google TV: User Manual Comprehensive user manual for the Thomson Streaming Dongle 150 Cast, featuring Google TV. Includes setup instructions, features, remote control guide, connectivity, settings, troubleshooting, and technical specifications.
THOMSON ☐ Google TV	Ръководство за потребителя на Thomson Google TV: Настройка, функции и отстраняване на неизправности Изчерпателно ръководство за потребителя за модели Thomson Google TV, обхващащо настройка, инсталация, функции на дистанционното управление, настройки, телевизия на живо, мултимедийно възпроизвеждане, отстраняване на неизправности и технически спецификации.

