

[Manuals.plus](#) /

› [Cecotec](#) /

› Cecotec Conga Rockstar 5500 Hurricane Station Flex Cordless Vacuum Cleaner User Manual

Cecotec A01_EU01_102267

Cecotec Conga Rockstar 5500 Hurricane Station Flex Cordless Vacuum Cleaner User Manual

1. PRODUCT OVERVIEW

The Cecotec Conga Rockstar 5500 Hurricane Station Flex is a powerful cordless stick vacuum cleaner designed for efficient home cleaning. It features an auto-emptying base for convenient dust disposal, high suction power, and a long-lasting battery. Its flexible design and specialized brush ensure thorough cleaning across various surfaces.

Arrasa con la suciedad sin esfuerzo.

Gran potencia de succión de 220 AW.



Image 1.1: The Cecotec Conga Rockstar 5500 Hurricane Station Flex cordless vacuum cleaner.

Key Features:

- **Auto-emptying Base:** Automatically empties the vacuum's dust tank into a larger bag in the base, minimizing contact with dirt.
- **High Suction Power:** Delivers up to 220 AW (Air Watts) for effective cleaning.
- **Powerful Motor:** Equipped with a 700 W motor for consistent performance.
- **Extended Autonomy:** Provides up to 90 minutes of cleaning time on a single charge.
- **HairLess Brush Technology:** Designed to cut and remove tangled hairs from the brush.
- **Flexible Tube:** Allows for easy cleaning under furniture and in hard-to-reach areas.
- **Auto Mode:** Adjusts suction power automatically based on the detected dirt level.

2. SAFETY INSTRUCTIONS

Before using the appliance, please read these instructions carefully and keep them for future reference. Failure to follow

these instructions may result in electric shock, fire, or serious injury.

- Ensure the power supply voltage matches the voltage indicated on the appliance's rating label.
- Do not immerse the appliance, its cord, or plug in water or any other liquid.
- Do not use the vacuum cleaner to pick up flammable or combustible liquids, hot ashes, or sharp objects.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Always turn off the appliance and disconnect it from the power outlet before cleaning or performing maintenance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Use only manufacturer-recommended attachments and accessories.
- Do not use the appliance if any part is damaged. Contact authorized technical support.

3. PRODUCT COMPONENTS

The Cecotec Conga Rockstar 5500 Hurricane Station Flex includes the following components:

- Cordless stick vacuum cleaner unit
- Auto-emptying base
- 2-in-1 accessory (crevice tool and brush)
- Corner accessory
- 2 dust bags for the auto-emptying base
- User manual

Versatilidad instantánea.

Accesorio para muebles 2 en 1 y para esquinas.



Image 3.1: The 2-in-1 accessory for versatile cleaning.

4. SETUP

4.1 Assembly

1. Unpack all components and ensure nothing is missing or damaged.
2. Attach the main vacuum body to the extension tube.
3. Connect the floor brush head to the other end of the extension tube. Ensure all connections click securely into place.
4. Place the auto-emptying base in a suitable location near a power outlet.
5. Insert a dust bag into the auto-emptying base if not already installed.

4.2 Initial Charging

Before first use, fully charge the vacuum cleaner's battery.

1. Place the assembled vacuum cleaner onto the auto-emptying base.
2. Connect the power adapter to the auto-emptying base and then to a power outlet.
3. The charging indicator on the vacuum or base will illuminate, indicating that charging has begun.
4. Allow the vacuum to charge until the indicator shows a full charge (approximately 3-4 hours).

Siempre lista para aspirar.

Base con función de carga.



Image 4.1: The vacuum cleaner docked on its auto-emptying and charging base.

5. OPERATING INSTRUCTIONS

5.1 Powering On/Off

Press the power button located on the main unit to turn the vacuum cleaner on or off.

5.2 Suction Modes

The vacuum cleaner offers multiple suction modes to suit different cleaning needs:

- **Eco Mode:** For light cleaning and maximum battery life.
- **Daily Mode:** Standard power for everyday cleaning.
- **Turbo Mode:** Maximum suction for stubborn dirt and deep cleaning.
- **Auto Mode:** The vacuum automatically detects the type and amount of dirt and adjusts the suction power accordingly. This mode optimizes cleaning efficiency and battery usage.



Image 5.1: The vacuum cleaner automatically adjusting power in Auto Mode.

5.3 Using the Flexible Tube and LED Light

The flexible tube allows the main unit to bend, making it easier to clean under low furniture without excessive bending. The integrated LED lights on the brush head illuminate dark areas, revealing hidden dust and debris.

Máxima comodidad y visibilidad.

Tubo flexible y luz LED incorporada.



Image 5.2: The flexible tube and LED lights enhance cleaning visibility and reach.

5.4 Using Accessories

Attach the 2-in-1 accessory or corner accessory directly to the main unit or the extension tube for cleaning upholstery, crevices, and tight spaces.

Video 5.1: Demonstration of the Cecotec Conga Rockstar 5500 Hurricane Station Flex in use, highlighting its features and versatility.

6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

6.1 Auto-emptying Base Dust Bag Replacement

The auto-emptying base collects dust from the vacuum's tank. Replace the dust bag when the indicator on the base signals it is full.

1. Ensure the vacuum cleaner is not docked on the base and the base is unplugged.
2. Open the dust bag compartment on the auto-emptying base.
3. Carefully remove the full dust bag, ensuring the opening is sealed to prevent dust leakage.
4. Insert a new dust bag, making sure it is properly seated.
5. Close the compartment securely.



Image 6.1: Internal view of the auto-emptying base, illustrating the dust collection mechanism.

6.2 Cleaning the Anti-Tangle Brush

The HairLess Brush technology helps prevent hair tangles, but periodic inspection and cleaning are recommended.

1. Turn off the vacuum cleaner and detach the floor brush head.
2. Locate the brush roll and remove it from the brush head.
3. Use scissors or a cleaning tool to remove any remaining tangled hair or debris from the brush roll.
4. Clean the brush head interior and reinsert the brush roll.



Image 6.2: The HairLess Brush technology designed to prevent hair tangles.

6.3 Filter Cleaning

The HEPA filter should be cleaned regularly to maintain suction performance.

1. Remove the dust tank from the main vacuum unit.
2. Extract the HEPA filter.
3. Tap the filter gently to remove loose dust. If heavily soiled, rinse it under running water.
4. Ensure the filter is completely dry before reinserting it into the dust tank.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Vacuum does not turn on	Battery is depleted.	Charge the battery fully.
Reduced suction power	Dust tank is full. Filter is clogged. Brush roll is tangled.	Empty the dust tank. Clean or replace the filter. Clean the brush roll.
Auto-emptying not working	Dust bag in base is full. Obstruction in the emptying channel.	Replace the dust bag. Check for and remove any obstructions.
Short battery life	Using Turbo mode excessively. Battery degradation.	Use lower power modes for general cleaning. Contact support if battery life significantly decreases over time.

8. SPECIFICATIONS

- **Model Number:** A01_EU01_102267
- **Brand:** Cecotec
- **Power:** 700 W
- **Suction Power:** MAX 220 AW
- **Battery:** 1 Lithium Ion (included), 33.6 V
- **Autonomy:** Up to 90 minutes
- **Filter Type:** HEPA Filter
- **Special Feature:** Cordless, Auto-emptying Base, Flexible Tube, Anti-tangle Brush
- **Product Dimensions:** 31.5 x 24.1 x 133.5 cm
- **Product Weight:** 1.3 kg
- **Recommended Surface:** All floors (carpets, hardwood, stairs)

9. WARRANTY AND SUPPORT

This product comes with a manufacturer's warranty. For detailed information regarding warranty terms and conditions, please refer to the warranty card included in the product packaging or visit the official Cecotec website.

For technical assistance, spare parts, or any inquiries regarding your Cecotec Conga Rockstar 5500 Hurricane Station Flex, please contact Cecotec customer support through their official channels. Keep your purchase receipt as proof of purchase for warranty claims.

Cecotec Official Website: www.cecotec.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DKNZBZDK>

More documents and user manuals: **<https://manuals.plus/>**