

Miroir L810Pro

Miroir L810S Pro Smart 1080p Portable Projector User Manual

Model: L810Pro

PRODUCT OVERVIEW

The Miroir L810S Pro Smart 1080p Portable Projector is designed to transform any space into an entertainment hub. It delivers native 1080p resolution for crisp, vibrant visuals, supporting screen sizes up to 200 inches. With integrated Android TV, users can access popular streaming platforms directly. Key features include automatic focus and keystone correction for easy setup, and dual 10W speakers for immersive audio. Connectivity options include HDMI, USB-C, USB-A, Wi-Fi, and Bluetooth, ensuring broad compatibility with various devices.

- **Full HD 1080p Resolution:** Enjoy stunning clarity and sharp detail with native 1080p resolution for movies, sports, gaming, and more.
- **Built-in Android TV:** Stream your favorite apps like Netflix, YouTube, and Disney+ directly with integrated Android TV and included remote.
- **Auto Focus & Instant Keystone:** Quickly get a sharp, rectangular image with automatic focus and keystone correction for hassle-free setup.
- **Powerful Built-in Speakers:** Dual 10W speakers deliver rich, room-filling sound—no external speakers required.
- **Versatile Connectivity:** Features HDMI, USB-C, and USB-A ports, plus Wi-Fi and Bluetooth for seamless device pairing and media sharing.
- **Massive 200" Display Capability:** Create a cinematic experience anywhere, indoors or outdoors, with projection sizes up to 200 inches.
- **Portable & Sleek Design:** Compact, modern design fits any space and is easy to move room-to-room or outdoors.



Figure 1: Front view of the Miroir L810S Pro Projector, showcasing its lens and compact design.

PACKAGE CONTENTS

Verify that all items are present in the package before proceeding with setup.

- Miroir L810S Pro Smart 1080p Portable Projector
- Power Cord

- Remote Control

PRODUCT COMPONENTS



Figure 2: The Miroir L810S Pro Projector shown with its accompanying remote control, essential for navigating the Android TV interface.



Figure 3: Bottom view of the Miroir L810S Pro Projector, displaying the model number (L810S Pro), input specifications (DC 35V = 4.28A), and various certifications including Dolby Audio and HDMI. A QR code is also visible, linking to [Miroir support resources](#).

SETUP GUIDE

1. **Power Connection:** Connect the provided power cord to the projector's power input port and then plug it into a standard electrical outlet.
2. **Initial Power On:** Press the power button on the projector or the remote control to turn on the device. The projector will automatically perform auto-focus and keystone correction to optimize the image.
3. **Network Connection (Wi-Fi):**
 - Navigate to the *Settings* menu using the remote control.
 - Select *Network & Internet*.
 - Choose your Wi-Fi network from the list and enter the password if prompted.

- Ensure a stable internet connection for streaming services.

4. Bluetooth Pairing:

- From the *Settings* menu, select *Remotes & Accessories*.
- Enable Bluetooth on your external audio device (e.g., Bluetooth speaker, headphones).
- Select *Add accessory* on the projector and choose your device from the list to pair.

5. Input Source Selection:

- To connect external devices, use the HDMI or USB-C ports.
- Press the **Input** button on the remote control to cycle through available input sources (HDMI, USB-C, Android TV).
- Select the appropriate input for your connected device.

OPERATING INSTRUCTIONS

Navigation and Android TV

The Miroir L810S Pro operates on Android TV, providing a user-friendly interface. Use the included remote control to navigate menus, select applications, and control playback.

- **Home Screen:** Access your installed apps, recommended content, and settings from the main home screen.
- **App Access:** Select icons for pre-installed apps like Netflix, YouTube, and Disney+, or download new apps from the Google Play Store.
- **Voice Control:** Utilize the voice assistant feature on the remote for quick searches and commands.

Adjusting Projection

The projector features automatic focus and keystone correction. If manual adjustments are needed:

- **Focus:** The projector typically auto-focuses. If the image appears blurry, slightly move the projector or access focus settings in the menu if available.
- **Keystone Correction:** The projector automatically corrects image distortion. For manual adjustment, navigate to *Settings > Projector Settings > Keystone Correction* to fine-tune the image shape.
- **Projection Size:** Adjust the distance between the projector and the projection surface to change the screen size. The projector supports up to a 200-inch display.

Audio Output

The L810S Pro features powerful dual 10W built-in speakers. For external audio:

- **Bluetooth:** Pair with Bluetooth speakers or headphones as described in the Setup Guide.
- **Volume Control:** Use the volume buttons on the remote control to adjust the audio level.

MAINTENANCE

Cleaning

- **Lens:** Gently wipe the projector lens with a soft, lint-free cloth specifically designed for optical surfaces. Do not use abrasive cleaners or excessive force.
- **Exterior:** Clean the exterior of the projector with a soft, dry cloth. For stubborn marks, a slightly damp cloth can be used, followed by immediate drying.
- **Ventilation:** Ensure the ventilation openings are clear of dust and debris to prevent overheating. Do not block air vents during operation.

Storage

- Store the projector in a cool, dry place away from direct sunlight and extreme temperatures.
- If storing for an extended period, disconnect the power cord and place the projector in its original packaging or a protective carrying case.

TROUBLESHOOTING

Problem	Possible Solution
No image projected.	• Ensure the projector is powered on and the power cord is securely connected. • Verify the correct input source is selected (HDMI, USB-C, Android TV). • Check the connection cable between the projector and the source device.
Image is blurry or out of focus.	• Allow the auto-focus feature to complete. • Ensure the projector lens is clean. • Adjust the projector's distance from the screen.
Image is distorted (trapezoid shape).	• Allow the auto-keystone correction to complete. • If needed, manually adjust keystone correction in the projector settings. • Ensure the projector is placed on a flat, stable surface.
No sound or low volume.	• Increase the volume using the remote control. • If using external speakers, ensure they are properly connected and powered on. • Check Bluetooth connection if using wireless audio. • Verify audio settings on the source device.
Remote control not working.	• Replace the batteries in the remote control. • Ensure there are no obstructions between the remote and the projector. • Re-pair the remote control if it uses Bluetooth.
Cannot connect to Wi-Fi.	• Ensure your Wi-Fi network is active and within range. • Double-check the Wi-Fi password. • Restart the projector and your Wi-Fi router.

SPECIFICATIONS

Feature	Detail
Brand	Miroir
Model Number	L810Pro
Display Resolution	1920 x 1200 (Native 1080p)
Connectivity Technology	HDMI, USB-C, USB-A, Wi-Fi, Bluetooth
Special Features	Built-In Speaker, Digital Keystone Correction, Auto Focus, Built-In Wi-Fi, Android TV
Recommended Uses	Home Cinema, Outdoor Movies, Gaming
Item Weight	5 pounds
Package Dimensions	12.95 x 11.5 x 7.65 inches
Built-in Speakers	Dual 10W

WARRANTY AND SUPPORT

Miroir products are designed for reliability and performance. For specific warranty details, please refer to the warranty card included with your product or visit the official Miroir website.

For technical support, frequently asked questions, or additional resources, please visit the Miroir support page. A direct link to support resources can be found by scanning the QR code on the bottom of your projector or by visiting: <https://miroirusa.com/qr-l710s-pro>

For further assistance, you may also contact Miroir customer service through their official website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question