

AMZCHEF SJ-036

AMZCHEF SJ-036 Automatic Cold Press Juicer

Instruction Manual

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the AMZCHEF SJ-036 Automatic Cold Press Juicer. Retain this manual for future reference.

- Always ensure the juicer is properly assembled before operation.
- Do not immerse the motor base in water or other liquids.
- Keep hands and utensils out of the feed chute during operation to prevent injury.
- Unplug the appliance from the outlet when not in use, before assembling or disassembling parts, and before cleaning.
- This appliance is not intended for use by children. Close supervision is necessary when any appliance is used near children.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Use only attachments recommended or sold by the manufacturer.
- Ensure the lid is securely locked before starting the juicer. The safety lock mechanism prevents operation if not correctly assembled.

2. PRODUCT OVERVIEW

The AMZCHEF SJ-036 is an automatic cold press juicer designed for efficient juice extraction from fruits and vegetables. It features a wide feed chute and a triple filter system.

Components:

- Motor Base with Control Dial
- Juicing Bowl
- Auger (Squeezing Screw)
- Triple Filter Basket (2mm, 0.8mm, 0.5mm mesh)
- Feed Chute Lid with Safety Lock
- Pulp Container

- Juice Container
- Cleaning Brush
- Silicone Anti-drip Stopper



Image: All components of the AMZCHEF SJ-036 Automatic Cold Press Juicer, including the motor base, juicing bowl, auger, filter, lid, and collection containers.

3. SETUP AND ASSEMBLY

Follow these steps to correctly assemble your juicer before first use or after cleaning.

1. **Place the Juicing Bowl:** Position the juicing bowl onto the motor base, aligning the handle with the vertical alignment mark on the base. Rotate clockwise until it locks into place.
2. **Insert the Auger:** Place the auger into the center of the juicing bowl.
3. **Install the Filter Basket:** Carefully place the triple filter basket over the auger, ensuring it sits firmly in the juicing bowl.
4. **Attach the Feed Chute Lid:** Align the lid with the juicing bowl and rotate clockwise until it clicks into the locked position. Ensure the safety lock is engaged.
5. **Position Containers:** Place the pulp container under the pulp outlet and the juice container under the juice outlet.

Your browser does not support the video tag.

Video: This video demonstrates the assembly and disassembly process of the AMZCHEF SJ-036 juicer, including how to correctly place each component and engage the safety lock.

4. OPERATING INSTRUCTIONS

Operating your AMZCHEF juicer is straightforward. Follow these steps for optimal juicing results.

4.1 Ingredient Preparation

- Wash all fruits and vegetables thoroughly.
- For most fruits and vegetables, pre-cutting is not necessary due to the 145mm wide feed chute. However, very large or fibrous items may benefit from being cut into smaller pieces.
- Remove hard pits from fruits like peaches, plums, or cherries.

- Peel citrus fruits (oranges, lemons, grapefruits) to avoid bitter taste from the rind.



Larger Feed Chute Reduced Cutting

Image: The wide 145mm feed chute of the juicer, demonstrating its capacity to accommodate whole or large pieces of fruits and vegetables, reducing the need for extensive pre-cutting.

4.2 Juicing Process

1. Ensure the juicer is correctly assembled and the juice and pulp containers are in place.
2. Plug the power cord into a suitable electrical outlet.
3. Turn the control dial to the 'ON' position. The juicer will begin to operate.
4. Slowly feed the prepared ingredients into the wide feed chute. The automatic feeding mechanism will draw the ingredients in.
5. Observe the juice flowing into the juice container and pulp collecting in the pulp container.
6. If ingredients get stuck, turn the dial to 'REV' (Reverse) for a few seconds to clear the blockage, then return to 'ON'.
7. Once juicing is complete, turn the control dial to 'OFF' and unplug the appliance.



2000ML(70oz)
Large capacity

Image: The juicer in operation, showing the separation of juice and pulp. Fresh green juice is being extracted into a clear container, while dry pulp is expelled into a separate receptacle.

4.3 Anti-Drip Lid Feature

The juicer is equipped with a silicone anti-drip lid on the juice outlet. This allows you to temporarily close the outlet to change juice cups without turning off the machine, or to prevent drips on your countertop after juicing.

5. CLEANING AND MAINTENANCE

Regular cleaning ensures the longevity and hygienic operation of your juicer. The juicer requires hand washing for all removable parts.

1. **Disassembly:** Unplug the juicer. Turn the feed chute lid counter-clockwise to unlock and remove it. Then, remove the filter basket and auger. Finally, lift the juicing bowl from the motor base.
2. **Rinse Immediately:** Rinse all removable parts (lid, auger, filter, juicing bowl, containers) under running water

immediately after use. This prevents pulp from drying and sticking.

- 3. **Use Cleaning Brush:** Use the provided cleaning brush to remove any stubborn pulp from the filter mesh and other components.
- 4. **Wash with Soap:** Wash all removable parts with warm, soapy water. Rinse thoroughly.
- 5. **Dry:** Allow all parts to air dry completely before reassembling or storing.
- 6. **Motor Base:** Wipe the motor base with a damp cloth. Never immerse the motor base in water.

Note: The juicer parts are not dishwasher safe. Hand washing is required.

6. TROUBLESHOOTING

If you encounter issues with your juicer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Juicer does not turn on.	Not plugged in; not assembled correctly; safety lock not engaged.	Ensure power cord is securely plugged in. Check that all parts are correctly assembled and the lid is locked.
Ingredients are stuck or juicer stops.	Overloading; hard ingredients; pulp buildup.	Turn the control dial to 'REV' (Reverse) for a few seconds, then back to 'ON'. If blockage persists, turn off, unplug, and disassemble to clear. Cut hard ingredients into smaller pieces.
Excessive pulp in juice.	Filter mesh clogged; very soft fruits.	Clean the filter thoroughly. For very soft fruits, alternate with harder fruits or process them separately.
Loud noise during operation.	Improper assembly; foreign object; motor issue.	Check assembly. Turn off and unplug to inspect for foreign objects. If noise persists, contact customer support.

7. SPECIFICATIONS

Feature	Detail
Model	SJ-036
Brand	AMZCHEF
Power	250 Watts
Voltage	120 Volts
Capacity	1.8 Liters (Juice Container)
Feed Chute Size	145 mm
Filter Type	Triple Filter (2mm, 0.8mm, 0.5mm mesh)
Material	Plastic (BPA-free for cups, main jar not confirmed BPA-free)

Feature	Detail
Noise Level	<60 dB
Dimensions (DxWxH)	21 x 20 x 43.6 cm
Weight	2 Kilograms
Care Instructions	Hand wash only

8. WARRANTY AND CUSTOMER SUPPORT

AMZCHEF products come with a 2-year warranty and lifetime technical support. For any questions, concerns, or warranty claims, please contact AMZCHEF customer service through your purchase platform or the official AMZCHEF website. Please have your model number (SJ-036) and proof of purchase ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question