

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [ALLIMITY](#) /

› [ALLIMITY Replacement Remote Control User Manual for RCA, EDENWOOD, Engel, Akai TVs](#)

## ALLIMITY AKTV3233J-SMART

# ALLIMITY Replacement Remote Control User Manual

For RCA, EDENWOOD, Engel, Akai TVs

## INTRODUCTION

---

This manual provides comprehensive instructions for the ALLIMITY replacement remote control. Designed for ease of use, this remote offers full functionality for compatible RCA, EDENWOOD, Engel, and Akai television models without requiring any programming or complex setup.

**Compatible Models:** LE2483SM, LE3283SM, LE4283SM, AKTV3233J-SMART, AKTV554J, AKTV604J, ED43EA07UHD-MM, IRV24H3

## SETUP

---

### 1. Battery Installation

The remote control requires two AAA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover downwards to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.





*Image: Back view of the remote control with the battery cover removed, illustrating the correct orientation for AAA battery insertion.*

**Note:** This remote control does not require any programming. It is ready to use once batteries are installed.

## OPERATING INSTRUCTIONS

The ALLIMITY replacement remote control is designed to replicate the full functionality of your original remote. Point the remote directly at your television's infrared receiver for optimal performance.



Image: Front view of the ALLIMITY remote control, displaying the ergonomic design and button layout.

### Key Functions:

- **Power Button (⏻):** Turns the TV on or off.
- **Input Button:** Selects video input sources (HDMI, AV, etc.).
- **Number Buttons (0-9):** Direct channel selection.
- **Guide Button:** Accesses the electronic program guide.
- **CH. LIST Button:** Displays the channel list.
- **Volume Up/Down (VOL +/-):** Adjusts the volume level.
- **Channel Up/Down (CH +/-):** Changes TV channels.
- **Mute Button (🔇):** Mutes or unmutes the TV audio.
- **Navigation Pad (Up, Down, Left, Right, OK):** Navigates menus and confirms selections.
- **Back/Return Button (↶):** Returns to the previous menu or screen.
- **Exit Button:** Exits the current menu or application.

- **Home Button** (⏪): Accesses the TV's home screen or smart features.
- **Media Control Buttons (Play, Pause, Stop, Fast Forward, Rewind)**: Controls media playback.
- **Color Buttons (Red, Green, Yellow, Blue)**: Used for specific functions within menus or applications, as indicated on screen.
- **Dedicated App Buttons (Netflix, YouTube, Plex, Browser, Meda, prm video, deezer)**: Provides quick access to popular streaming services and functions.

## MAINTENANCE

---

### Battery Replacement

Replace the batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

### Cleaning

To clean the remote control, wipe it with a soft, dry cloth. Do not use liquid cleaners, sprays, or abrasive materials, as these can damage the remote's surface or internal components.

## TROUBLESHOOTING

---

- **Remote is not responding:**
  - Ensure the batteries are installed correctly with the correct polarity (+/-).
  - Replace the batteries with fresh ones.
  - Make sure there are no obstructions between the remote control and the TV's infrared receiver.
  - Ensure you are within the effective operating range (up to 10 meters).
- **Some buttons are not working:**
  - This remote is designed to be fully compatible. Verify your TV model is listed in the compatible models section.
  - Clean the remote control surface, especially around the unresponsive buttons, to remove any dirt or debris.

## SPECIFICATIONS

---

<b>Brand</b>	ALLIMITY
<b>Connectivity Technology</b>	Infrared (IR)
<b>Special Feature</b>	Ergonomic Design
<b>Compatible Devices</b>	RCA, EDENWOOD, Engel, Akai TVs (Models: LE2483SM, LE3283SM, LE4283SM, AKTV3233J-SMART, AKTV554J, AKTV604J, ED43EA07UHD-MM, IRV24H3)
<b>Number of Buttons</b>	25
<b>Controller Type</b>	Tactile Control

<b>Maximum Range</b>	10 Meters
<b>Item Weight</b>	59 Grams

## **WARRANTY AND SUPPORT**

---

Specific warranty information is not provided with this product. For any issues or support inquiries, please refer to the retailer or manufacturer's customer service channels where the product was purchased.