

## ALLIMITY 22284-T2

# ALLIMITY Remote Control User Manual

Compatible with SELECLINE TV Models: 22284-T2, 22284, 32182(V2), 20265(V2), 40284(V2), 22182(V2), 39182(V2), 19182, 32284(V2), 10085158

## 1. INTRODUCTION

This manual provides essential instructions for the ALLIMITY compatible remote control, designed for use with various SELECLINE TV models. This remote offers full functionality without the need for complex programming or setup. Its ergonomic design ensures comfortable handling and reliable performance.

### Key Features:


- **No Programming Required:** Ready to use directly out of the package.
- **Full Functionality:** Replicates all functions of the original remote control.
- **Ergonomic Design:** Lightweight and easy to grip, providing stable control.
- **Infrared Technology:** Ensures a reliable connection with your television.

## 2. SETUP

The ALLIMITY remote control is designed for immediate use with compatible SELECLINE TV models. No complex pairing or code entry is required. Simply install the batteries, and the remote is ready to operate your television.

### 2.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or in the direction indicated by an arrow to open it.
3. Insert two AAA batteries (not included), ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Close the battery compartment cover by sliding it back into place until it clicks securely.

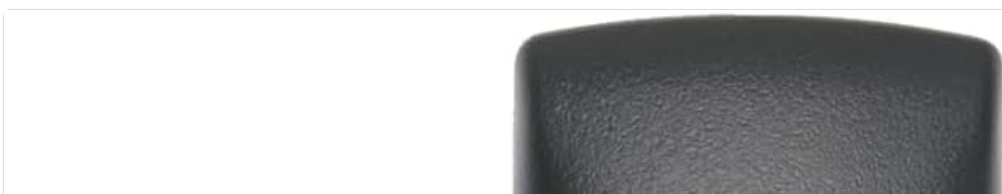



*Image: Back view of the remote control with the battery compartment open, illustrating where to insert batteries.*

After battery installation, the remote control is ready for operation. Point the remote directly at your television's infrared receiver.

### 3. OPERATING INSTRUCTIONS

The ALLIMITY remote control provides intuitive access to all standard television functions. Below is a general overview of common buttons and their uses.





*Image: Front view of the ALLIMITY remote control, showing the layout of all buttons.*

### 3.1 Button Functions

- **Power Button ( ):** Turns the television on or off.
- **Number Buttons (0-9):** Directly select channels.
- **Channel Up/Down (P+/P-):** Changes the television channel sequentially.
- **Volume Up/Down (V+/V-):** Adjusts the sound volume.
- **Mute Button ( ):** Mutes or unmutes the television sound.
- **Menu Button:** Accesses the television's main menu.
- **Navigation Buttons (▲ ▼ ◀▶):** Used to navigate through menus and options.
- **OK Button:** Confirms selections within menus.
- **Back Button:** Returns to the previous menu or screen.
- **Exit Button:** Exits the current menu or application.
- **Media Control Buttons (Play, Pause, Stop, Fast Forward, Rewind):** Controls playback of media content.
- **Colored Buttons (Red, Green, Yellow, Blue):** Often used for specific functions within smart TV applications or teletext, depending on the TV model.

For specific functions related to your SELECLINE TV model, refer to your television's user manual.

## 4. MAINTENANCE

Proper care and maintenance will extend the life of your ALLIMITY remote control.

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Avoid using liquid cleaners or abrasive materials, as these can damage the surface or internal components.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type (AAA).
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage, which can damage the device. Store the remote in a cool, dry place away from direct sunlight.

- **Avoid Drops:** Protect the remote from physical impact, as drops can cause internal damage.

## 5. TROUBLESHOOTING

If you encounter issues with your ALLIMITY remote control, refer to the following troubleshooting steps:

- **Remote Not Responding:**
  - **Check Batteries:** Ensure batteries are inserted correctly with the correct polarity (+/-). Replace old batteries with new ones.
  - **Line of Sight:** Make sure there are no obstructions between the remote control and the television's infrared receiver. The remote requires a clear line of sight to function.
  - **Distance:** Ensure you are within the effective operating range (up to 10 meters).
- **Buttons Not Working:**
  - **Clean Buttons:** Dirt or debris might be interfering with button contacts. Gently clean around the buttons with a soft, dry cloth.
  - **Test Other Buttons:** If only specific buttons are not working, it might indicate a fault with the remote.
- **No Indicator Light:** Some remote controls, including this model, may not feature a visible LED indicator light that illuminates with each button press. The absence of a visible light does not necessarily mean the remote is not functioning. The primary confirmation of operation is the television's response to commands.

## 6. SPECIFICATIONS


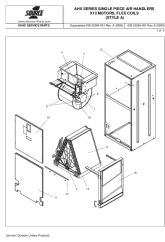




Brand	ALLIMITY
Model Number	22284-T2
Color	Black
Connectivity Technology	Infrared
Special Features	Ergonomic Design
Compatible Devices	SELECLINE TV Models: 22284-T2, 22284, 32182(V2), 20265(V2), 40284(V2), 22182(V2), 39182(V2), 19182, 32284(V2), 10085158
Maximum Range	10 Meters
Number of Buttons	25

## 7. WARRANTY AND SUPPORT

Information regarding specific warranty terms for this ALLIMITY remote control is not provided in the product details. For warranty inquiries or technical support, please contact the seller (ZHICHENGMAO) or the manufacturer (ALLIMITY) directly through their official support channels.

Please retain your proof of purchase for any warranty claims.

## Related Documents - 22284-T2

	<p><a href="#">Wave Buzzer by Dream Toys - User Guide and Instructions</a></p> <p>Comprehensive user guide for the Dream Toys Wave Buzzer (Art. 22284), covering charging, operation, cleaning, and safety precautions. Learn how to use your personal vibrator effectively.</p>
	<p><a href="#">AHX Series Single Piece Air Handlers Parts List - X13 Motors, Flex Coils</a></p> <p>Official parts list for Source1 AHX Series Single Piece Air Handlers featuring X13 Motors and Flex Coils. Includes component descriptions, item numbers, and part numbers for various models. Provided by Johnson Controls Unitary Products.</p>
	<p><a href="#">Eaton Surge Protection, Power Conditioning, PF Capacitors, and Harmonic Filters Catalog</a></p> <p>Explore Eaton's comprehensive range of surge protection devices (SPDs), power conditioners, power factor correction capacitors, and harmonic filters. This catalog details product specifications, applications, and selection guides for industrial and commercial electrical systems.</p>
	<p><a href="#">Eaton Rocker Switches: Comprehensive Product Catalog and Technical Guide</a></p> <p>Explore Eaton's extensive range of rocker switches, including NGR, SVR, ESPORT, EURO SR, X Series, and more. This catalog provides detailed product descriptions, technical specifications, circuit diagrams, dimensions, and ordering information for various industrial, commercial, and automotive applications.</p>
	<p><a href="#">CADEL Pellet Stove User Manual: GRACE, XS7C, BAGGY, RES, XEL, SPIRIT Models</a></p> <p>Comprehensive user manual for CADEL pellet stoves, including models GRACE, XS7C, BAGGY, RES, XEL, and SPIRIT. Covers installation, operation, safety, maintenance, and troubleshooting.</p>
	<p><a href="#">My Weigh TRITON T2 Digital Pocket Scale User Manual and Specifications</a></p> <p>This user manual provides detailed instructions for operating, calibrating, and maintaining the My Weigh TRITON T2 digital pocket scale. Includes features, specifications, and troubleshooting tips for models T2-120, T2-200, T2-300, T2-400, and T2-550.</p>