

ALLIMITY XD24H2V

ALLIMITY Remote Control User Manual for XD INFINITON TV Models

1. PRODUCT OVERVIEW

This ALLIMITY remote control is designed as a direct replacement or secondary remote for various XD INFINITON TV models. It offers full functionality without requiring any complex programming or setup, ensuring immediate use right out of the box. Its ergonomic design provides a comfortable grip and stable performance.

2. COMPATIBILITY

This remote control is compatible with the following XD INFINITON TV models:

- INTV-3217
- XD22F1V
- XD24H1V
- XD32H1V
- XD32H2V
- XD22F2V
- XD28H2V
- XD40F2VSAT

3. SETUP

3.1 Battery Installation

To begin using your remote control, you need to install two AAA alkaline batteries (not included). Follow these steps:

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery cover.

3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Close the battery cover securely.





Image: Back of the remote control with the battery compartment open, illustrating correct battery placement.

3.2 Initial Use

Once batteries are installed, the remote control is ready for immediate use. No programming or pairing is required. Simply point the remote at your compatible XD INFINITON TV and begin operating it.

Your browser does not support the video tag.

Video: Demonstration of battery installation in a remote control. This video illustrates the general process of opening the battery compartment and inserting batteries.

4. OPERATING INSTRUCTIONS

4.1 Basic Functions

The ALLIMITY remote control provides all essential functions for your XD INFINITON TV. Point the remote directly at the TV's infrared receiver for optimal performance.



Image: Front view of the remote control, displaying the power button, number pad, volume and channel controls, navigation keys, and other function buttons.

- **Power Button:** Turns the TV on or off.
- **Number Pad (0-9):** Direct channel selection.
- **Volume Up/Down (+V/-V):** Adjusts the sound volume.
- **Channel Up/Down (+P/-P):** Changes TV channels.
- **Mute Button:** Mutes or unmutes the TV sound.
- **Navigation Keys (Up, Down, Left, Right, OK):** Used to navigate menus and confirm selections.
- **Menu Button:** Accesses the TV's main menu.
- **Exit Button:** Exits current menu or function.
- **Source/Input Button:** Selects input sources (HDMI, AV, etc.).

5. MAINTENANCE

To ensure the longevity and optimal performance of your remote control, follow these maintenance guidelines:

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures. If not used for an extended period, remove the batteries to prevent leakage.

- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal components.

6. TROUBLESHOOTING

If you encounter issues with your remote control, refer to the following common troubleshooting steps:

- **Remote not responding:**
 - Check if the batteries are inserted correctly with the correct polarity (+/-).
 - Replace old batteries with new AAA alkaline batteries.
 - Ensure there are no obstructions between the remote control and the TV's infrared sensor.
 - Verify that the remote is pointed directly at the TV.
- **Limited range:**
 - Ensure batteries are fresh. Low batteries can reduce transmission range.
 - Confirm no strong light sources (like direct sunlight or bright fluorescent lights) are interfering with the infrared signal.
- **Specific buttons not working:**
 - Clean the remote control surface, especially around the non-working buttons, to remove any dirt or debris that might be preventing proper contact.
 - If only a few buttons are affected, it might indicate internal damage.

7. SPECIFICATIONS

Brand	ALLIMITY
Model	XD24H2V
Product Dimensions	17 x 5 x 1 cm
Item Weight	59 grams
Compatible Devices	XD INFINITON TV models: INTV-3217, XD22F1V, XD24H1V, XD32H1V, XD32H2V, XD22F2V, XD28H2V, XD40F2VSAT
Additional Features	Ergonomic design
Battery Type	Alkaline (AAA)
Batteries Included	No
Connectivity Technology	Infrared
Number of Buttons	25
Max Range	10 Meters

8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided with your purchase or contact ALLIMITY customer service directly. Keep your purchase receipt as proof of purchase.