



Manuals.plus /

- › Govee /
- › Govee H1075 Replacement Power Adapter for Permanent Outdoor Lights 2 (H705D, H705E, H705F) Instruction Manual

Govee H1075

Govee H1075 Replacement Power Adapter Instruction Manual

For Govee Permanent Outdoor Lights 2 (Models H705D, H705E, H705F)

1. INTRODUCTION

This manual provides essential instructions for the safe and effective use of your Govee H1075 Replacement Power Adapter. This adapter is designed exclusively for Govee Permanent Outdoor Lights 2 series. Please read this manual thoroughly before installation and retain it for future reference.

2. PRODUCT OVERVIEW

The Govee H1075 is a replacement power adapter specifically engineered to provide power to compatible Govee Permanent Outdoor Lights 2 systems. It features a robust design suitable for outdoor environments.



Image 2.1: The Govee H1075 replacement power adapter, shown with its power cord and waterproof connector. This unit supplies power to the Govee Permanent Outdoor Lights 2.

3. COMPATIBILITY

This adapter is designed for specific Govee Permanent Outdoor Lights 2 models only. Verify your light model before use.

- **Compatible Models:** Govee Permanent Outdoor Lights 2 (H705D, H705E, H705F)
- **Incompatible Models:** Older versions of Govee Permanent Lights (H705A, H705B, H705C)

Using this adapter with incompatible models may result in damage to the lights or the adapter itself, and will void any warranty.

4. SAFETY INSTRUCTIONS

- Ensure the power outlet is easily accessible and unplugged before installation or maintenance.
- Do not immerse the adapter in water. While the control box and adapter are IP65 rated, and the lights are IP67, direct submersion is not recommended.
- Operate within the specified temperature range: -4°F to 140°F (-20°C to 60°C).
- Do not attempt to open or modify the adapter. This will void the warranty and may pose a safety risk.

- Keep away from heat sources and open flames.
- Ensure all connections are secure and properly sealed to maintain water resistance.
- If the adapter or its cord is damaged, discontinue use immediately and replace it with an authorized Govee part.

5. SETUP AND INSTALLATION

Follow these steps to connect your Govee H1075 Replacement Power Adapter:

1. **Power Off:** Ensure the power supply to your Govee Permanent Outdoor Lights 2 system is disconnected from the wall outlet.
2. **Disconnect Old Adapter:** Carefully unscrew and disconnect the existing power adapter from the control box of your Govee lights. Note the waterproof screw connector.
3. **Connect New Adapter:** Align the waterproof screw connector of the new Govee H1075 adapter with the port on the control box. Screw it on firmly until it is hand-tight and secure. Ensure the connection is snug to maintain its IP65 water resistance.
4. **Secure Cabling:** Route the adapter's power cord safely, avoiding tripping hazards or areas where it could be pinched or damaged.
5. **Power On:** Plug the adapter's power plug into a suitable outdoor-rated electrical outlet.
6. **Verify Functionality:** The lights should power on, and you should be able to control them via the Govee Home app (if applicable to your light model).

For optimal performance and safety, ensure all connections are clean and dry before assembly.

6. OPERATING THE ADAPTER

The Govee H1075 power adapter functions as a dedicated power supply for your Govee Permanent Outdoor Lights 2. Once properly connected and plugged into a power source, it continuously supplies the necessary electrical current to the light system.

The operation and control of the lights themselves (e.g., turning on/off, changing colors, setting schedules) are managed through the light system's control box and the Govee Home application, not directly by the adapter.

7. MAINTENANCE

- **Cleaning:** Periodically wipe the adapter and its cables with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners. Ensure the adapter is unplugged before cleaning.
- **Inspection:** Regularly inspect the adapter and its cords for any signs of damage, fraying, or wear. Check the waterproof connector for cracks or degradation.
- **Storage:** If storing the lights and adapter for an extended period, disconnect the adapter from the power source and the lights. Store in a cool, dry place away from direct sunlight.
- **Water Resistance:** The adapter is IP65 rated. Ensure the waterproof screw connector is always tightly secured when in use outdoors to maintain this rating.

8. TROUBLESHOOTING

If your Govee Permanent Outdoor Lights 2 are not functioning after connecting the H1075 adapter, consider the following:

- **No Power to Lights:**
 - Ensure the adapter is securely plugged into a working electrical outlet.

- Check if the outlet itself is receiving power (e.g., test with another device).
 - Verify that the waterproof screw connector between the adapter and the control box is fully tightened.
- **Lights Not Responding:**
 - This issue is typically related to the light system's control box or app, not the adapter itself. Refer to the instruction manual for your specific Govee Permanent Outdoor Lights 2 model for troubleshooting light control issues.
 - **Visible Damage:** If the adapter or its cables show any signs of physical damage, discontinue use immediately and contact Govee support for a replacement.

9. SPECIFICATIONS

Model Number	H1075
Brand	Govee
Indoor/Outdoor Usage	Outdoor
Special Feature	Corded
Item Weight	1.15 pounds (approx. 0.52 kg)
Package Dimensions	8.5 x 8 x 1.5 inches (approx. 21.6 x 20.3 x 3.8 cm)
Waterproof Rating (Adapter/Control Box)	IP65
Operating Temperature	-4°F to 140°F (-20°C to 60°C)

10. WARRANTY AND SUPPORT

For warranty information, technical support, or further assistance, please contact Govee Customer Service. You can typically find contact details on the official Govee website or through your purchase platform.

For more information about Govee products, visit the Govee Store.