



Manuals.plus /

› Transwon /

› Transwon Kids Case Instruction Manual for MXTAB101A, WPad6, MTAB-PRO2600, CloverTek G12, HAOVM G12, Topsand G12, Prosper Wireless G11 Tablets

Transwon Kids Case for MXTAB101A/WPad6/MTAB-PRO2600/G12/G11

Transwon Kids Case User Manual

Compatible with MXTAB101A, Headwolf WPad6, Memorex MTAB-PRO2600, CloverTek G12, HAOVM G12, Topsand G12, Prosper Wireless G11 Tablets

INTRODUCTION

This manual provides instructions for the Transwon Kids Case, designed to protect your compatible 10-inch tablet from accidental drops and bumps. It features a shockproof silicone construction, precise cutouts for full access to tablet functions, an anti-slip design, a 360-degree rotating stand, and a foldable handle for portability.

PRODUCT FEATURES

- **Premium Shockproof Silicone:** Absorbs impact from drops and bumps.
- **Precise Cutouts:** Ensures all tablet features and ports are accessible.
- **Anti-Slip Design:** Provides a secure grip and prevents accidental slipping.
- **360° Revolving Stand:** Allows for versatile vertical and horizontal viewing angles.
- **Foldable Handle:** Functions as a convenient grip for carrying and a stable kickstand.

COMPATIBILITY

This case is compatible with the following 10-inch tablet models:

- MXTAB101A Tablet
- Headwolf WPad6 Tablet 10
- Memorex MTAB-PRO2600 10.1 Tablet
- CloverTek G12 10.1-inch Tablet
- HAOVM G12 Tablet
- Topsand G12 Tablet
- Prosper Wireless G11 Tablet

To verify your tablet model, please check the back of your tablet or navigate to the 'About Tablet' section in

your tablet's settings.

SETUP AND INSTALLATION

Follow these steps to properly install your tablet into the Transwon Kids Case:

1. Ensure your tablet is clean and free of dust or debris.
2. Gently align your tablet with the case, ensuring the camera, ports, and buttons match the case's cutouts.
3. Carefully press the tablet into the case, starting from one corner and working your way around until the tablet is fully seated and secured within the silicone frame.
4. Verify that all buttons and ports are accessible and functional.



Image: The Transwon Kids Case with a tablet securely installed, showcasing the protective design and precise fit.

OPERATING INSTRUCTIONS

Using the Revolving Stand

The integrated 360-degree rotating stand allows for flexible viewing options. Simply rotate the circular ring on the back of the case to achieve your desired vertical or horizontal viewing angle. The stand securely holds your tablet in place.

360 degree rotating structure for flexible landscape and portrait viewing



Image: A diagram illustrating the 360-degree rotation capability of the stand, allowing for flexible orientation.

You can make it stand horizontally and vertically. Adjustable to any angles you like.



Image: The tablet case shown standing both horizontally and vertically, demonstrating the adjustable viewing angles provided by the kickstand.

Using the Multi-functional Grip/Handle

The foldable kickstand also serves as a convenient handle. Extend the kickstand and use it to securely hold and carry your tablet, providing an ergonomic grip for users of all ages.



Image: A hand holding the tablet case by its integrated foldable handle, demonstrating its use for carrying.

MAINTENANCE

To keep your Transwon Kids Case clean and in good condition:

- Wipe the case with a soft, damp cloth.
- Avoid using harsh chemicals or abrasive cleaners, as these may damage the silicone material.
- Ensure the case is completely dry before re-installing your tablet.

TROUBLESHOOTING

If you encounter any issues with your Transwon Kids Case, consider the following:

- **Case does not fit:** Double-check your tablet's model number against the compatible models listed in this manual. Ensure it is a 10-inch tablet.
- **Buttons are stiff/unresponsive:** Ensure the tablet is correctly seated within the case and that the case's button covers are aligned with the tablet's buttons.
- **Stand is loose:** Verify that the rotating mechanism is clean and free of debris. If the issue persists, contact customer support.

SPECIFICATIONS

Feature	Detail
Material	Premium Shockproof Silicone
Color	Black
Item Weight	9.1 ounces
Package Dimensions	10.04 x 6.89 x 0.79 inches
Form Factor	Case
Shell Type	Soft

WARRANTY AND SUPPORT

For any questions, concerns, or assistance regarding your Transwon Kids Case, please contact Transwon customer support. Refer to your purchase documentation for specific warranty details.

You can often find contact information on the seller's page or through the platform where the product was purchased.