

Potaroma Potaroma-P43-Lan

Potaroma Hide and Seek Interactive Cat Toy User Manual

Model: Potaroma-P43-Lan

1. INTRODUCTION

The Potaroma Hide and Seek Interactive Cat Toy (Model P43-Lan) is designed to stimulate your cat's natural hunting instincts through unpredictable motion and engaging sounds. This automatic toy provides entertainment and exercise for indoor cats of all breeds and ages, from kittens to adult cats. Its durable design and customizable play modes ensure long-lasting enjoyment and mental stimulation.

2. PRODUCT OVERVIEW

The Potaroma Hide and Seek Cat Toy features a moving feather that appears and disappears from under a durable fabric cover, mimicking prey. It includes smart motion activation, multiple play modes, and realistic mouse sounds to keep your cat engaged.

Key Features:

- **Interactive Hide & Seek Game Play:** Stimulates hunting instincts with a moving feather.
- **Smart Motion Sensor & Three Modes:** Touch-activated with Normal, Active, and Interactive speed settings.
- **Realistic Mouse Sounds:** Built-in speaker mimics a mouse's squeak to enhance play.
- **USB Rechargeable:** Large rechargeable battery provides long-lasting playtime with a 2-hour charge.
- **Durable & Safe Design:** Thickened, double-padded mat and easily replaceable feather wand.

Included Components:

- Main Toy Unit
- Fabric Cover (Floral pattern)
- Feather Wand (replaceable)
- USB-C Charging Cable

Interactive Hide and Seek Cat Toy

The prey hides and exposes alternately, stimulates cat's hunting instincts



Image: The Potaroma Hide and Seek Cat Toy in action with two cats.

3. SAFETY INFORMATION

- Always supervise your pet during play.
- Inspect the toy regularly for damage. Discontinue use if any part becomes loose or detached to prevent choking hazards.
- Keep the charging cable away from pets to prevent chewing or entanglement.
- This toy is designed for indoor use only.

4. SETUP INSTRUCTIONS

1. Charge the Toy:

Fully charge the main toy unit using the provided USB-C charging cable. The charging port is located on the main unit. A full charge typically takes approximately 2 hours. The red light will flash when the battery is low.

Simulated Mouse Sounds

No cat can resist the lure of a mouse's squeak



USB Rechargeable

Charging Time: 2 hours

Low Battery: **red light flashing**

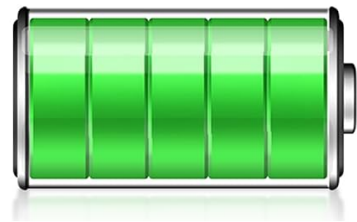


Image: Illustration of the USB charging port and battery indicator.

2. Install the Feather Wand:

Attach the feather replacement stick into the designated slot on the main unit. Ensure it snaps securely into place.

How to use it?



Step 1

Fully charge the toy

Step 2

Install the feather replacement stick



Step 3

Press the button to power it on

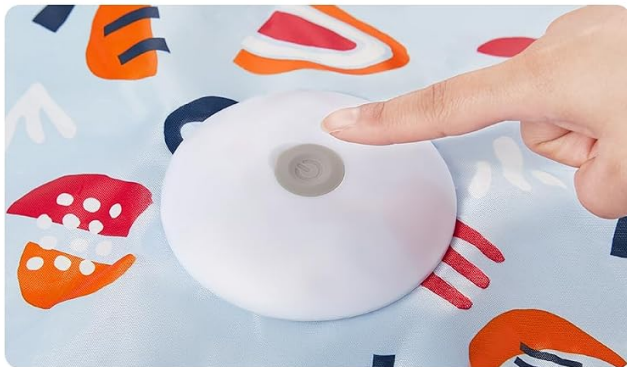


Image: Visual guide for installing the feather wand.

3. Place the Toy:

Place the toy on a flat, smooth surface. The compact design (approximately 27 inches wide) makes it suitable for various indoor spaces.

5. OPERATING INSTRUCTIONS

Power On/Off:

- Press the power button on the main unit to turn it on.
- Press and hold the power button to turn it off.

Selecting Play Modes:

The toy features three adjustable modes, indicated by different LED light colors:

- **Normal Mode (Blue Light):** Standard speed for regular play.
- **Active Mode (Purple Light):** Faster movement for more energetic cats.

- **Interactive Mode (Yellow Light):** Unpredictable movements to keep cats engaged.

Press the power button repeatedly to cycle through the modes.

3 Working Modes

The sweeping-around feather in the mat and mouse squeak stimulate cats to stalk and pounce



● Normal Mode



● Active Mode



● Interactive Mode

Image: Visual representation of the three working modes.

Mouse Sounds:

- The built-in speaker can mimic a mouse's squeak.
- To toggle the mouse sound on or off, press the power button twice quickly.

Smart Standby Feature:

- The toy is equipped with a smart off system. After 5 minutes of continuous play, it will enter sleep mode to conserve battery.
- To reactivate the toy, simply touch it.

Touch Activation, Smart Standby

Play anytime even when you're away



Runs for 5 min
before standby
each time

Image: Explanation of touch activation and smart standby.

6. MAINTENANCE

- **Cleaning:** Spot clean the fabric cover with a damp towel. Do not immerse the electronic unit in water.
- **Feather Replacement:** The feather wand is easily replaceable. Additional feather wands may be purchased separately.
- **Storage:** When not in use, store the toy in a dry place away from direct sunlight.

7. TROUBLESHOOTING

- **Toy not turning on:** Ensure the toy is fully charged. Connect it to the USB-C charging cable and allow it to charge for at least 2 hours.
- **Feather not moving:** Check if the feather wand is correctly installed and securely snapped into place. Ensure the battery is charged.
- **Mouse sound not working:** Press the power button twice quickly to toggle the sound feature.

- **Toy stops moving frequently:** The toy has a smart standby feature. Touch the toy to reactivate it. If it stops after short periods of play, the battery may be low and require charging.
- **Toy slides on smooth surfaces:** The unit does not have anti-skid features. For optimal play, place the toy on a carpeted surface or use a non-slip mat underneath.

8. SPECIFICATIONS

Feature	Detail
Brand	Potaroma
Model Number	Potaroma-P43-Lan
Product Dimensions	6.6 x 12.9 x 12.9 cm (Main Unit); 27 Inch Cover
Item Weight	0.32 Kilograms
Material	Fabric
Battery	1 Lithium Ion battery (included)
Charging Time	Approx. 2 hours
Battery Life (Frequent Use)	Approx. 3-4 days
Indoor/Outdoor Usage	Indoor
Target Species	Cat

9. WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the product packaging or contact Potaroma customer service directly. Keep your purchase receipt for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question