

[manuals.plus](#) /

› [Milex](#) /

› [Milex Smart 8L Air Fryer User Manual](#)

Milex Smart 8L Air Fryer

Milex Smart 8L Air Fryer User Manual

Model: Smart 8L Air Fryer



INTRODUCTION

This manual provides essential instructions for the safe and efficient operation of your Milex Smart 8L Air Fryer. Please read this manual thoroughly before first use and retain it for future reference.




Image: Front view of the Milex Smart 8L Air Fryer, showcasing its digital display and handle.

IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury.

- Do not immerse the appliance, cord, or plug in water or other liquids.
- Ensure the voltage indicated on the appliance corresponds to your local mains voltage.
- Supervise children when the appliance is in use. The air fryer includes a child-safe button for added protection.
- Do not operate the appliance if the plug, power cord, or the appliance itself is damaged.
- Keep the appliance away from hot surfaces and open flames.
- Allow adequate space around the appliance for proper ventilation.

- Unplug the appliance when not in use and before cleaning.
- Do not use accessories not recommended by the manufacturer.

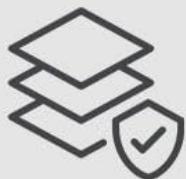

Enjoy healthier, more delicious meals with the Milex Smart 8L Air Fryer, thanks to its premium **non-stick coating** on the large basket, crisper plate, and pot

Image: The Milex Smart 8L Air Fryer highlighting the child-safe button feature on its control panel.

PRODUCT COMPONENTS

Familiarize yourself with the main parts of your Milex Smart 8L Air Fryer:

- **Main Unit:** Houses the heating element and control panel.
- **TFT Display:** Digital screen for program selection and settings.
- **Control Panel:** Touch controls for operation.
- **Handle:** For safely pulling out the basket.
- **Large Basket:** The primary cooking container with non-stick coating.
- **Crisper Plate:** Inserted into the basket to allow air circulation and crisping.

- **Non-Stick Pot:** The inner pot that holds the basket and crisper plate.
- **Air Outlet Vent:** Located at the rear for hot air exhaust.



Image: Close-up view of the air fryer's non-stick basket and crisper plate, highlighting the easy-to-clean design.

SETUP AND FIRST USE

1. **Unpacking:** Carefully remove all packaging materials and stickers.
2. **Cleaning:** Wash the basket, crisper plate, and pot with hot water, dish soap, and a non-abrasive sponge. Rinse thoroughly and dry completely. Wipe the main unit with a damp cloth.
3. **Placement:** Place the air fryer on a stable, heat-resistant surface, ensuring adequate space (at least 10 cm) around the back and sides for proper ventilation.
4. **Power Connection:** Plug the power cord into a grounded wall outlet.
5. **Initial Run (Optional but Recommended):** For the first use, run the air fryer empty for about 10-15 minutes at 180°C (350°F) to burn off any manufacturing residues. A slight odor may be present; this is normal.

OPERATING INSTRUCTIONS

General Operation

1. Place the crisper plate inside the basket, then insert the basket into the pot.
2. Place your food into the basket. Do not overfill.
3. Slide the pot and basket assembly back into the main unit until it clicks securely.
4. Press the power button on the TFT display to turn on the appliance.
5. Select a preset program or manually set the temperature and time using the touch controls.
6. Press the start button to begin cooking.
7. The 60-minute timer with auto shut-off will turn off the appliance once cooking is complete.
8. Carefully pull out the basket using the handle. Use heat-resistant tongs to remove food.

Using Preset Programs

The Milex Smart 8L Air Fryer features 6 preset programs for common dishes:



378 mm

466 mm

1700W

Motor Power

**220-240V,
50/60 Hz**

Voltage

Metallic

Housing material



Preset program



Timer

8L

Capacity

Image: The air fryer's TFT display illustrating the six preset cooking options: Fries, Prawns, Cake, Chicken, Steak, and Fish.

- **Fries:** Optimized for crispy potato fries.
- **Prawns:** Ideal for cooking shrimp and other small seafood.
- **Cake:** Suitable for baking small cakes or muffins.
- **Chicken:** For cooking chicken pieces or small whole chickens.
- **Steak:** Designed for various cuts of steak.
- **Fish:** Perfect for cooking fish fillets.

To use a preset, simply touch the corresponding icon on the TFT display. The air fryer will automatically set the recommended temperature and time. You can adjust these settings manually after selecting a preset if desired.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your air fryer.

1. **Before Cleaning:** Always unplug the air fryer and allow it to cool completely before cleaning.
2. **Basket, Crisper Plate, and Pot:** These parts have a non-stick coating. Wash them with hot water, mild dish soap, and a non-abrasive sponge. For stubborn food residue, soak them in hot soapy water for about 10 minutes before cleaning. **Note: These parts are NOT dishwasher safe.**
3. **Main Unit:** Wipe the exterior with a damp cloth. Do not use abrasive cleaners or immerse the main unit in water.
4. **Heating Element:** Use a cleaning brush to remove any food residue from the heating element inside the appliance.
5. **Storage:** Ensure all parts are clean and dry before storing the air fryer in a cool, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance not plugged in; power outlet not working; basket not fully inserted.	Check power cord connection; test outlet with another appliance; ensure basket is securely closed.
Food is not cooked evenly.	Basket is overcrowded; food not shaken/flipped during cooking.	Cook in smaller batches; shake or flip food halfway through cooking.
White smoke coming from the appliance.	Grease residue from previous use; high-fat food being cooked.	Clean the basket and pot thoroughly; remove excess oil from food before air frying.
Food is not crispy.	Too much moisture in food; insufficient cooking time/temperature.	Pat food dry before cooking; increase cooking time or temperature slightly.

TECHNICAL SPECIFICATIONS

Model Name	Smart 8L Air Fryer
Brand	Milex
Voltage/Frequency	220-240V ~ 50/60Hz
Power	1700W

Capacity	8 Liters
Housing Material	Full Metallic / Stainless Steel
Display Type	TFT (Thin-Film Transistor screen)
Preset Programs	6
Timer	60 minutes with auto shut-off
Dimensions (D x W x H)	46.6 cm x 37.8 cm x 37.6 cm
Item Weight	7.14 kg
Dishwasher Safe Parts	No



Image: Visual representation of the Milex Smart 8L Air Fryer's dimensions and key technical specifications.

WARRANTY AND SUPPORT

For warranty information, product support, or service inquiries, please refer to the warranty card included with your purchase or contact Milex customer service directly.

Contact Information: Please visit the official Milex website or refer to your purchase documentation for the most up-to-date contact details.

Spare part availability duration: Spare part information not available or provided.

	<p>Milex Extended Warranty Information and Product Eligibility</p> <p>Details on Milex products eligible for extended warranties, including warranty periods, registration requirements, exclusions, and care instructions. Covers models manufactured from 2024-2025.</p>
	<p>Milex Hurricane Air Fryer MAF001 Instruction Manual</p> <p>Comprehensive instruction manual for the Milex Hurricane Air Fryer (Model MAF001), detailing safety precautions, product parameters, operating instructions, and accessory usage for fat-free family meals.</p>
	<p>Milex 25L Rotisserie Air Fryer Instruction Manual</p> <p>Instruction manual for the Milex 25L Rotisserie Air Fryer, covering important safeguards, parts and accessories, features and benefits, operating instructions for various functions like air fry, rotisseries, steak, pizza, chicken, toast, bake, warm, and dehydrate, as well as care and cleaning, and warranty information.</p>
	<p>Milex Power Airfryer XXXL User Manual and Cooking Guide</p> <p>Comprehensive guide to the Milex Power Airfryer XXXL (Model MPA001), including features, safety precautions, operating instructions, cooking times, recipes, troubleshooting, and warranty information.</p>
	<p>Milex Nutri1200 Nutritional Blender Instruction Manual</p> <p>Comprehensive instruction manual for the Milex Nutri1200 Nutritional Blender, covering setup, safe operation, maintenance, and troubleshooting for optimal use.</p>
	<p>Milex Bread Master MBM001 Instruction Manual</p> <p>Comprehensive instruction manual for the Milex Bread Master MBM001, covering operation, safety, troubleshooting, ingredients, and recipes for homemade bread. Features include multiple programs, delay timer, and fruit/nut dispenser.</p>