

[Manuals.plus](#) /

› [Kaiser](#) /

› Kaiser KSW-7002 Portable Rechargeable Speaker User Manual

Kaiser KSW-7002

Kaiser KSW-7002 Portable Rechargeable Speaker User Manual

Model: KSW-7002

1. INTRODUCTION

Thank you for choosing the Kaiser KSW-7002 Portable Rechargeable Speaker. This device is designed to provide high-quality audio with versatile connectivity options, including Bluetooth, FM radio, USB, Micro SD, and AUX input. It also features integrated LED lights for an enhanced experience. Please read this manual carefully before using the product to ensure proper operation and to maximize its lifespan. Keep this manual for future reference.

2. SAFETY INFORMATION

- Do not expose the speaker to water, moisture, or extreme temperatures.
- Avoid dropping or subjecting the speaker to strong impacts.
- Do not attempt to disassemble or repair the unit yourself. Refer all servicing to qualified personnel.
- Keep the speaker away from heat sources and direct sunlight.
- Use only the provided charging cable or a certified equivalent.
- Ensure proper ventilation when operating the speaker.
- Do not block the speaker grille or vents.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- Kaiser KSW-7002 Portable Rechargeable Speaker
- USB Charging Cable
- Audio Cable (AUX)
- User Manual

4. PRODUCT OVERVIEW

Familiarize yourself with the speaker's components and controls.



Figure 4.1: Front View

The front of the speaker features the main 4-inch driver with an illuminated LED ring and the Kaiser logo.



Figure 4.2: Top Control Panel

This panel includes the microphone input, AUX input, USB port, Micro SD card slot, power switch, LED light button, previous/volume down, play/pause, next/volume up, and mode button.



Figure 4.3: Back View

The back of the speaker shows the product label with model information and power specifications.



Figure 4.4: Speaker Dimensions

The speaker measures approximately 26 cm in height, 17.5 cm in width, and 16.3 cm in depth.

5. SETUP

5.1 Initial Charging

Before first use, fully charge the speaker's internal battery. Connect the provided USB charging cable to the speaker's charging port and the other end to a USB power adapter (not included) or a computer's USB port. The charging indicator light will illuminate during charging and turn off or change color when fully charged.

5.2 Powering On/Off

To turn the speaker ON, slide the OFF/ON switch located on the top control panel to the 'ON' position. To turn it OFF, slide the switch to the 'OFF' position.

6. OPERATING INSTRUCTIONS

6.1 Mode Selection

Press the 'MODE' button on the control panel to switch between available modes: Bluetooth, FM Radio, USB, Micro SD, and AUX input.

6.2 Bluetooth Pairing

1. Turn on the speaker and select Bluetooth mode using the 'MODE' button. A voice prompt will indicate Bluetooth mode, and the LED indicator will flash.
2. Enable Bluetooth on your smartphone, tablet, or other Bluetooth-enabled device.
3. Search for available devices and select "KSW-7002" from the list.
4. Once paired, a confirmation tone will sound, and the LED indicator will stop flashing. You can now play audio wirelessly.

6.3 FM Radio Operation

1. Switch to FM Radio mode using the 'MODE' button.
2. Press and hold the 'Play/Pause' button to automatically scan and save available FM stations.
3. Use the 'Previous/Vol-' and 'Next/Vol+' buttons to navigate between saved stations.

6.4 USB/Micro SD Playback

1. Insert a USB flash drive or Micro SD card (with MP3 audio files) into the respective port.
2. The speaker will automatically switch to USB or Micro SD mode and begin playback. If not, press the 'MODE' button to select the correct source.
3. Use the 'Previous/Vol-' and 'Next/Vol+' buttons to skip tracks. Press 'Play/Pause' to pause or resume playback.

6.5 AUX Input

1. Connect one end of the provided audio cable to the AUX input port on the speaker.
2. Connect the other end to the audio output of your external device (e.g., MP3 player, laptop).
3. Switch to AUX mode using the 'MODE' button. Audio will now play through the speaker. Control playback from your external device.

6.6 Microphone Input

Connect a microphone (not included) to the 'MIC' input port on the control panel. Adjust the microphone volume as needed from the connected microphone or the speaker's main volume control.

6.7 LED Light Control

Press the 'LED' button on the control panel to cycle through different LED light modes or to turn the lights off.

6.8 KSR-LINK (Wireless Stereo Pairing)

The KSR-LINK feature allows you to connect two KSW-7002 speakers wirelessly for a stereo sound experience. Instructions for KSR-LINK pairing are typically found in a separate section or a more detailed manual. Please refer to the official Kaiser support resources for specific steps on how to use KSR-LINK.

7. CHARGING THE BATTERY

When the battery is low, the speaker may emit an audible warning or the LED indicator may change. Connect the USB charging cable to the speaker's charging port and a 5V USB power source. A full charge typically takes a few hours. Avoid overcharging the battery by disconnecting the charger once fully charged.

8. MAINTENANCE

8.1 Cleaning

Wipe the speaker with a soft, dry cloth. Do not use abrasive cleaners, waxes, or solvents. Avoid getting moisture into any openings.

8.2 Storage

If storing the speaker for an extended period, charge the battery to approximately 50% and store it in a cool, dry place. Recharge the battery every few months to maintain its health.

9. TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not turn on	Battery is depleted	Charge the speaker for at least 30 minutes.
No sound	Volume is too low	Increase volume on speaker and source device.
	Incorrect mode selected	Press 'MODE' to select the correct input source.
	Device not properly connected	Ensure Bluetooth is paired or cables are securely connected.
Bluetooth pairing fails	Speaker not in pairing mode	Ensure speaker is in Bluetooth mode and LED is flashing.
	Device too far	Move device closer to the speaker (within 10 meters).
	Interference	Turn off other Bluetooth devices nearby.
FM radio reception is poor	Weak signal	Relocate the speaker to an area with better reception.
	Interference	Ensure no electronic devices are causing interference.

10. SPECIFICATIONS

Feature	Specification
Model	KSW-7002
Brand	Kaiser
Speaker Size	4 inches
Maximum Output Power (PMPO)	3000 Watts
Connectivity Technology	Bluetooth, KSR-LINK
Wireless Technology	Yes
Bluetooth Range	10 meters
Audio Output Mode	Stereo
Control Method	Tactile buttons
Power Source	Battery
Compatible Devices	Smartphone, Tablet, Laptop, MP3 Player, FM Radio
Dimensions (D x W x H)	18.5 cm x 17.5 cm x 27 cm

Feature	Specification
Color	Black
Included Cables	USB charging cable, Audio cable

11. WARRANTY AND SUPPORT

11.1 Warranty Information

This Kaiser KSW-7002 speaker comes with a 90-day factory warranty. This warranty covers manufacturing defects from the date of purchase. Please retain your proof of purchase for warranty claims. The warranty does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

11.2 Customer Support

For technical assistance, warranty claims, or further inquiries, please contact Kaiser customer support through their official website or the retailer where the product was purchased. You may also visit the [Kaiser Brand Store on Amazon](#) for more information.

© 2026 Kaiser. All rights reserved. Specifications are subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DKW79YZ1>

More documents and user manuals: <https://manuals.plus/>