

Zogola 130EN

Zogola 130EN 51.18" Tall Fireproof Wall Safe Instruction Manual

Model: 130EN

1. INTRODUCTION AND SAFETY INFORMATION

This manual provides essential instructions for the safe and effective installation, operation, and maintenance of your Zogola 130EN 51.18" Tall Fireproof Wall Safe. Please read all instructions carefully before use and retain this manual for future reference.

Important Safety Precautions:

- Always keep emergency keys in a secure location outside the safe.
- Ensure the safe is securely mounted to prevent unauthorized removal.
- Do not store flammable liquids or materials inside the safe.
- Keep the safe out of reach of children to prevent accidental access.



Image 1.1: The Zogola 130EN Wall Safe, illustrating its sleek exterior and organized interior with various items stored.

2. PRODUCT FEATURES

The Zogola 130EN Wall Safe is designed for secure storage of valuables, featuring robust construction and thoughtful design elements.

- **Optimal Dimensions:** Exterior dimensions of 51.18" (H) x 4" (D) x 14.57" (W), designed to fit between standard 16" on-center wall studs.
- **Heavy-Duty Steel Construction:** Weighing 55 lbs, constructed from durable heavy-duty steel with a powder-coated, scratch-resistant black finish.
- **Enhanced Security:** Features two strong motorized deadbolt locking mechanisms to resist hand or power tool attacks.
- **Combination Lock System:** Offers dual access methods: emergency keys with a turning knob, and a programmable password with a turning knob.
- **Interior Protection:** The interior is lined with fleece to protect stored items from scratches.
- **Adjustable Storage:** Includes three removable shelves and key hooks for organized storage of cash,

jewelry, documents, and other valuables.

WALL SAFES BETWEEN THE STUDS



Image 2.1: Detailed view of the Zogola 130EN Wall Safe, highlighting its dimensions and the organized interior with various items.

FIREPROOF WALL SAFE



Image 2.2: Illustration of the Zogola 130EN Wall Safe's security features, including resistance to prying, drilling, and collision, emphasizing its anti-theft design.

3. SETUP AND INSTALLATION

The Zogola 130EN Wall Safe is designed for flush mounting between standard 16" on-center wall studs. Professional installation is recommended.

3.1 Required Tools (Not Included)

- Stud finder
- Level
- Measuring tape
- Drill with appropriate drill bits
- Saw (for cutting drywall/plaster)
- Screwdriver or wrench

3.2 Installation Steps

1. **Locate Studs:** Use a stud finder to locate two adjacent wall studs that are 16 inches on center. Mark the

center of each stud.

2. **Measure and Cut Opening:** Carefully measure the dimensions of the safe's body (excluding the front flange) and mark the opening on the wall. Ensure the opening is level and plumb. Cut the drywall or plaster along the marked lines.
3. **Insert Safe:** Gently slide the safe into the prepared opening. The front flange of the safe should sit flush against the wall surface.
4. **Secure with Expansion Bolts:** Use the provided expansion bolts to secure the safe to the wall studs. Drill pilot holes through the pre-drilled holes in the safe's frame and into the studs. Insert and tighten the expansion bolts until the safe is firmly anchored.
5. **Concealment:** The flush mount design allows for concealment behind framed artwork or other wall decor.



Image 3.1: Step-by-step diagram illustrating the process of wall mounting the Zogola 130EN Wall Safe using expansion bolts.

4. OPERATING INSTRUCTIONS

Your Zogola 130EN Wall Safe features a combination lock with emergency key override.

4.1 Initial Opening (Using Emergency Key)

1. Locate the emergency keyhole, typically concealed behind a badge or cover on the lock panel.
2. Insert the emergency key into the keyhole and turn it clockwise.
3. While holding the key turned, rotate the turning knob clockwise to open the safe door.
4. Once open, remove the key. Store emergency keys in a secure location away from the safe.

4.2 Setting Your Personal Combination

Refer to the specific instructions provided with your safe for detailed steps on programming your personal combination. This typically involves pressing a reset button inside the safe while the door is open, then entering your desired code on the keypad, and confirming it.

4.3 Opening with Combination Lock

1. Enter your programmed personal combination on the keypad.
2. If the code is correct, the lock will disengage (indicated by a light or sound).
3. Within a few seconds, rotate the turning knob clockwise to open the safe door.

4.4 Closing and Locking the Safe

1. Close the safe door firmly.
2. Rotate the turning knob counter-clockwise until it clicks into the locked position. The motorized deadbolts will engage automatically.

WARNING: Never keep the emergency keys inside the safe. If the batteries die or you forget your combination, you will not be able to open the safe without the emergency keys.

COMBINATION LOCK SAFE BOX



Image 4.1: Close-up of the Zogola 130EN Wall Safe's combination lock, showing the keypad for password entry and the emergency keyhole with turning knob.

5. MAINTENANCE

Regular maintenance ensures the longevity and proper functioning of your safe.

- **Cleaning:** Wipe the exterior with a soft, damp cloth. Avoid abrasive cleaners or solvents that could damage the finish.
- **Battery Replacement:** The safe requires batteries for the electronic lock. When the battery indicator light signals low power, replace the batteries immediately. Refer to the specific battery compartment location and type (usually AA batteries) in your safe's internal instructions.
- **Lock Mechanism:** Do not lubricate the lock mechanism. If the lock feels stiff, contact customer support.
- **Shelf Adjustment:** The three removable shelves can be adjusted or removed to accommodate items of various sizes. Simply lift and reposition them as needed.

REMOVABLE SHELF

The shelf can be installed or removed according to needs

With Shelf



Without Shelf

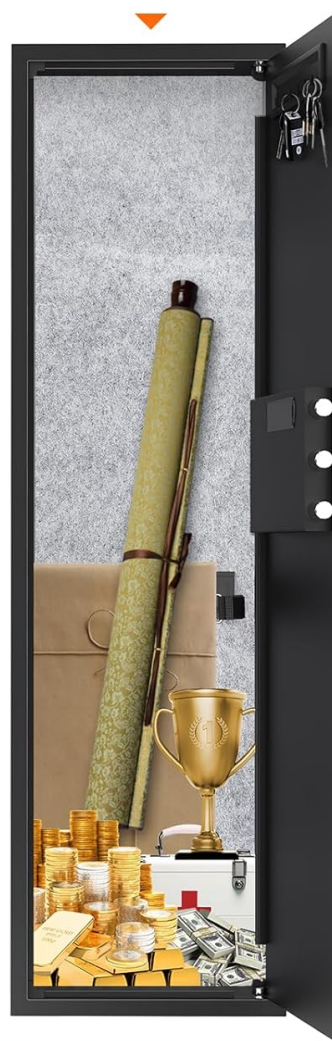


Image 5.1: The Zogola 130EN Wall Safe interior, demonstrating the flexibility of removable shelves for customized storage.

6. TROUBLESHOOTING

If you encounter issues with your Zogola 130EN Wall Safe, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Safe does not open with combination.	Incorrect combination entered; Low batteries; Lock malfunction.	Re-enter combination carefully. Replace batteries. Use emergency key to open.
Keypad is unresponsive.	Dead batteries.	Replace batteries.
Door does not close or lock properly.	Obstruction in door frame; Misalignment.	Check for any obstructions. Ensure safe is level and securely mounted.

If the problem persists after attempting these solutions, please contact Zogola customer support.

7. SPECIFICATIONS

Detailed specifications for the Zogola 130EN Wall Safe:

Feature	Detail
Brand	Zogola
Model Number	130EN
Product Dimensions (Exterior)	4"D x 14.57"W x 51.18"H
Lock Type	Mechanical Code Lock (Electronic Combination with Key Override)
Color	Black
Capacity	1.7 Cubic Feet
Material	Alloy Steel
Special Feature	Anti-Theft
Mounting Type	Wall Mount (Between 16" on-center studs)
Item Weight	54.9 pounds
Batteries Required?	Yes (Type not specified, typically AA)

8. WARRANTY AND SUPPORT

Zogola is committed to providing quality products and customer satisfaction.

If you have any questions, concerns, or require assistance with your Zogola 130EN Wall Safe, please contact our customer support team. We offer 24-hour online service to address your inquiries.

For the most up-to-date warranty information and contact details, please refer to the official Zogola website or the documentation included with your purchase.