

Fleafer c15

Fleafer c15 Digital Camera User Manual

Model: c15

1. INTRODUCTION

This manual provides essential instructions for the safe and effective use of your Fleafer c15 Digital Camera. Please read this manual thoroughly before operating the camera and retain it for future reference.

2. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- 1x Fleafer c15 Digital Camera
- 2x Lithium-Ion Batteries
- 1x 32GB TF Card (pre-installed or separate)
- 1x USB Cable (Type-C to USB-A)
- 1x Lanyard
- 1x Camera Bag

3. CAMERA OVERVIEW

Familiarize yourself with the camera's components:

FHD 1080P & 56MP

Advanced CMOS sensor for instant and decent image



16x Zoom




Auto Focus



2.8 Screen



Multiple filters

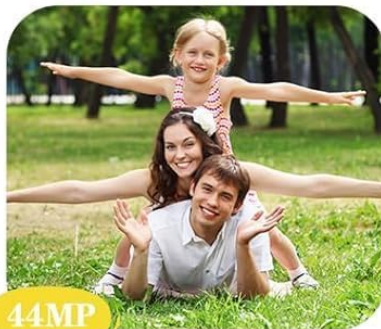

1920x1080 digital camera captures natural-color images that are quite enough for young photographer

Image: Front and back view of the Fleafer c15 Digital Camera, showing the lens, flash, and rear LCD screen with control buttons.

Key Components:

- **Lens:** Captures images and videos.
- **Flash:** Provides illumination in low-light conditions.
- **LCD Screen (2.8 inches):** Displays menus, live view, and playback.
- **Power Button:** Turns the camera on/off.
- **Shutter Button:** Takes photos or starts/stops video recording.

- **Mode Button:** Switches between photo, video, and playback modes.
- **Zoom Buttons:** Controls 16x digital zoom.
- **Menu Button:** Accesses camera settings.
- **USB-C Port:** For charging and data transfer.
- **MicroSD Card Slot:** For memory card insertion.

4. SETUP

4.1. Inserting the Battery

1. Open the battery compartment cover on the bottom of the camera.
2. Insert a fully charged Lithium-Ion battery, ensuring correct polarity.
3. Close the battery compartment cover securely.

4.2. Inserting the TF (MicroSD) Card

1. Locate the TF card slot, usually on the side or bottom of the camera.
2. Insert the 32GB TF card with the metal contacts facing down until it clicks into place.
3. To remove, gently push the card until it springs out.

4.3. Charging the Battery



Image: The Fleafer c15 camera connected to a laptop via its USB-C port, illustrating the charging and data transfer function. A battery icon shows charging status, and an SD card icon indicates storage.

1. Connect the camera to a power source (e.g., computer USB port or USB wall adapter) using the provided USB-C cable.
2. The charging indicator light will illuminate (often red) during charging.
3. The light will change color or turn off when charging is complete.

4.4. Initial Power On and Settings

1. Press and hold the Power button to turn on the camera.
2. If prompted, set the date and time using the navigation buttons and confirm.
3. Navigate through the menu to adjust basic settings like language, resolution, and exposure if desired.

5. OPERATING THE CAMERA

5.1. Taking Photos



Image: The camera's screen showing a father holding a child, highlighting 56MP photo and 1080P video modes. Icons for 16x zoom, auto focus, 2.8 inch screen, and multiple filters are also displayed.

1. Turn on the camera and ensure it is in Photo mode (indicated on the screen).
2. Frame your shot using the LCD screen.
3. Press the Shutter button fully to take a picture. The camera features 56MP resolution.

5.2. Recording Videos

1. Press the Mode button to switch to Video mode.
2. Press the Shutter button to start recording. A red indicator (REC) will appear on the screen.
3. Press the Shutter button again to stop recording. Videos are recorded in FHD 1080P.

5.3. Using Digital Zoom

2024 NEWEST 56MP DIGITAL CAMERA



Image: The camera showcasing its 16x digital zoom capability with example images at different zoom levels. Also shown are examples of various built-in color filters like Red, Black & White, Blue, and Yellow.

Use the zoom buttons (often marked 'W' for wide and 'T' for telephoto) to adjust the 16x digital zoom. Note that digital zoom may reduce image quality compared to optical zoom.

5.4. Special Features



Image: Demonstrates the continuous shooting feature with a sequence of snowboarders in mid-air. Below, the anti-shake function is illustrated with 'ON' and 'OFF' states showing the difference in image stability for a skier.

Type-C Charging & USB Transfer & 32GB Card

Use the included USB cable to connect the camera to the computer to view the pictures.



Image: Shows the self-timer function with options for 2s, 5s, and 10s. Other panels illustrate face recognition, smile detection, and the built-in fill light feature with 'ON' and 'OFF' examples.

- **Anti-Shake:** Helps reduce blur caused by camera movement. Activate this feature in the settings menu.
- **Face Recognition & Smile Detection:** The camera can automatically detect faces and smiles to optimize focus and exposure.
- **Continuous Shooting:** Take multiple photos in quick succession by holding down the shutter button.
- **Self-Timer:** Set a delay (e.g., 2s, 5s, 10s) before a photo is taken, allowing you to be in the shot.
- **Fill Light:** Use the built-in flash as a fill light in dark settings.
- **Time Stamp:** Enable or disable the date and time stamp on your photos via the menu.

6. TRANSFERRING FILES TO A COMPUTER

To transfer photos and videos from your camera to a computer:

1. Ensure the camera is powered off.
2. Connect the camera to your computer using the provided USB-C cable.
3. Turn on the camera. It should appear as a removable disk or device on your computer.
4. Open the camera's folder and copy the desired files to your computer.
5. Safely eject the camera from your computer before disconnecting the USB cable.

7. MAINTENANCE

- Keep the camera clean and free from dust and moisture.
- Use a soft, dry cloth to clean the camera body. For the lens, use a specialized lens cleaning cloth.
- Avoid dropping the camera or subjecting it to strong impacts.
- Store the camera in its bag when not in use.
- Charge batteries regularly, even if not in frequent use, to maintain battery health.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not turn on.	Battery is dead or incorrectly inserted.	Charge the battery or reinsert it correctly.
Cannot take photos/videos.	TF card is full, locked, or not inserted.	Delete files, unlock the card, or insert it correctly.
Images are blurry.	Camera shake, dirty lens, or subject too close.	Hold camera steady, clean lens, ensure proper distance, activate anti-shake.
Computer does not recognize camera.	Faulty USB cable or connection.	Try a different USB port or cable. Ensure camera is powered on after connecting.

9. SPECIFICATIONS

Feature	Detail
Model Name	c15
Maximum Still Resolution	56 MP
Video Resolution	1080p FHD (30 FPS)
Digital Zoom	16x
Screen Size	2.8 Inches LCD
Storage	32GB TF Card (included)
Battery Type	Lithium Ion (2 included)
Connectivity	USB (Type-C)
Image Stabilization	Digital
Photo Sensor Technology	CMOS
Item Weight	0.25 Kilograms
Supported File Format	JPEG, MP4
Special Features	Anti-shake, Face Recognition, Smile Detection, Continuous Shooting, Self-Timer, Fill Light

10. WARRANTY AND SUPPORT

The Fleafer c15 Digital Camera comes with a one-year satisfaction warranty and a no-hassle replacement policy. For any problems or questions regarding your camera, please contact the seller or manufacturer directly for assistance.