

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Contixo](#) /

> [Contixo K103 10-inch Android Kids Tablet User Manual](#)

Contixo K103

Contixo K103 10-inch Android Kids Tablet User Manual

Model: K103

INTRODUCTION

Welcome to the user manual for your new Contixo K103 10-inch Android Kids Tablet. This guide provides essential information for setting up, operating, maintaining, and troubleshooting your device. Please read this manual thoroughly to ensure proper use and to maximize your child's learning and entertainment experience.

For safety, always supervise young children during tablet use and ensure they follow recommended screen time guidelines.

PRODUCT OVERVIEW

The Contixo K103 is a 10-inch Android tablet designed for children aged 3-10, featuring robust parental controls and a durable kid-proof case.

Key Features

- **Display:** 10-inch IPS 1280x800 HD touchscreen for clear visuals.
- **Performance:** 2.0GHz octa-core CPU, 3GB RAM, and 32GB internal storage (expandable).
- **Operating System:** Android 13 for a modern and secure user experience.
- **Cameras:** 0.3MP front camera and 2MP rear camera for photos and video calls.
- **Battery:** 5000mAh battery providing up to 4 hours of playtime.
- **Protection:** Includes a durable kid-proof case with a built-in kickstand and pre-applied screen protectors.
- **Content:** Pre-loaded with 80 Disney e-books for educational entertainment.
- **Parental Controls:** Comprehensive tools to manage screen time, app access, and content.

Package Contents

Please check the box for the following items:

- Contixo K103 Kids Tablet
- Kid-Proof Protective Case with Kickstand
- USB Charging Cable
- Power Adapter
- User Manual (this document)

- Pre-applied Screen Protector



Image: Contixo K103 Kids Tablets in blue and pink, showcasing their protective cases and display content.

SETUP

1. Charging the Tablet

Before first use, fully charge the tablet. Connect the USB charging cable to the tablet's charging port and the power adapter. Plug the adapter into a wall outlet. The battery indicator on the screen will show charging status. A full charge typically takes 3-4 hours.

2. Powering On/Off

- **To Power On:** Press and hold the Power button (usually located on the side) for a few seconds until the Contixo logo appears.
- **To Power Off:** Press and hold the Power button until a menu appears. Select "Power off" and confirm.
- **To Restart:** From the power menu, select "Restart."

3. Initial Setup

Upon first power-on, the tablet will guide you through the initial setup process:

1. **Language Selection:** Choose your preferred language.
2. **Wi-Fi Connection:** Select your Wi-Fi network and enter the password to connect to the internet.
3. **Google Account:** Sign in with an existing Google account or create a new one. This is necessary for downloading apps from the Google Play Store and accessing Google services.
4. **Date & Time:** Set the correct date and time, or allow the tablet to set it automatically via network.
5. **Parental Control Setup:** You will be prompted to set up parental controls. It is highly recommended to configure these settings before allowing your child to use the tablet. Refer to the "Parental Controls" section for detailed instructions.

OPERATING INSTRUCTIONS

Basic Navigation

- **Tap:** Touch the screen once to open an app, select an item, or activate a button.
- **Tap & Hold:** Press and hold an item to access additional options or move it.
- **Swipe:** Drag your finger across the screen to scroll through pages, lists, or switch between home screens.
- **Pinch:** Use two fingers to zoom in or out on images and web pages.

Home Screen and Apps

The home screen displays your installed applications and widgets. Swipe left or right to navigate between multiple home screens. Tap the app icon to launch an application.

Contixo Academy



Image: The Contixo K103 tablet displaying the Contixo Academy educational app.

Connecting to Wi-Fi

1. Go to **Settings > Network & internet > Wi-Fi**.
2. Toggle **Wi-Fi On**.
3. Select your desired network from the list.
4. Enter the password if prompted and tap **Connect**.

Adjusting Settings

Access the tablet's settings by swiping down from the top of the screen to open the Quick Settings panel, then tap the gear icon, or find the "Settings" app icon on your home screen.

- **Display:** Adjust brightness, screen timeout, and font size.
- **Sound:** Control media volume, notification sounds, and ringtones.
- **Battery:** Monitor battery usage and enable power-saving modes.

- **Storage:** View storage usage and manage files.

PARENTAL CONTROLS

The Contixo K103 tablet includes robust parental control features to help you manage your child's tablet usage and ensure a safe digital environment. These controls are typically managed through a dedicated app or a section within the tablet's settings, often referred to as "Kids Spaces" or similar.

Accessing Parental Control Settings

Locate the "Parental Control" or "Kids Space" app icon on the home screen, or navigate through **Settings > Digital Wellbeing & parental controls**. You will likely need to set up a PIN or password to secure these settings from your child.

Key Parental Control Features

- **Screen Time Limits:** Set daily limits for tablet usage and schedule specific times when the tablet can be used.
- **App Management:** Select which apps your child can access. You can block or allow specific applications.
- **Content Filtering:** Filter web content and restrict access to inappropriate websites or media.
- **Activity Reports:** Monitor your child's tablet activity, including apps used and time spent.
- **Child Profiles:** Create separate profiles for different children, each with customized settings.

Parental Peace of Mind

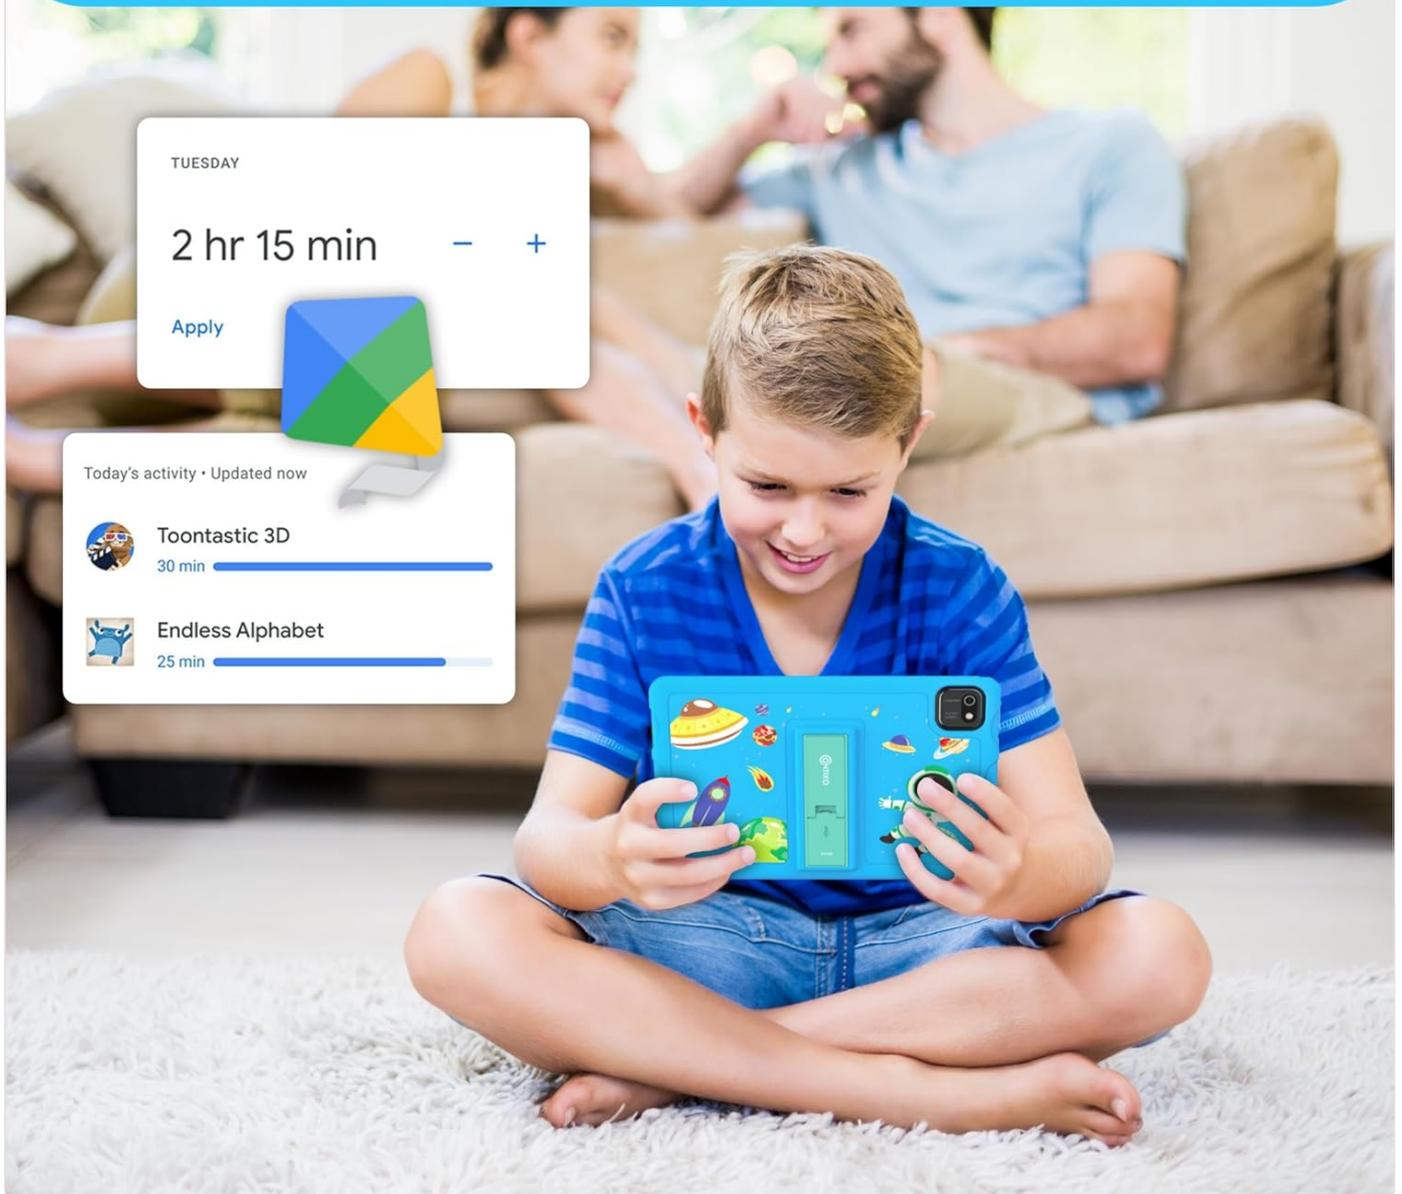


Image: Parental control interface demonstrating screen time management and app activity monitoring.

MEDIA & ENTERTAINMENT

Disney Storybooks

Your Contixo K103 tablet comes pre-loaded with 80 Disney e-books. These can be accessed through a dedicated app, often labeled "Disney Storybooks" or similar, on your child's profile. Encourage your child to explore these stories for an engaging reading experience.

Disney Magic



Image: Child engaging with Disney content on the Contixo K103 tablet.

Using the Camera

The tablet features a 0.3MP front camera and a 2MP rear camera. To use the camera:

1. Open the "Camera" app from the home screen.
2. Tap the camera icon to switch between front and rear cameras.
3. Tap the shutter button to take a photo or start/stop video recording.
4. Photos and videos are saved to the tablet's gallery.

MAINTENANCE

Cleaning the Tablet

Use a soft, lint-free cloth to gently wipe the screen and tablet body. Do not use harsh chemicals, abrasive cleaners, or excessive moisture. Ensure the tablet is powered off before cleaning.

Battery Care

- Avoid fully discharging the battery frequently.
- Do not expose the tablet to extreme temperatures.
- Use only the provided charging cable and adapter.

Software Updates

Periodically check for software updates to ensure optimal performance and security. Go to **Settings > System > System update**.

Storage Management

To free up storage space, you can uninstall unused apps, delete old photos/videos, or transfer files to a computer. The tablet supports expandable storage via a microSD card (sold separately).

TROUBLESHOOTING

Tablet Not Powering On

- Ensure the battery is charged. Connect the charger and wait a few minutes before attempting to power on.
- Try holding the Power button for 10-15 seconds to force a restart.

Wi-Fi Connection Issues

- Check if Wi-Fi is enabled in Settings.
- Ensure you have entered the correct Wi-Fi password.
- Restart your Wi-Fi router and the tablet.
- Try connecting to a different Wi-Fi network if available to rule out router issues.

Apps Crashing or Freezing

- Close and reopen the app.
- Clear the app's cache: Go to **Settings > Apps > [App Name] > Storage & cache > Clear cache**.
- Ensure the app is updated to the latest version from the Google Play Store.
- Restart the tablet.

Factory Reset (Last Resort)

Warning: A factory reset will erase all data on the tablet, including apps, photos, and settings. Back up important data before proceeding. Go to **Settings > System > Reset options > Erase all data (factory reset)**.

SPECIFICATIONS

Feature	Specification
Model	K103
Operating System	Android 13
Display Size	10 Inches
Display Resolution	1280 x 800 Pixels (HD IPS)
Processor	2.0GHz Octa-Core CPU

RAM	3GB
Internal Storage	32GB (expandable via microSD)
Front Camera	0.3MP
Rear Camera	2MP
Battery Capacity	5000mAh
Battery Life	Up to 4 hours (typical usage)
Wireless Connectivity	Wi-Fi (802.11g)
Dimensions (LxWxH)	10 x 6.8 x 0.4 inches
Item Weight	6 pounds (approximate)

WARRANTY AND SUPPORT

Contixo products are covered by a limited warranty. For specific warranty terms and conditions, please refer to the warranty card included in your product packaging or visit the official Contixo website. Keep your proof of purchase for warranty claims.

Customer Support

If you encounter any issues or have questions not covered in this manual, please contact Contixo customer support. Contact information can typically be found on the Contixo website or on the product packaging.

- **Online Support:** Visit the official Contixo website for FAQs, support articles, and contact forms.
- **Email Support:** Refer to your product documentation for the support email address.