

TPOB PLAY

TPOB Play Professional Barber Hair Trimmer Instruction Manual

Model: PLAY | Brand: TPOB

1. OVERVIEW

The TPOB Play Professional Barber Hair Trimmer is designed for precision hair cutting and detailing. Featuring a powerful 7000 RPM motor, this cordless trimmer operates quietly, allowing for precise control. It includes a Softy Blade with integrated oil reservoirs for prolonged lubrication, ensuring smooth performance and reduced maintenance.





Image: TPOB Play Professional Barber Hair Trimmer (Black + Green variant).

2. PACKAGE CONTENTS

Please verify that all items listed below are included in your package:

- TPOB Play Hair Trimmer (Black + Green)
- Charging Base
- Power Adapter

- Interchangeable Rubber Grips (Black, Pink)
- Blade Oil
- Cleaning Brush (typically located under the blade oil container)
- Screwdrivers (various sizes for blade adjustment)
- User Manual





Image: Unboxed TPOB Play Trimmer kit showing all included accessories.

Your browser does not support the video tag.

Video: Official TPOB Play Trimmer overview, demonstrating unboxing and key features.

3. SETUP

3.1 Initial Charging

Before first use, fully charge the trimmer. Place the trimmer onto the charging base, ensuring proper contact. The indicator light on the trimmer will illuminate to show charging status. A full charge typically takes approximately 2 hours and provides up to 3 hours of run time.

3.2 Blade Adjustment (Zero-Gapping)

The TPOB Play Trimmer comes with a precision blade. For advanced users requiring a closer cut, the blade can be zero-gapped using the included screwdrivers and gapping tool. Refer to the detailed instructions in the printed user manual for precise steps. Exercise caution during this process to avoid injury or damage to the blade.



Image: Close-up of the Softy Blade, highlighting its design.

3.3 Changing Grips

The trimmer includes interchangeable rubber grips (black and pink) to customize its appearance and feel. To change a grip, carefully slide off the existing grip and slide on the desired replacement. Ensure it is securely fitted.



Image: TPOB Play Trimmer with interchangeable grips and tools.

4. OPERATION

4.1 Powering On/Off

To turn the trimmer on, press the power button located on the front of the device. Press the button again to turn it off. The trimmer features a 7000 RPM motor for efficient cutting.

4.2 Usage

Hold the trimmer firmly and apply gentle pressure against the hair. Use smooth, even strokes for best results. The Softy Blade is designed for comfortable use, especially on sensitive skin, and its oil reservoirs help maintain blade lubrication during operation. The quiet motor allows for a more focused and precise trimming experience.

5. MAINTENANCE

5.1 Cleaning the Blade

After each use, turn off the trimmer and use the included cleaning brush to remove any loose hair from the blade and cutting head. For a more thorough cleaning, the blade can be carefully removed (refer to the user manual for instructions) and rinsed under running water. Ensure the blade is completely dry before reattaching.

5.2 Oiling the Blade

Regular oiling is crucial for maintaining blade sharpness and longevity. Apply a few drops of the provided blade oil to the teeth of the blade after every few uses, or as needed. Turn the trimmer on for a few seconds to distribute the oil evenly. The Softy Blade's oil reservoirs are designed to keep the blade lubricated longer.

5.3 Battery Care

To maximize battery life, avoid completely draining the battery before recharging. Store the trimmer in a cool, dry place when not in use.

6. TROUBLESHOOTING

- **Trimmer not turning on:** Ensure the battery is charged. Connect the trimmer to the power adapter and charging base.
- **Poor cutting performance:** Clean the blade thoroughly to remove any hair buildup. Apply blade oil. Check if the blade is properly aligned and secured.
- **Excessive noise or vibration:** This may indicate a need for blade cleaning and oiling. If the issue persists, ensure the blade is correctly attached.
- **Battery not holding charge:** Ensure the charging base and power adapter are functioning correctly. If the battery life has significantly decreased over time, it may be reaching the end of its lifespan.

If you encounter issues not covered here, please contact TPOB customer support.

7. SPECIFICATIONS

Feature	Specification
Model Number	PLAY
Motor Speed	7000 RPM
Power Source	Battery Powered (Cordless)
Battery Type	1 Lithium Ion battery (included)
Blade Material	Stainless Steel
Special Features	Softy Blade with Oil Reservoirs, Quiet Motor, Interchangeable Grips
Dimensions	7.6 x 6.93 x 4.17 inches
Weight	1.79 Pounds
Target Audience	Men (Professional Barber Use)

8. WARRANTY AND SUPPORT

For warranty information, product support, or to purchase replacement parts and accessories, please refer to the official TPOB website or contact their customer service department. Keep your proof of purchase for warranty claims.

Important Safety Information: Avoid contact with blades immediately after use. Keep fingers away from blades while in use. Keep kit away from young children to prevent choking hazards.