

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Generic W836692

Instruction Manual for Amana Washer Agitator Replacement

Brand: Generic | Model (Part Number): W836692

PRODUCT OVERVIEW

This document provides essential information for the installation, operation, and maintenance of the Generic replacement agitator for Amana washing machines. This agitator is designed to replace the original part in compatible Amana washer models, ensuring proper washing action and garment care.



Image: The replacement agitator, a white helical component designed for Amana washing machines.

COMPATIBILITY

This replacement agitator is compatible with the following Amana washer models:

- NTW4519JW0
- NTW4519JW1
- NTW4519JW2

To verify compatibility, please cross-reference your washing machine's model number with the list above. The model number is typically found on a label inside the washer lid, on the back of the machine, or on the control panel.

PACKAGE CONTENTS

The package includes the following item:

- 1x HE Agitator Replacement Part

INSTALLATION INSTRUCTIONS

Before beginning installation, ensure the washing machine is completely disconnected from its power source to prevent electrical shock. It is recommended to wear appropriate safety gear, such as gloves.

1. **Disconnect Power:** Unplug the washing machine from the electrical outlet. Turn off the water supply valves to the washer.
2. **Access Agitator:** Open the washer lid. Depending on your specific Amana model, you may need to remove a cap or fabric softener dispenser from the top of the existing agitator to expose the mounting bolt.
3. **Remove Old Agitator:** Use a socket wrench to loosen and remove the bolt securing the agitator. Once the bolt is removed, firmly pull the old agitator straight up and out of the wash tub. It may require some force or wiggling.
4. **Clean Tub and Shaft:** Inspect the agitator shaft and the bottom of the wash tub for any debris, lint, or detergent residue. Clean thoroughly to ensure a proper fit for the new agitator.
5. **Install New Agitator:** Carefully align the new replacement agitator with the splines on the agitator shaft at the bottom of the wash tub. Push the agitator down firmly until it seats properly.
6. **Secure Agitator:** Reinsert the mounting bolt and tighten it securely with the socket wrench. Do not overtighten. Replace any caps or dispensers that were removed.
7. **Reconnect Power:** Plug the washing machine back into the electrical outlet and turn on the water supply valves.
8. **Test Operation:** Run a short wash cycle without laundry to ensure the new agitator functions correctly and there are no unusual noises or movements.

If you encounter any difficulties or are unsure about any step, it is advisable to consult a qualified appliance technician.

OPERATION

Once installed, the agitator functions automatically as part of the washing machine's normal operation. It rotates and oscillates to create the necessary water currents and friction to clean laundry effectively. No specific user interaction with the agitator itself is required during a wash cycle.

MAINTENANCE

To ensure the longevity and optimal performance of your agitator and washing machine:

- **Regular Cleaning:** Periodically inspect the agitator and the wash tub for lint, hair, or small objects that may accumulate. Clean as needed to prevent blockages or damage.
- **Avoid Overloading:** Do not overload the washing machine, as this can put excessive strain on the agitator and other internal components.

- **Proper Detergent Use:** Use the recommended amount and type of detergent for your machine. Excessive detergent can lead to residue buildup.
- **Check for Wear:** If you notice any unusual noises, vibrations, or a decrease in washing effectiveness, inspect the agitator for signs of wear or damage.

TROUBLESHOOTING

This section addresses common issues related to the agitator. For broader washing machine issues, consult your appliance's main user manual.

Problem	Possible Cause	Solution
Agitator not moving or moving weakly	Loose mounting bolt; Worn transmission or drive block (not agitator issue); Overloaded washer.	Ensure agitator bolt is tight. Reduce load size. If problem persists, consult a technician as it may indicate a larger machine issue.
Loud noises during agitation	Object caught under agitator; Agitator not seated correctly; Worn internal components.	Remove agitator and check for foreign objects. Reinstall agitator ensuring it is fully seated. If noise continues, professional inspection may be needed.
Poor washing performance	Agitator fins worn; Overloading; Incorrect water level.	Inspect agitator for visible damage. Ensure proper load size and water level settings are used.

SPECIFICATIONS

Attribute	Detail
Part Number	W836692
Manufacturer	Generic
Color	As pictured (typically white)
ASIN	B0DL3GRF4T
First Available	October 26, 2024

CUSTOMER SUPPORT

If you have questions regarding the compatibility or installation of this agitator, please contact the seller or manufacturer for assistance. They are committed to resolving your inquiries within 24 hours.

For general washing machine repair or complex issues, it is always recommended to consult a certified appliance repair technician.