

Infinix Hot 10s

Instruction Manual for Generic Infinix Hot 10s Phone Case

Model: Infinix Hot 10s (X689B, X689, X689D)

PRODUCT OVERVIEW

This phone case is designed for the Infinix Hot 10s (models X689B, X689, X689D). It features a multi-layer construction with a PC backplate and a TPU soft shell for protection. Key functionalities include a telescopic ring stand, a sliding camera lens cover, and an integrated magnetic iron sheet for compatibility with magnetic car mounts.

INNOVATIVE, TELESCOPIC STAND

Stereo bracket, two-speed adjustment



Image: Front and back view of the pink phone case for Infinix Hot 10s.

SETUP: CASE INSTALLATION

1. **Clean your device:** Ensure your Infinix Hot 10s phone is clean and free of dust or debris before installation.
2. **Align the phone:** Gently align your phone with the case, ensuring the camera module and ports match the case cutouts.
3. **Insert the phone:** Press the phone firmly into the soft TPU shell, starting from one corner and working your way around until the phone is fully seated.
4. **Verify fit:** Check that all edges of the phone are securely covered by the case and that all buttons and ports are

accessible.

OPERATING INSTRUCTIONS

1. Using the Telescopic Ring Stand

The integrated ring stand provides hands-free viewing in both landscape and portrait orientations. It features a two-speed adjustment for different viewing angles.

- **To deploy:** Gently pull the ring stand outwards from the back of the case until it clicks into position.
- **Adjusting angle:** The stand can be adjusted to two stable angles (approximately 75° and 87°) by extending it further.
- **To retract:** Push the stand back into its recess until it is flush with the case.



Solid 75 °



Solid 87 °

Image: The telescopic ring stand shown at two different angles, 75 and 87 degrees, for varied viewing preferences.

HANDS-FREE STABLE KICKSTAND

For landscape and potrait viewing



Image: The phone case with its kickstand deployed, demonstrating stable viewing in both landscape and potrait orientations.



STEREO BRACKET

Vertical screen mode, two-speed adjustment

Selfie, live stream, chat with family members easily



Image: A phone in the case, standing vertically using the telescopic bracket, suitable for video calls or live streams.



selfie



live streaming



watch movie



office

Image: Various usage scenarios demonstrating the versatility of the phone case's stand, including for selfies, live streaming, watching movies, and office use.

2. Using the Camera Lens Slide Cover

The case includes a sliding cover to protect your phone's camera lenses from scratches and dust when not in use.

- **To open:** Gently slide the cover horizontally across the camera module until the lenses are fully exposed.
- **To close:** Slide the cover back until it completely covers the camera lenses. Ensure it clicks into place for secure protection.

SLIDER HOUSING WITHOUT GAPS

According to multiple tests and multiple adjustments, the sliding window and the shell are tight, and the sliding window is easy to slide but not loose



Image: Close-up view of the camera lens slide cover, demonstrating its movement to protect or expose the camera.

3. Magnetic Iron Sheet Functionality

An integrated magnetic iron sheet allows the case to securely attach to compatible magnetic car mounts, providing convenient hands-free navigation or media viewing while driving.

- **Usage:** Simply place the back of the phone case onto a magnetic car mount. The integrated magnet will hold the phone in place.
- **Compatibility:** Ensure your car mount is designed for magnetic attachment.

MAINTENANCE AND CARE

- **Cleaning:** To clean the case, wipe it with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials, as these may damage the case finish.
- **Storage:** Store the case in a cool, dry place away from direct sunlight when not in use to prevent material degradation.
- **Avoid extreme temperatures:** Do not expose the case to extreme heat or cold, as this can affect its material integrity.

TROUBLESHOOTING

- **Issue:** Ring stand feels loose or does not stay open.
Solution: Ensure the stand is fully extended to one of its two locking positions. If it remains loose, inspect for any debris obstructing the hinge mechanism.
- **Issue:** Camera slide cover is stiff or difficult to move.
Solution: Check for any dust or foreign particles in the sliding track. Gently clean the track with a soft, dry cloth. Avoid forcing the slide.
- **Issue:** Phone does not fit securely in the case.
Solution: Verify that the case model is correct for your Infinix Hot 10s (X689B, X689, X689D). Ensure the phone is properly aligned and pressed into all corners of the case.
- **Issue:** Magnetic car mount attachment is weak.
Solution: Ensure your car mount is strong enough and properly positioned. The integrated magnetic sheet is designed for standard magnetic mounts.

SPECIFICATIONS

Brand	Generic
Compatible Phone Models	Infinix Hot 10s (X689B, X689, X689D)
Material	Polyurethane (PC backplate + TPU soft shell)
Color	Pink
Additional Features	Telescopic Ring Stand, Sliding Camera Cover, Magnetic Iron Sheet
Water Resistance Level	Not Water Resistant
Item Dimensions	0.39 x 0.39 x 0.39 inches (approximate)
Manufacturer Part Number	yLTW-jD Infinix Hot 10s Pink
Included Components	1*Phone Case

WARRANTY INFORMATION

No specific warranty information is provided for this product. Please refer to the retailer's return policy for details on returns or exchanges.

CUSTOMER SUPPORT

For further assistance or inquiries regarding this product, please contact the seller directly through the platform where the purchase was made. No direct manufacturer support contact information is provided.

