

[Manuals.plus](#) /

> [Patikuin](#) /

> Patikuin 63" W Dresser TV Stand Instruction Manual

Patikuin FabricDresser_PHO_16OGGDQ5FpqJ25a

Patikuin 63" W Dresser TV Stand Instruction Manual

Model: FabricDresser_PHO_16OGGDQ5FpqJ25a

1. SAFETY INFORMATION

Please read and understand all safety instructions before assembly and use. Retain this manual for future reference.

- **Anti-Tip Kit:** Always secure the cabinet to the wall using the included anti-tip kit to prevent tipping and potential injury. This is crucial for households with children or pets.
- **Weight Capacity:** Do not exceed the maximum weight capacity of the top surface (110 lbs) or individual drawers (small drawers 18 lbs, large drawers 22 lbs). Overloading can cause structural damage or tipping.
- **Placement:** Place the dresser on a flat, level, and stable surface. Uneven surfaces can compromise stability.
- **Electrical Safety:** When using the integrated power outlets, ensure all connected devices are within their specified voltage and current limits. Do not overload the outlets. Keep liquids away from electrical components.

2. PACKAGE CONTENTS

Verify that all components are present before beginning assembly. If any parts are missing or damaged, contact customer support.

- 1 x 14 Drawers Dresser Frame and Top
- 1 x Accessory Kit (hardware, tools)
- 1 x Anti-Tip Kit
- 1 x Instructions Manual (this document)
- 14 x Fabric Drawers (various sizes)

3. SPECIFICATIONS

| | |
|---------------------------------------|---|
| Brand | Patikuin |
| Model Name | FabricDresser_PHO_16OGGDQ5FpqJ25a |
| Overall Dimensions (D x W x H) | 13.8" x 63" x 29.5" (35cm x 160cm x 75cm) |
| Number of Drawers | 14 |
| Material | Fabric Removable Drawers, Wood Table Top, Steel Frame |
| Item Weight | 43.4 Pounds (19.7 kg) |
| Mounting Type | Floor Mount |
| Power Outlets | Integrated 2 AC Outlets & 2 USB Ports |
| TV Size Compatibility | Up to 75 inches |

Note: Dimensions are approximate and may vary slightly.

4. SETUP AND ASSEMBLY

Assembly typically takes 30-45 minutes. Follow the included step-by-step instructions precisely. It is recommended to assemble the unit with two people for ease and safety.

4.1 Unpacking and Preparation

- Clear a spacious area for assembly.
- Carefully remove all components from the packaging.
- Identify and separate all hardware and frame pieces according to the parts list in the separate instruction sheet.

4.2 Assembly Steps

1. Assemble the steel frame structure according to the diagrams in the separate instruction sheet. Ensure all screws are tightened securely but do not overtighten.
2. Attach the wooden top panel to the assembled frame.
3. Insert the fabric drawers into their designated slots. Ensure the drawer handles are facing outwards.
4. Install the anti-tip kit to the back of the dresser and secure it to a wall stud using appropriate hardware. This step is critical for safety.
5. Adjust the floor caps at the bottom of the dresser to level the unit on uneven floors.

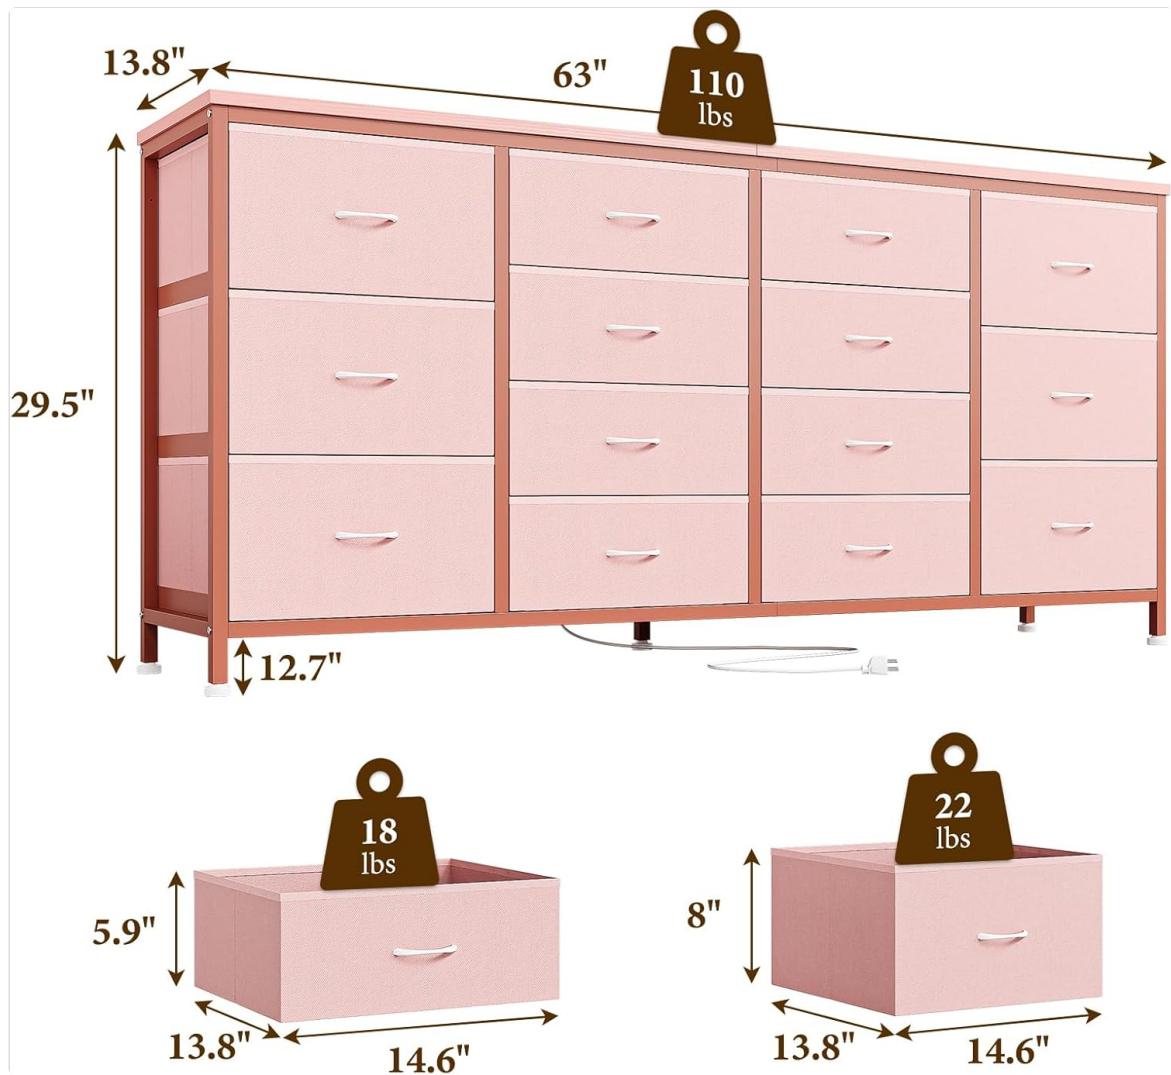


Figure 1: Product Dimensions and Drawer Capacities



Figure 2: Assembled Dresser TV Stand

5. OPERATING INSTRUCTIONS

5.1 Using the Drawers

The 14 fabric drawers are designed for smooth operation and organized storage. Each drawer can be pulled out and pushed in with ease. They are suitable for storing various items such as clothing, blankets, toys, media accessories, and more.



Figure 3: Organized Drawer Storage

5.2 Using the Integrated Power Outlets

The dresser features an integrated power strip with 2 AC outlets and 2 USB ports on the top surface. To use, plug the dresser's power cord into a standard wall outlet. You can then connect your electronic devices, such as TVs, media players, lamps, or charge mobile devices directly from the dresser.

- Ensure the power cord is fully inserted into the wall outlet.
- Do not exceed the maximum power rating of the integrated outlets.
- Unplug the dresser from the wall outlet when not in use or during electrical storms.



Figure 4: Integrated Power Outlets

6. MAINTENANCE

Regular maintenance will help prolong the life and appearance of your dresser.

- **Cleaning the Frame and Top:** Wipe the steel frame and wooden top with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners that could damage the finish.
- **Cleaning the Fabric Drawers:** The fabric drawers can be spot cleaned with a mild detergent and a damp cloth. Allow them to air dry completely before returning them to the dresser. Do not machine wash or tumble dry.
- **Hardware Check:** Periodically check all screws and fasteners to ensure they remain tight. Retighten if necessary to maintain stability.
- **Anti-Tip Kit:** Regularly inspect the anti-tip kit to ensure it is securely attached to both the dresser and the wall.

7. TROUBLESHOOTING

If you encounter any issues, refer to the following troubleshooting guide.

7.1 Dresser is Wobbly

- **Check Leveling Feet:** Ensure the adjustable floor caps are properly adjusted to compensate for uneven flooring.
- **Tighten Screws:** Verify that all assembly screws are securely tightened.
- **Anti-Tip Kit:** Confirm the anti-tip kit is correctly installed and secured to the wall.

7.2 Drawers Do Not Slide Smoothly

- **Check for Obstructions:** Ensure nothing is blocking the drawer's path within the frame.
- **Proper Insertion:** Make sure the fabric drawers are fully and correctly inserted into their respective slots.
- **Overloading:** Reduce the weight in the drawer if it is overloaded.

7.3 Power Outlets Not Working

- **Check Wall Outlet:** Ensure the dresser's main power cord is securely plugged into a functioning wall outlet. Test the wall outlet with another device.
- **Reset Breaker:** If the wall outlet is connected to a GFCI or circuit breaker, check if it has tripped.
- **Overload:** Disconnect some devices from the dresser's outlets to check for an overload.

8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the purchase documentation or contact the seller directly. Keep your proof of purchase for any warranty claims.