

[Manuals.plus](#) /

> [Patikuin](#) /

> Patikuin 63" White Dresser TV Stand with 14 Drawers and Power Outlets User Manual

Patikuin FabricDresser_PHO_16OGJD036bEd8

Patikuin 63" White Dresser TV Stand User Manual

Model: FabricDresser_PHO_16OGJD036bEd8

1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before assembly and use. Keep this manual for future reference.

- **Anti-Tip Kit:** Always use the included anti-tip kit to secure the dresser to a wall. This prevents accidental tipping, which is especially important in homes with children or pets.
- **Weight Capacity:** Do not exceed the maximum weight capacity of the top surface (110 lbs) or individual drawers (18 lbs for small drawers, 22 lbs for large drawers). Overloading can cause instability or damage.
- **Assembly:** Ensure all screws and fasteners are tightened securely during assembly. Periodically check and retighten if necessary to maintain stability.
- **Small Parts:** Keep small parts and packaging materials away from children during assembly to prevent choking hazards.
- **Placement:** Place the unit on a flat, level, and stable surface to prevent wobbling or tipping.

2. PACKAGE CONTENTS

Verify that all components listed below are present before beginning assembly. If any parts are missing or damaged, please contact customer support.

- Dresser Frame Components
- 14 Fabric Drawers (various sizes)
- Accessory Kit (screws, Allen wrench, etc.)
- Anti-Tip Kit
- Instruction Manual

3. ASSEMBLY INSTRUCTIONS

Assembly typically takes approximately 30 minutes. Follow these general steps for construction.

3.1 Before You Begin

- Unpack all components and lay them out on a clean, soft surface to prevent scratches.
- Identify each part by comparing it to the parts list in the accessory kit.
- Ensure you have enough space to assemble the unit comfortably.

3.2 Step-by-Step Assembly

1. **Assemble the Metal Frame:** Connect the metal bars and supports according to the diagrams provided in the accessory kit. Ensure all connections are secure but do not overtighten initially.
2. **Attach the Wooden Top:** Carefully place and secure the wooden top panel to the assembled metal frame using the provided screws.
3. **Insert Fabric Drawers:** Fold and assemble each fabric drawer. Slide the assembled drawers into their designated slots within the frame.
4. **Install Anti-Tip Kit:** Following the specific instructions in the anti-tip kit, secure the dresser to a wall. This is a critical safety step.
5. **Connect Power Cord:** Locate the power cord for the integrated outlets and ensure it is accessible for plugging into a wall socket.



Front view of the assembled Patikuin 63-inch white dresser TV stand.



Another front view of the dresser, showing the integrated power cord.

4. OPERATING INSTRUCTIONS

4.1 Using the Drawers

- Gently pull and push the fabric drawers to open and close them. Avoid forcing the drawers.
- Distribute items evenly within the drawers to prevent strain on the fabric and frame.
- The dresser features 14 drawers of varying sizes for organized storage of clothing, accessories, and other household items.

14 Fabric Drawers

Meets all your storage needs



80+



100+



120+



160+



100+



40+



140+



60+



The fabric drawers offer ample storage for various items.

4.2 Using the Power Outlets

- Plug the dresser's main power cord into a standard, grounded wall outlet.
- The integrated power strip on the top surface provides 2 AC outlets and 2 USB ports for convenient charging and powering of electronic devices.
- Connect devices such as televisions, media players, lamps, smartphones, and tablets to these outlets.
- Do not overload the power strip. Ensure the total wattage of connected devices does not exceed the rated capacity of the power strip.



Integrated power outlets for convenient device charging and powering.



The dresser functions as a TV stand, accommodating TVs up to 75 inches.

5. MAINTENANCE AND CARE

- **Cleaning:** Wipe the wooden top and metal frame with a soft, damp cloth. Avoid using abrasive cleaners or harsh chemicals, which can damage the finish. Fabric drawers can be spot cleaned with a mild detergent and allowed to air dry completely.
- **General Care:** Avoid prolonged exposure to direct sunlight and extreme temperature changes, as this can cause fading or warping. Do not place hot items directly on the wooden top surface without protection.
- **Stability Check:** Periodically check all screws and connections to ensure they remain tight. Retighten if any looseness is detected.


6. TROUBLESHOOTING

- **Unit wobbles or is unstable:** Ensure the dresser is placed on a flat, level surface. Check that all frame connections are securely tightened. Adjust the leveling feet (floor caps) on the bottom of the legs if present, to compensate for uneven floors.

- **Drawers do not slide smoothly:** Verify that the fabric drawers are correctly assembled and inserted into their respective slots. Ensure no items are obstructing the drawer's movement.
- **Power outlets are not working:** Check if the dresser's main power cord is securely plugged into a functional wall outlet. Test the wall outlet with another device to confirm it has power. Inspect the power strip on the dresser for any visible damage.

7. PRODUCT SPECIFICATIONS

Feature	Specification
Brand	Patikuin
Model Name	FabricDresser_PHO_16OGJD036bEd8
Material	Fabric Removable Drawers, Wood Table Top, Steel Frame
Color	White
Product Dimensions (D x W x H)	13.8" x 63" x 29.5"
Number of Drawers	14
Item Weight	43.4 Pounds
Maximum Top Weight Capacity	110 lbs
Maximum Small Drawer Capacity	18 lbs
Maximum Large Drawer Capacity	22 lbs
Required Assembly	Yes
Power Outlets	2 AC outlets, 2 USB ports

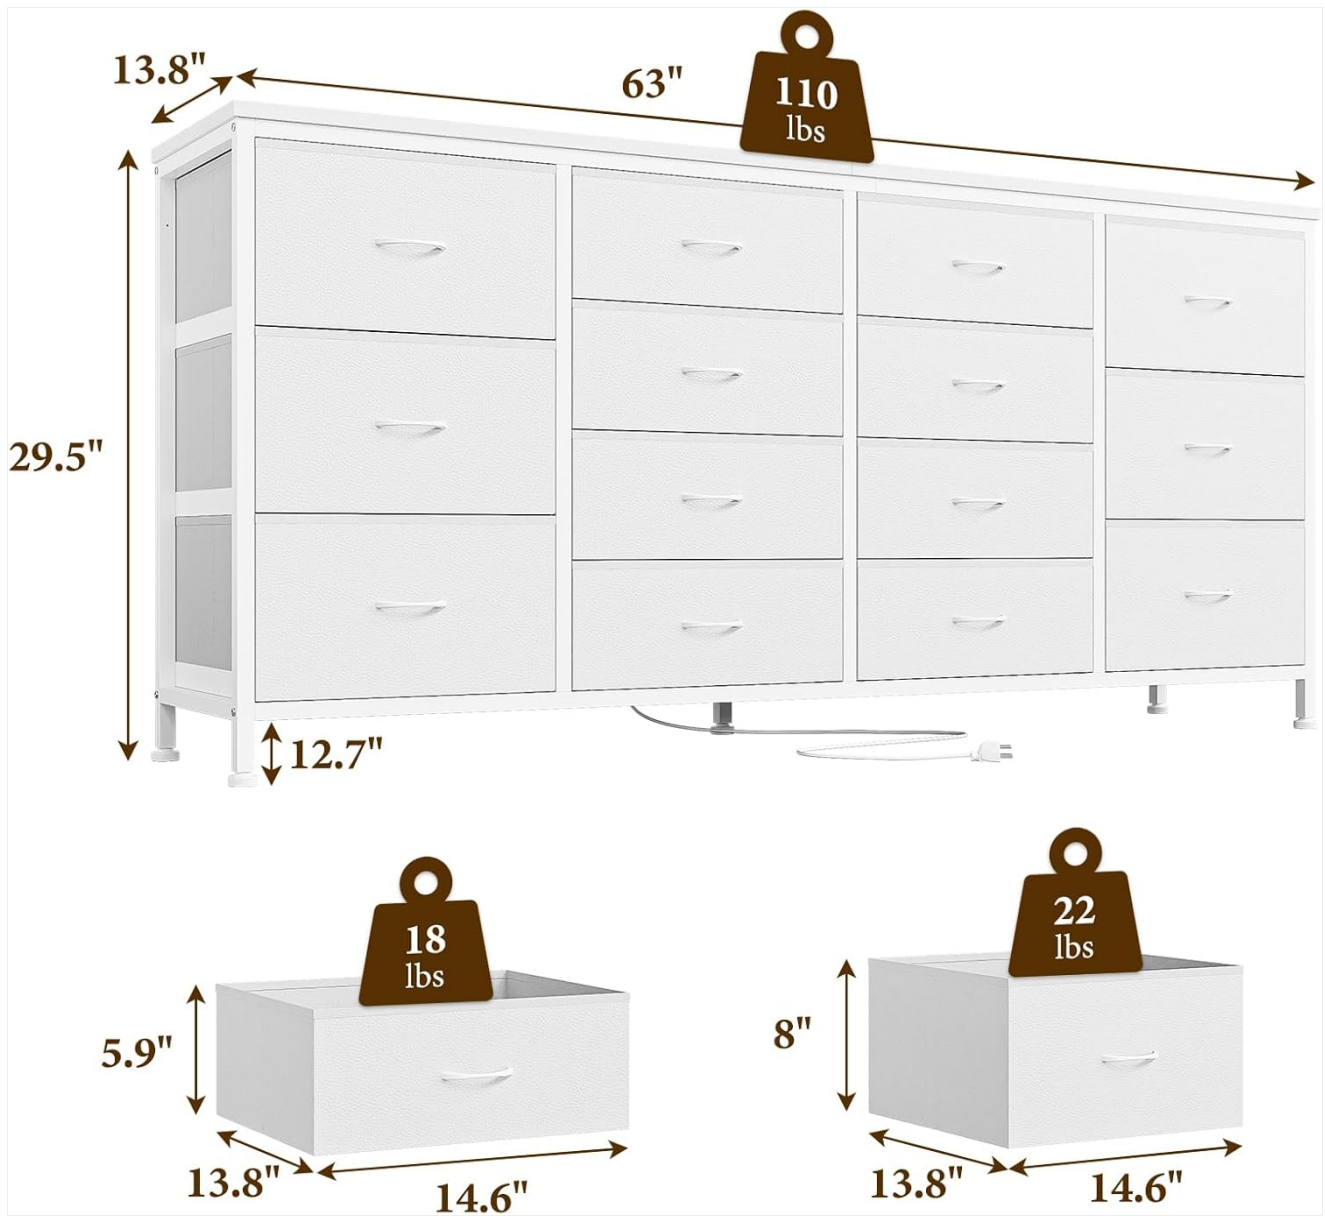

Detailed dimensions and weight capacities of the dresser.

8. WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the purchase documentation or contact the retailer where the product was purchased. You may also visit the official Patikuin website for further assistance.