

[manuals.plus](#) /› [Proscenic](#) /› [Proscenic P11 Mopping Cordless Wet Dry Vacuum Cleaner Instruction Manual](#)

## Proscenic P11 Mopping

# Proscenic P11 Mopping Cordless Wet Dry Vacuum Cleaner Instruction Manual

**MODEL: P11 MOPPING**

Brand: Proscenic

## 1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using this appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

### General Safety:

- This appliance is for household use only. Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not handle plug or appliance with wet hands.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without dust cup and/or filters in place.
- Turn off all controls before unplugging.

### Battery Safety:

- Recharge only with the charger specified by the manufacturer.
- Do not use a damaged battery pack or appliance.
- Do not modify or attempt to repair the appliance or the battery pack.
- Store the appliance indoors. Do not expose to freezing temperatures.

### Usage Safety:

- Do not vacuum liquids or wet materials without the mopping base attached and properly prepared.

- Ensure the water tank is correctly installed when using the mopping function.
- Do not use the appliance to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.

## 2. PRODUCT OVERVIEW

The Proscenic P11 Mopping Cordless Vacuum Cleaner is a versatile 2-in-1 appliance designed for both dry vacuuming and wet mopping. It features a powerful motor, an LED display, and a detachable mopping base for comprehensive floor care.

### Included Components:

- Main Body
- Battery (1)
- Telescopic Pipe
- Floor Brush
- 2-in-1 Dusting Brush
- Crevice Tool
- Air Inlet HEPA (2)
- Wall Mount
- Power Adapter
- Roller Brush
- Mopping Pad
- Water Tank
- User Manual

### Key Features:

- **Wet and Dry Cleaning:** Features a detachable mopping base with a 340 mL water tank for simultaneous vacuuming and mopping.
- **Powerful Suction:** Equipped with a 550W digital motor, providing up to 45kPa suction for effective cleaning on various surfaces.
- **Long Runtime:** 2,200 mAh \*8 detachable battery packs offer up to 50 minutes of runtime on a single charge.
- **LED Display:** Touchscreen display monitors battery level, three cleaning modes, and error messages.
- **LED Headlights:** Powerful LED lights on the floor brush illuminate hidden debris for thorough cleaning.
- **Versatile Attachments:** Easily converts to a handheld vacuum with a 2-in-1 dusting brush and crevice tool for cleaning various surfaces and tight spaces.
- **Flexible Design:** The telescopic pipe features a bending function to easily reach under furniture.





Figure 1: Proscenic P11 Mopping Cordless Vacuum Cleaner with all components.



Figure 2: The vacuum cleaner demonstrating its wet and dry cleaning capabilities on different floor types.



Figure 3: Close-up of the LED touchscreen display showing power level and cleaning modes.

### 3. SETUP

#### Assembly:

- 1. Attach the Battery:** Slide the battery pack onto the bottom of the main body's handle until it clicks securely into place.
- 2. Connect the Telescopic Pipe:** Insert one end of the telescopic pipe into the main body until it clicks.
- 3. Attach the Floor Brush:** Connect the floor brush to the other end of the telescopic pipe, ensuring it clicks into place.
- 4. Install Mopping Base (Optional):** If using the mopping function, attach the mopping base to the floor brush. Fill the water tank and attach the mopping pad.

#### Charging:

The detachable battery allows for flexible charging. You can charge the battery while it's attached to the main unit or separately. Use the provided power adapter and wall mount for convenient storage and charging.



Figure 4: The vacuum cleaner mounted on the wall charger, illustrating convenient storage and charging.

## 4. OPERATING INSTRUCTIONS

### Power On/Off and Mode Selection:

- Press the power button on the handle to turn the vacuum cleaner on or off.
- Use the LED touchscreen to select one of the three cleaning modes: Eco, Normal, or Turbo. The display will show the selected mode and remaining battery life.

### Dry Vacuuming:

For dry vacuuming, ensure the mopping base is detached or the water tank is empty. The LED headlights on the floor brush will illuminate the cleaning path, making it easier to spot dust and debris.



Figure 5: The LED headlights on the floor brush illuminating debris on a dark floor, enhancing visibility during cleaning.

### Wet Mopping:

To use the mopping function, fill the 340 mL water tank with clean water (and a compatible cleaning solution if desired) and attach it to the mopping base. Secure the mopping pad to the base. The vacuum will then simultaneously vacuum and mop your floors.

Your browser does not support the video tag.

Video 1: Demonstration of the Proscenic P11 Mopping vacuum cleaner in action, showcasing its wet and dry cleaning capabilities on various floor types.

Your browser does not support the video tag.

Video 2: A short preview of the Cordless Vacuum Mop Cleaner, highlighting its ease of use and effective cleaning.

### **Handheld Mode:**

Detach the telescopic pipe and attach the 2-in-1 dusting brush or crevice tool directly to the main body for handheld cleaning of upholstery, car interiors, or hard-to-reach areas.



Figure 6: The main body of the vacuum cleaner used in handheld mode with an attachment for detailed cleaning.

## **5. MAINTENANCE**

### **Emptying the Dustbin:**

To empty the dustbin, press the release button on the side of the main body. The dustbin will detach, allowing you to easily dispose of collected debris. The large capacity dustbin minimizes the frequency of emptying.



Figure 7: A hand demonstrating how to easily detach and empty the dustbin with a single button press.

### **Cleaning Filters:**

The vacuum cleaner includes washable HEPA filters. Regularly remove and clean the filters under running water. Ensure they are completely dry before reinserting them into the appliance to maintain optimal suction performance.



Figure 8: A person cleaning the washable HEPA filter under running water, ensuring proper maintenance.

### Cleaning Roller Brush and Mopping Pad:

The roller brush can be easily removed for cleaning. Clear any tangled hair or debris. The mopping pad should be removed and washed after each use to prevent odors and maintain hygiene.



Figure 9: Close-up of the removable roller brush, showing how it can be detached for easy cleaning and maintenance.

### Water Tank Maintenance:

After mopping, empty any remaining water from the tank and rinse it thoroughly. Allow the tank to air dry completely before storing to prevent mold or mildew buildup.



Figure 10: A person rinsing the large capacity dustbin under a faucet, demonstrating easy cleaning of the tank.

## 6. TROUBLESHOOTING

If you encounter any issues with your Proscenic P11 Mopping Cordless Vacuum Cleaner, please refer to the table below for common problems and their solutions.

Problem	Possible Cause	Solution
No power/Does not turn on	Battery not charged or improperly installed	Ensure battery is fully charged and correctly inserted.
Weak suction	Dustbin full, filter clogged, or blockage in nozzle/pipe	Empty dustbin, clean filters, check for and remove blockages.
Mopping function not working	Water tank empty or improperly installed, mopping pad dry	Fill water tank, ensure it's correctly attached, wet the mopping pad.
Roller brush not rotating	Hair/debris tangled in brush, brush improperly installed	Remove and clean roller brush, ensure it's correctly reinstalled.
LED display shows error message	Specific error indicated on display	Refer to the user manual's dedicated troubleshooting section for specific error codes.

## 7. SPECIFICATIONS

Feature	Detail
Brand	Proscenic
Model Name	P11 Mopping
Special Feature	Cordless, Headlight, High Power, Rechargeable, Wet/Dry
Filter Type	HEPA Filter
Is Cordless?	Yes
Capacity (Dustbin)	650 Milliliters
Capacity (Water Tank)	340 Milliliters
Wattage	550 watts
Suction Power	45Kpa
Form Factor	Handheld
Color	Pink
Product Dimensions	13" L x 4.7" W x 9" H

Feature	Detail
Battery Life	Up to 50 minutes
Item Weight	4.29 pounds
Number of Power Levels	3
Surface Recommendation	All floors
Power Source	Battery Powered

## 8. WARRANTY AND SUPPORT

Proscenic offers comprehensive customer support and warranty services for its products. For detailed warranty information, product registration, or technical assistance, please refer to the official Proscenic website or contact their customer service directly.

Please retain your proof of purchase for any warranty claims.

### EXPERT SUPPORT TEAM



24/7 Email Assistance



Instant Live Chat Support



Professional Product Tutorials



Lifetime Technical Support



Figure 11: An illustration of the Proscenic expert support team, highlighting available support channels like 24/7 email assistance, live chat, product tutorials, and lifetime technical support.


### Related Documents - P11 Mopping

 <p>PROSCENIC P11 MOPPING Cordless Vacuum Cleaner <b>Owner's manual</b></p> <p>Proscenic Technology Co., Ltd. We are always here to help you get better after sale guarantee www.proscenic.com We are always here to protect your right www.proscenic.com</p>	<p><a href="#"><u>Proscenic P11 Mopping Cordless Vacuum Cleaner: Owner's Manual &amp; Guide</u></a></p> <p>Comprehensive owner's manual for the Proscenic P11 Mopping Cordless Vacuum Cleaner, detailing setup, operation, maintenance, and troubleshooting for optimal performance.</p>
 <p>PROSCENIC P11 MOPPING Cordless Vacuum Cleaner <b>Owner's manual</b></p> <p>Proscenic Technology Co., Ltd. We are always here to help you get better after sale guarantee www.proscenic.com We are always here to protect your right www.proscenic.com</p>	<p><a href="#"><u>Proscenic P11 Mopping Cordless Vacuum Cleaner Owner's Manual</u></a></p> <p>Owner's manual for the Proscenic P11 Mopping Cordless Vacuum Cleaner, covering safety, assembly, operation, maintenance, and troubleshooting for effective home cleaning.</p>
 <p>PROSCENIC P11 MOPPING Cordless Vacuum Cleaner <b>Owner's manual</b></p> <p>Proscenic Technology Co., Ltd. We are always here to help you get better after sale guarantee www.proscenic.com We are always here to protect your right www.proscenic.com</p>	<p><a href="#"><u>Proscenic P11 MOPPING Cordless Vacuum Cleaner Owner's Manual</u></a></p> <p>Comprehensive owner's manual for the Proscenic P11 MOPPING Cordless Vacuum Cleaner, covering setup, operation, maintenance, troubleshooting, and specifications. Features include detailed instructions, safety precautions, and customer support information.</p>
 <p>PROSCENIC Wash Vac F20 Cordless Wet Dry Vacuum Cleaner <b>Owner's manual</b></p> <p>Proscenic Technology Co., Ltd. We are always here to help you get better after sale guarantee www.proscenic.com We are always here to protect your right www.proscenic.com</p>	<p><a href="#"><u>Proscenic Wash Vac F20 Cordless Wet Dry Vacuum Cleaner Owner's Manual</u></a></p> <p>This owner's manual provides instructions for the Proscenic Wash Vac F20 Cordless Wet Dry Vacuum Cleaner, covering safety precautions, product information, operation, maintenance, and troubleshooting.</p>



## Proscenic P11 Mopping Cordless Vacuum Cleaner Owner's Manual

This owner's manual provides instructions for the Proscenic P11 Mopping Cordless Vacuum Cleaner, covering safety precautions, product overview, assembly, operation, maintenance, and troubleshooting.

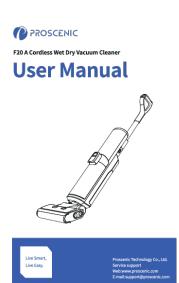

[Proscenic F20 A Cordless Wet Dry Vacuum Cleaner User Manual](#)

User manual for the Proscenic F20 A Cordless Wet Dry Vacuum Cleaner. Covers setup, operation, maintenance, and troubleshooting for optimal cleaning performance. Includes safety precautions and product specifications.