



Manuals.plus /

› SUPERLEX /

› SUPERLEX 12-Cup Programmable Drip Coffee Maker SCM User Manual

## SUPERLEX SCM

# SUPERLEX 12-Cup Programmable Drip Coffee Maker SCM User Manual

Model: SCM

## INTRODUCTION

---

Thank you for choosing the SUPERLEX 12-Cup Programmable Drip Coffee Maker. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read these instructions thoroughly before first use and keep them for future reference. This coffee maker is designed to brew up to 12 cups (1.5 liters) of coffee, featuring a programmable timer for scheduled brewing, an automatic shut-off function for safety, and a warming plate to keep your coffee hot.

## IMPORTANT SAFETY INSTRUCTIONS

---

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before operating the coffee maker.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the coffee maker in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off," then remove plug from wall outlet.

- Do not use appliance for other than intended use.
- The carafe is designed for use with this appliance only. It must never be used on a range top.
- Do not place a hot carafe on a cold or wet surface.
- Do not use a cracked carafe or a carafe having a loose or weakened handle.
- Do not clean carafe with cleansers, steel wool pads, or other abrasive materials.

## PACKAGE CONTENTS

---

Please check the package contents to ensure all items are present and in good condition:

- SUPERLEX Coffee Maker Unit
- Glass Carafe (1.5L / 12-cup capacity)
- Reusable Filter Basket
- Measuring Spoon
- User Manual

## PRODUCT DIAGRAM

---



Front view of the SUPERLEX coffee maker, highlighting its warming plate feature to keep coffee hot after brewing.

1. Water Reservoir Lid
2. Water Reservoir with Level Indicator
3. Shower Head
4. Filter Basket Holder
5. Reusable Filter Basket
6. Glass Carafe
7. Warming Plate
8. Control Panel with Digital Display
9. Power Cord

## SETUP

---

### 1. Unpacking

- Carefully remove all packaging materials from the coffee maker.
- Place the coffee maker on a flat, stable, heat-resistant surface.
- Ensure the power cord is not tangled or obstructed.

### 2. First Use Cleaning

Before brewing coffee for the first time, it is recommended to run a full cycle with only water to clean the internal components.

- Fill the water reservoir with clean water up to the MAX fill line.
- Place the empty reusable filter basket into its holder.
- Place the empty glass carafe on the warming plate.
- Plug the coffee maker into a standard electrical outlet.
- Press the M/A button to start a brewing cycle.
- Once the cycle is complete, discard the water from the carafe and rinse the carafe and filter basket.



# Filterkaffeemaschine



*The SUPERLEX coffee maker ready for use on a kitchen countertop.*

## OPERATING INSTRUCTIONS

---

### 1. Brewing Coffee

1. Open the water reservoir lid and fill the reservoir with fresh, cold water to your desired level, indicated by the markings on the side. Do not exceed the MAX fill line.
2. Place the reusable filter basket into its holder.
3. Add your desired amount of ground coffee into the filter basket. A general guideline is one level measuring spoon (approximately 5-7 grams) per cup. Adjust to taste.
4. Close the water reservoir lid.
5. Place the empty glass carafe on the warming plate.
6. Plug the coffee maker into a standard electrical outlet. The digital display will illuminate.
7. Press the **M/A** button to start brewing immediately. The red indicator light will turn on, and brewing will begin.
8. The coffee maker features an anti-drip function, allowing you to temporarily remove the carafe during brewing to pour a cup. Replace the carafe within 20 seconds to prevent overflow.
9. Once brewing is complete, the coffee maker will automatically switch to the warming function,

keeping the coffee hot for 40 minutes before automatically shutting off for safety.



# 1,5l Kapazität



12 TASSEN

*A hand pouring freshly brewed coffee from the 1.5-liter glass carafe into a cup, demonstrating the large 12-cup capacity.*

## **2. Setting the Programmable Timer**

The programmable preset function allows you to set a specific time for the coffee maker to start brewing automatically.



### Automatisches Brühen



Drücken Sie zuerst die "Pro"-Taste  
Das Wort "PROGRAM" wird angezeigt



Verwenden Sie die Tasten "HEURE"  
und "MIN", um die Uhrzeit einzustellen



Wenn auf dem LCD die vorein-  
gestellte Zeit angezeigt wird,  
leuchtet das rote Licht auf und  
der Brühvorgang beginnt

### Direktes Aufbrühen



Drücken Sie einfach die Taste "M/A"  
für sofortiges Aufbrühen



Voreingestellter Modus, gelbe  
Kontrollleuchte an



Das rote Licht leuchtet und die  
Kaffeemaschine läuft

Detailed view of the digital display and control buttons (PRO, HEURE, MIN, M/A) for setting the programmable timer and initiating direct brewing.

1. Prepare the coffee maker with water and coffee grounds as described in steps 1-5 of "Brewing Coffee".
2. Press the **PRO** button. The word "PROGRAM" will appear on the display.
3. Use the **HEURE** (Hour) and **MIN** (Minute) buttons to set your desired brewing start time.
4. Once the desired time is set, the yellow indicator light will turn on, confirming the preset mode is active. The red light will illuminate when the brewing process begins at the programmed time.
5. The coffee maker will automatically start brewing at the set time.

## CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the life of your coffee maker.

### 1. Daily Cleaning

- Always unplug the coffee maker before cleaning and allow it to cool completely.
- Wash the glass carafe and reusable filter basket in warm, soapy water. Rinse thoroughly and dry. These parts are also top-rack dishwasher safe.
- Wipe the exterior of the coffee maker with a soft, damp cloth. Do not use abrasive cleaners or

scouring pads.

- Do not immerse the coffee maker unit in water or any other liquid.



## WASCHBARER FILTER

Filtration verbessert den  
Geschmack Ihres Kaffees.

*A hand demonstrating the removal of the reusable filter basket, emphasizing its easy-to-clean design.*

# LEICHT ZU REINIGEN.

Der abnehmbare und wiederverwendbare Filterkorb lässt sich zur Handhabung und Reinigung leicht anheben



*A hand rinsing the reusable coffee filter under running water, illustrating the ease of cleaning for maintenance.*

## 2. Descaling (Mineral Deposit Removal)

Mineral deposits (calcium) can build up in your coffee maker over time, affecting its performance. Descale your coffee maker every 2-3 months, or more frequently if you have hard water.

- Fill the water reservoir with a mixture of white vinegar and water (1 part vinegar to 2 parts water).
- Place the empty reusable filter basket and carafe in position.
- Run a full brewing cycle with the vinegar solution.
- After the cycle, turn off the coffee maker and let it stand for 15 minutes.
- Discard the solution from the carafe.
- Fill the water reservoir with clean water and run at least two full brewing cycles with only water to rinse out any remaining vinegar taste.

## Fortschrittlicher Duschkopf

Die Extraktions-  
wirkung ist  
**dreimal**  
so hoch wie bei  
anderen  
Kaffeemaschinen.

*A close-up of the advanced shower head, designed to evenly saturate coffee grounds for enhanced flavor extraction.*

### TROUBLESHOOTING

---

If you encounter issues with your coffee maker, refer to the following table for common problems and solutions:

Problem	Possible Cause	Solution
Coffee does not brew.	No power; Water reservoir empty; Carafe not properly placed; Programmed time not reached.	Check power connection; Fill water reservoir; Ensure carafe is centered on warming plate; Wait for programmed time or press M/A for immediate brew.
Coffee is too weak or too strong.	Incorrect coffee-to-water ratio; Coffee grind size.	Adjust amount of coffee grounds; Use medium grind for drip coffee makers.
Water overflows from filter basket.	Too much coffee grounds; Filter basket clogged; Carafe removed for too long.	Reduce coffee grounds; Clean filter basket; Replace carafe quickly after pouring.
Coffee tastes bad.	Old coffee grounds; Unclean coffee maker; Poor water quality.	Use fresh coffee grounds; Clean coffee maker regularly, including descaling; Use filtered water.
Machine leaks.	Water reservoir overfilled; Carafe not properly placed.	Do not exceed MAX fill line; Ensure carafe is correctly positioned.

## SPECIFICATIONS

Feature	Specification
Brand	SUPERLEX
Model Number	SCM
Capacity	1.5 Liters (12 Cups)
Power	600 Watts
Voltage	220 Volts
Material	Stainless Steel, ABS Plastic, Borosilicate Glass
Color	Black
Product Dimensions (L x W x H)	22.5 x 16.5 x 29 cm (approx. 8.86 x 6.5 x 11.4 inches)
Item Weight	1.2 Kilograms (approx. 2.65 lbs)
Automatic Shut-off	Yes (after 40 minutes of inactivity)
Special Features	Programmable Timer, Anti-Drip Function, Warming Plate, Reusable Filter

## WARRANTY AND SUPPORT

For information regarding warranty coverage, terms, and conditions, please refer to the documentation included with your product packaging or visit the official SUPERLEX website. If you require technical

support or have questions not covered in this manual, please contact SUPERLEX customer service through the contact information provided on their website.