



[Manuals.plus](#) /

› [HUNKSTAR](#) /

› HUNKSTAR Mini Projector User Manual

HUNKSTAR HUNKSTAR

HUNKSTAR Mini Projector User Manual

Model: HUNKSTAR

1. INTRODUCTION

This user manual provides comprehensive instructions for the operation, maintenance, and troubleshooting of your HUNKSTAR Mini Projector. Please read this manual thoroughly before using the product to ensure proper functionality and to maximize your viewing experience.



The HUNKSTAR Mini Projector, showcasing its compact design, included remote control, and a vibrant projected image.

2. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- Projector x 1
- Projector Lens Cover x 1
- Power Cord x 1
- Remote Control x 1
- User Manual x 1

Package List



All components included in the HUNKSTAR Mini Projector retail package.

3. PRODUCT OVERVIEW

3.1 Dimensions and Basic Parameters

The projector features a compact design suitable for various environments.



Basic Parameters

Product Model:	P3
Product Color:	Pearlescent
Product Size:	257*199*102mm

Optical Parameters

Light Source:	LED
Physical Resolution:	1920*1080
Projection Size:	40-200 inches

Projection Parameters

Keystone:	Full Auto-Keystone Correction
Focus Method:	Auto Focus
Projection Scale:	16:9/4:3
Projection Mode:	Front-Desktop/Rear-Desktop /Front-Ceiling/Rear-Ceiling

Detailed dimensions and basic parameters of the HUNKSTAR Mini Projector.

3.2 Connectivity Ports

The projector is equipped with multiple ports for wide compatibility with various devices.

Multiple Ports for Wide Compatibility



Overview of the projector's multiple ports, including AV, USB, HDMI, and Audio, supporting various devices.

4. SETUP

4.1 Placement

Place the projector on a stable, flat surface. Ensure there is adequate ventilation around the unit. For optimal viewing, position the projector directly in front of the projection surface (screen or wall).

4.2 Power Connection

 
1. Connect the power cord to the projector's power input port.
2. Plug the other end of the power cord into a standard electrical outlet.
3. Press the power button on the projector or the remote control to turn on the device.

4.3 Adjusting Projection Angle

The projector features a hidden bracket that allows for adjustment of the elevation angle from 0-20 degrees to achieve your desired projection height.

Hidden Bracket

The adjustable elevation angle of 0-20° allows you to adjust freely to achieve the desired height.



The hidden bracket allows for easy adjustment of the projector's elevation angle.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

Press the power button on the projector or the remote control to turn the unit on or off.

5.2 Navigation

Use the directional buttons and OK/Enter button on the remote control to navigate through the projector's on-screen menu and select options.

5.3 Auto Focus and Keystone Correction

The projector features screen adaptive technology with auto-focus and 6D keystone correction for convenient image adjustment. This allows for quick setup and clear projection without manual fine-tuning.

Enjoy Clear Projection Anytime, Anywhere



The auto-focus feature ensures a sharp image automatically.

Auto Focus

Enjoy HD Vision Freely.



Intelligent auto screen adaptation includes auto-focus, 6D keystone correction, and digital zoom for optimal image display.

6. CONNECTIVITY

6.1 Wi-Fi Connection (Wi-Fi 6)

The projector utilizes the latest Wi-Fi 6 technology, compatible with both 2.4G and 5G networks, providing faster and more stable wireless transmission for streaming content.

1. Navigate to the Wi-Fi settings in the projector's menu.
2. Select your desired Wi-Fi network from the list.
3. Enter the network password if prompted.
4. Confirm the connection.

6.2 Bluetooth Connection (Bluetooth 5.2)

With upgraded Bluetooth 5.2 technology, you can connect external speakers or headphones for enhanced audio output.

1. Ensure your Bluetooth audio device is in pairing mode.
2. On the projector, navigate to the Bluetooth settings.
3. Select your device from the list of available devices to pair.

Powerful Audio



2x5W Audio



Full-Range Speakers



The projector features powerful 2x5W full-range speakers for immersive audio, with Bluetooth connectivity for external audio devices.

6.3 Wired Connections

The projector supports various wired connections for different devices:

- **HDMI:** Connect gaming consoles (PS4, PS5, Switch), laptops, or TV sticks via the HDMI ports.
- **USB:** Connect USB drives for direct media playback.
- **AV:** Connect older devices using the AV port.
- **Audio Out:** Use the 3.5mm audio jack to connect external speakers or headphones.

7. USAGE SCENARIOS

The HUNKSTAR Mini Projector is versatile and suitable for a variety of applications:

- **Home Theater:** Enjoy movies and TV shows on a large screen.
- **Gaming:** Connect your gaming console for an immersive gaming experience.
- **Outdoor Parties:** Perfect for backyard movie nights or events.
- **Presentations:** Display content from U disks for business or educational purposes.

1080p
FULL HD

HDR10+

Light Up Your Viewing



Brightness

1000 ANSI

Color Temperature

7500K

Resolution

1080P

The projector can be used for various activities, including home theater, outdoor entertainment, gaming, and presentations.

8. SPECIFICATIONS

Feature	Specification
Brand	HUNKSTAR
Model Number	HUNKSTAR
Display Resolution	1920 x 1080 (Full HD)

Feature	Specification
Brightness	1000 ANSI Lumens
Connectivity Technology	HDMI, USB, AV, Bluetooth 5.2, Wi-Fi 6
Special Features	Auto Focus, Built-In Wi-Fi, 6D Keystone Correction
Recommended Uses	Home Cinema, Business
Item Weight	3.52 pounds
Package Dimensions	14.25 x 10.2 x 5.75 inches
Color	White

9. TROUBLESHOOTING

If you encounter issues with your projector, refer to the following common problems and solutions:

- **No Power:**

- Ensure the power cord is securely connected to both the projector and the power outlet.
- Check if the power outlet is functioning correctly.
- Press the power button firmly.

- **No Image/Signal:**

- Verify that the correct input source (HDMI, USB, AV) is selected on the projector.
- Check the connection cables between the projector and the source device.
- Ensure the source device is powered on and outputting a signal.

- **Blurry Image:**

- Allow the auto-focus feature to adjust. If needed, slightly move the projector to trigger re-focusing.
- Ensure the projection surface is flat and the projector is positioned correctly.
- Check for any obstructions in front of the lens.

- **No Sound:**

- Increase the volume on both the projector and the source device.
- If using external speakers, ensure they are properly connected via Bluetooth or the audio jack.
- Check if the audio output setting on your source device is configured correctly.

- **Remote Control Not Working:**

- Replace the batteries in the remote control.
- Ensure there are no obstructions between the remote and the projector's IR receiver.

10. MAINTENANCE

- **Cleaning the Lens:** Use a soft, lint-free cloth specifically designed for optical lenses. Do not use abrasive cleaners or cloths.

- **Cleaning the Projector Body:** Wipe the exterior with a soft, dry cloth. For stubborn dirt, use a slightly damp cloth and then dry thoroughly.
- **Ventilation:** Ensure the ventilation vents are clear of dust and debris to prevent overheating. Do not block the vents during operation.
- **Storage:** When not in use for extended periods, store the projector in a cool, dry place, ideally in its original packaging or a protective case.

11. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your purchase or contact HUNKSTAR customer service directly. Protection plans are available for extended coverage.