

LEHMANN LHODF-2811

LEHMANN 8L Air Fryer Instruction Manual

Model: LHODF-2811

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury. Read all instructions carefully before operating the LEHMANN 8L Air Fryer.

- **Electrical Safety:** Ensure the voltage indicated on the appliance matches your local mains voltage before connecting. Do not immerse the cord, plug, or appliance in water or other liquids. Do not operate any appliance with a damaged cord or plug.
- **Placement:** Place the air fryer on a stable, heat-resistant surface, away from walls and other appliances to allow adequate air circulation. Do not place near flammable materials.
- **Hot Surfaces:** The appliance surfaces become hot during use. Use oven mitts when handling hot components. Do not touch hot surfaces directly.
- **Children:** This appliance is not intended for use by children. Close supervision is necessary when any appliance is used near children.
- **Ventilation:** Do not block any ventilation openings. Hot air is released through the air outlet opening. Keep your hands and face at a safe distance from the openings.
- **Food Preparation:** Do not overfill the basket. Ensure food items do not come into contact with the heating element.
- **Cleaning:** Always unplug the appliance and allow it to cool completely before cleaning. Refer to the "Maintenance and Cleaning" section for detailed instructions.
- **Intended Use:** Use the appliance only for its intended household purpose as described in this manual.

PRODUCT OVERVIEW

The LEHMANN 8L Air Fryer (Model LHODF-2811) is designed for healthy cooking with minimal oil. It features an 8-liter capacity, a digital touch control panel with 12 preset programs, a viewing window, and a removable divider for cooking two different foods simultaneously.



Image: The LEHMANN 8L Air Fryer, showcasing its main unit, the removable divider, and various food items being prepared. Also visible are disposable air fryer liners.

Components:

- Main Unit with Heating Element
- Digital Touch Control Panel
- Removable Frying Basket
- Non-stick Crisper Plate
- Removable Divider (for dual-zone cooking)
- Viewing Window with Internal Light
- Power Cord

Multi-functional Air Fryer Oven

Easy to Use with Digital Touch Control



Image: A detailed view of the air fryer's digital touch control panel, highlighting various function icons such as internal light, temperature control, ON/OFF, time control, and keep warm.

Control Panel Features:

- **Power Button:** Turns the appliance on/off.
- **Temperature Control (+/-):** Adjusts cooking temperature (up to 200°C).
- **Time Control (+/-):** Adjusts cooking time.
- **Preset Programs:** 12 dedicated icons for common dishes (e.g., fries, chicken, fish, cake).
- **Preheat:** Activates the preheating function.
- **Light:** Turns the internal light on/off to view food through the window.
- **Start/Stop:** Initiates or pauses the cooking process.
- **Turn Reminder:** An alert to shake or turn food during cooking.

SETUP AND FIRST USE

Unpacking:

1. Remove all packaging materials, stickers, and labels from the appliance.
2. Check that all components are present and undamaged.

Cleaning Before First Use:

1. Wipe the exterior of the air fryer with a damp cloth.
2. Wash the frying basket, crisper plate, and removable divider in warm, soapy water. Rinse thoroughly and dry completely. These parts are also dishwasher safe.
3. Do not immerse the main unit in water.

Placement:

1. Place the air fryer on a stable, level, and heat-resistant surface.
2. Ensure there is at least 10 cm (4 inches) of clear space around the back and sides of the appliance, and above it, for proper air circulation.
3. Plug the power cord into a grounded electrical outlet.

OPERATING INSTRUCTIONS

Basic Operation:

1. Place the crisper plate inside the frying basket.
2. Place your food items on the crisper plate. Do not overfill.
3. Slide the frying basket back into the main unit until it clicks into place.
4. Press the Power button to turn on the display.
5. Select a preset program or manually set the temperature and time using the +/- buttons.
6. Press the Start/Stop button to begin cooking.
7. During cooking, you can press the Light button to illuminate the interior and check food through the viewing window.
8. If the "Turn Reminder" icon appears, carefully pull out the basket, shake or turn the food, and reinsert the basket to resume cooking.
9. Once cooking is complete, the air fryer will beep. Carefully remove the basket and transfer food to a serving dish.



Image: The LEHMANN Air Fryer in operation, showing cooked chicken pieces inside the basket, clearly visible through the transparent viewing window. The internal light is active.

Using the Removable Divider:

The removable divider allows you to cook two different food items simultaneously without mixing flavors. Insert the divider into the designated slots within the frying basket before adding food.



Image: A close-up view of the air fryer basket with the removable divider inserted, creating two separate cooking compartments. The non-stick crisper plate is also visible.

Preheating Function:

For best results, especially with certain foods, preheating the air fryer is recommended. Press the "Preheat" button on the control panel. The air fryer will heat to a default temperature (e.g., 180°C) for a short period (e.g., 5 minutes). Once preheating is complete, add your food and start the cooking cycle.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your air fryer.

1. **Before Cleaning:** Always unplug the air fryer from the power outlet and allow it to cool down completely before cleaning.
2. **Frying Basket, Crisper Plate, and Divider:** These parts have a non-stick coating and are dishwasher safe. For manual cleaning, wash them in hot, soapy water using a non-abrasive sponge. Rinse thoroughly and dry completely.
3. **Interior of the Appliance:** Wipe the interior with a damp cloth. For stubborn food residue, use a mild

detergent and a soft brush. Ensure the interior is completely dry before next use.

- 4. **Exterior of the Appliance:** Wipe the exterior with a damp cloth. Do not use abrasive cleaners or scouring pads, as they can damage the finish.
- 5. **Heating Element:** If necessary, gently clean the heating element with a soft brush to remove any food particles. Ensure the appliance is unplugged and completely cool.
- 6. **Storage:** Store the cleaned and dried air fryer in a cool, dry place.

TROUBLESHOOTING

If you encounter issues with your LEHMANN 8L Air Fryer, consult the following table before contacting customer support.

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance is not plugged in. Power outlet is not working.	Ensure the power cord is securely plugged into a grounded outlet. Test the outlet with another appliance.
Food is not cooked evenly.	Basket is overfilled. Food items are stacked. Temperature or time settings are incorrect.	Do not overfill the basket. Arrange food in a single layer if possible. Shake or turn food halfway through cooking. Adjust temperature and time as needed.
White smoke coming from the appliance.	Grease residue from previous use. Fatty foods being cooked.	Clean the basket and crisper plate thoroughly after each use. For fatty foods, place a piece of aluminum foil under the crisper plate to catch excess oil.
Food is not crispy.	Too much moisture in food. Not enough oil (for certain foods). Temperature too low or time too short.	Pat food dry before air frying. Lightly coat some foods with oil for crispiness. Increase temperature or cooking time.

SPECIFICATIONS

Feature	Detail
Brand	LEHMANN
Model Number	LHODF-2811
Capacity	8 Liters
Power	1800 Watts
Voltage	230 Volts
Material	Stainless Steel, Plastic
Color	Black
Product Dimensions (L x W x H)	31.5 x 37.5 x 35.8 cm
Item Weight	5.5 Kilograms

Feature	Detail
Special Features	Automatic shut-off, Temperature control, Timer, Programmable, Stain resistant, Viewing window, Removable divider
Number of Programs	12
Max Temperature	200 °C



Image: A diagram illustrating the dimensions of the LEHMANN 8L Air Fryer, showing its length (375 mm), width (315 mm), and height (358 mm).

WARRANTY AND SUPPORT

Warranty Information:

LEHMANN products are manufactured to high-quality standards. This product comes with a standard manufacturer's warranty against defects in materials and workmanship under normal household use. Please refer to the warranty card included in your product packaging for specific terms, conditions, and duration of the warranty.





Customer Support:

For technical assistance, troubleshooting not covered in this manual, or warranty claims, please contact LEHMANN customer support. Contact details can typically be found on the product packaging, the official LEHMANN website, or your purchase documentation.

- **Online Support:** Visit the official LEHMANN website for FAQs and support resources.
- **Email Support:** Refer to your product documentation for the customer service email address.
- **Phone Support:** Refer to your product documentation for the customer service phone number.

When contacting support, please have your product model number (LHODF-2811) and proof of purchase readily available.


Related Documents - LHODF-2811

	<p>Lehmann Firmware Updater: Operating Instructions for Locks and RFID Readers</p> <p>This document provides operating instructions for the LEHMANN Firmware Updater software, detailing how to update firmware on Lehmann locks, RFID readers, and terminals. Includes system requirements, compatible products, and step-by-step guidance.</p>
	<p>LEHMANN Management Software User Guide: Configuration and Operation</p> <p>Comprehensive user guide for LEHMANN Management Software (LMS), detailing configuration, operation, and management of LEHMANN RFID systems in both offline and online modes. Covers transponder and lock management, user settings, and system administration.</p>
	<p>LEHMANN CNC Rotary Tables - Main Catalog Edition 4 PGD, E, DD Series</p> <p>LEHMANN's Main Catalog Edition 4 for CNC Rotary Tables. Explore PGD, E-Series, DD Series, and more. High-speed, backlash-free solutions for industrial automation and precision manufacturing.</p>
	<p>Lehmann Dial Lock 61 (Free-Code) User Manual and Operating Instructions</p> <p>User manual and operating instructions for the Lehmann Dial Lock 61 (Free-Code) combination lock. Provides detailed steps for locking, unlocking, emergency opening with code reset, and setting the rotation direction, with safety notes.</p>



[LEHMANN M610 LEGIC L043-A03 Electronic Locker Lock Operating Instructions](#)

Comprehensive operating instructions for the LEHMANN M610 LEGIC L043-A03 electronic locker lock, covering installation, programming, operation, maintenance, and troubleshooting.

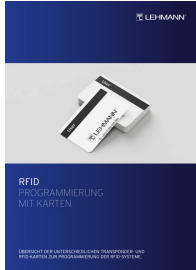

[LEHMANN RFID Kartenprogrammierung: Anleitung und Übersicht](#)

Erfahren Sie, wie Sie LEHMANN RFID-Schließsysteme mit verschiedenen Karten wie Installations-, Master- und User-Karten programmieren. Diese Anleitung erklärt die Betriebsmodi, Funktionen und den Reset-Prozess.