

PZL HY300 HY300Pro

PZL Replacement Remote Control User Manual

For HY300 and HY300Pro Series Mini Projectors

INTRODUCTION

This manual provides essential instructions for the setup, operation, and maintenance of your PZL Replacement Remote Control. This remote is designed to function as a direct replacement for various mini projectors, ensuring seamless control without complex programming.





Image: Front and back view of the PZL Replacement Remote Control. The remote is black with clearly labeled buttons on the front and a smooth, ergonomic design on the back.

COMPATIBILITY INFORMATION

This remote control is specifically designed for the following mini projector models:

- Magcubic HY300Pro
- Xgody HY300Pro/Gimbal 3/Gimbal 5
- Aubor HY300Pro
- Maypug P1 Mini
- HIPPIUS HY300Pro
- FEARWIKY HY300
- Mentech HY300Pro
- LYNCAST HY300Pro
- Salange HY300Pro
- Nonete NT30
- DreamFair HY300PRO+01
- SKUOU HY300 PLUS

- HOTPEAK PR06
- Chicdaze for HY300 Pro

Important Note: This remote control is **not compatible** with the Magcubic HY300 projector or other brands of mini projectors not listed above. Please verify your projector model before use.



Image: The remote control displayed alongside images of compatible projectors, including HY300/HY300Pro, HY320mini/HY320, and P1 Mini, with a clear note about Magcubic HY300 incompatibility.

SETUP: GETTING STARTED

The PZL Replacement Remote Control is designed for immediate use without any programming or pairing. Simply insert the batteries, and it is ready to operate your compatible projector.

Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.

3. Insert two (2) AAA batteries (not included), ensuring correct polarity (+/-) as indicated inside the compartment.
4. Close the battery compartment cover securely.

The remote utilizes infrared 3.0 technology for a strong and responsive signal.



NO SETUP OR PAIRING REQUIRED

Insert the batteries and ready to work



Image: The remote control with text indicating 'No Setup or Pairing Required' and icons for 'Upgraded Chip', 'No Programming Required', and 'Easy Operation'.

OPERATING THE REMOTE CONTROL

Familiarize yourself with the buttons and their functions for optimal control of your projector.

USER GUIDE

For Remote Control

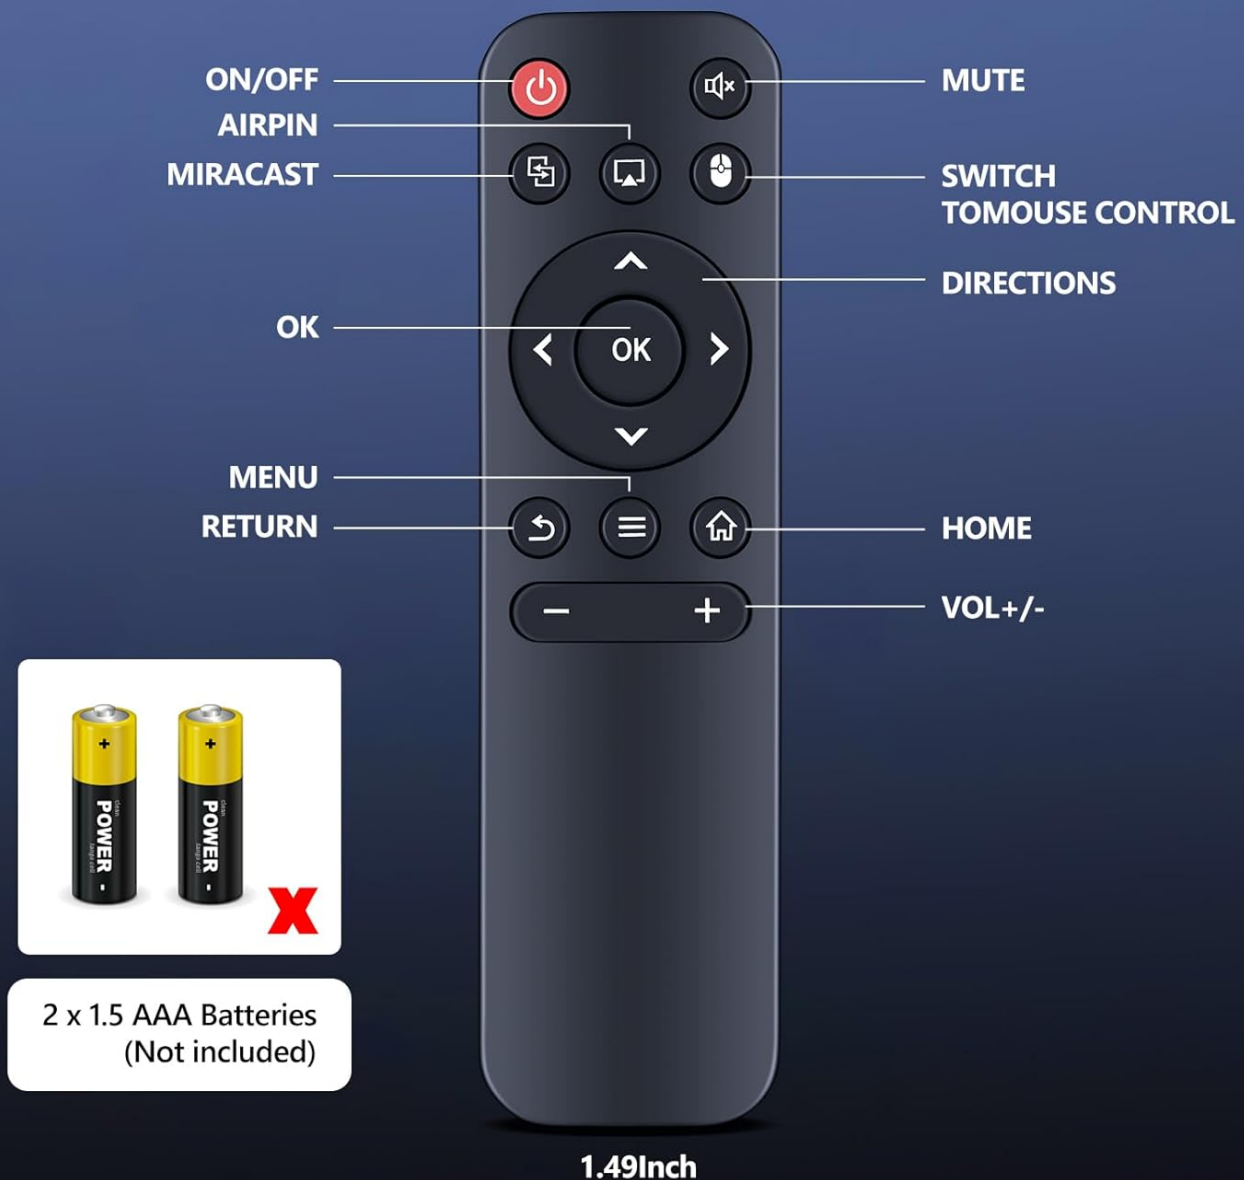


Image: A detailed diagram of the remote control, labeling each button with its corresponding function and showing the placement for two AAA batteries.

Button Functions:

- **Power Button (Red):** Turns the projector ON or OFF.
- **Mute Button:** Mutes or unmutes the projector's audio.
- **AirPin / Miracast Button:** Activates screen mirroring or casting functions.
- **Switch to Mouse Control Button:** Toggles between standard navigation and mouse pointer control.
- **Directional Pad (Up, Down, Left, Right):** Navigates through menus and options.
- **OK Button:** Confirms selections or enters menus.
- **Return Button:** Goes back to the previous screen or menu.
- **Menu Button:** Opens the projector's main menu.
- **Home Button:** Returns to the projector's home screen.
- **Volume Up (+) / Volume Down (-):** Adjusts the audio volume.

The remote offers a long-range control of up to 26 feet and multi-angle control up to 120 degrees, thanks to its advanced IR



Image: The remote control emitting signal waves, illustrating its 26-foot long-range and 120-degree multi-angle control capabilities.

MAINTENANCE

To ensure the longevity and optimal performance of your remote control, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the remote. Avoid using liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures. If storing for extended periods, remove the batteries to prevent leakage.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal components.

TROUBLESHOOTING

If you encounter issues with your remote control, please refer to the following common solutions:

- **Remote Not Responding:**
 - Check if the batteries are inserted correctly with the correct polarity.
 - Replace old batteries with new AAA batteries.
 - Ensure there are no obstructions between the remote control and the projector's IR receiver.
 - Confirm that the remote is pointed directly at the projector's IR receiver.
- **Limited Range:**
 - Ensure batteries are fresh.
 - Reduce the distance between the remote and the projector.
 - Remove any potential sources of infrared interference.
- **Specific Buttons Not Working:**
 - This remote is a replacement and may not support all functions of every projector model. Refer to your projector's original manual for specific feature compatibility.

TECHNICAL SPECIFICATIONS

Brand	PZL
Model Number	HY300 HY300Pro
Item Weight	1.13 ounces (approx. 32 grams)
Package Dimensions	5.47 x 1.46 x 0.67 inches (approx. 13.9 x 3.7 x 1.7 cm)
Color	Black
Special Feature	No Programming Required
Max Number of Supported Devices	1
Compatible Devices	Projector

CUSTOMER SUPPORT

For any questions regarding your order or product model, PZL provides timely customer service. Please contact us within 24 hours for assistance.

For further information or support, please refer to the official PZL brand store:[PZL Store on Amazon](#)