

[Manuals.plus](#) /

› [NEOCADE](#) /

› NEOCADE Portable Charger with Handheld Game Console User Manual

NEOCADE PB3216

NEOCADE Portable Charger with Handheld Game Console User Manual

Model: PB3216

INTRODUCTION

The NEOCADE Portable Charger with Handheld Game Console (Model PB3216) is a versatile device designed to provide both portable power for your mobile devices and entertainment through its built-in game console. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your device to ensure optimal performance and longevity.



Image: Front and back view of the NEOCADE Portable Charger with Handheld Game Console, highlighting its dual functionality as a gaming device and a 5000mAh power bank.

PACKAGE CONTENTS AND SETUP

What's in the Box

- NEOCADE Gaming Power Bank (Portable Charger with Handheld Game Console)
- User Manual
- USB-C Charging Cable



Image: The NEOCADE Portable Charger with Handheld Game Console, its user manual, and the included USB-C charging cable.

Initial Setup and Charging

1. **Unpacking:** Carefully remove all items from the packaging.

2. **Initial Charge:** Before first use, fully charge the NEOCADE device. Connect the provided USB-C cable to the device's charging port and the other end to a compatible USB power adapter (not included) or a computer USB port.
3. **Charging Indicator:** The 4-level LED power indicator will show the charging progress. All four LEDs will be solid when fully charged.



Image: The NEOCADE device charging a smartphone, illustrating the battery level indicators on the power bank.

OPERATING INSTRUCTIONS

Power Bank Functionality

1. **Charging External Devices:** Connect your smartphone or other compatible device to the NEOCADE power bank using your device's charging cable. The power bank will automatically begin charging.
2. **Battery Level Check:** The 4-level LED indicator displays the remaining power:
 - 1 LED: 0-25%
 - 2 LEDs: 25-50%

- 3 LEDs: 50-75%
- 4 LEDs: 75-100%

Handheld Game Console Functionality

1. **Power On/Off:** Locate the power switch on the device and slide it to the "ON" position to power on the game console. Slide to "OFF" to power off.
2. **Game Selection:** Use the 360° joystick and control buttons to navigate through the built-in game library. The device includes 300 games across various categories such as casual, classic, and shooting games.
3. **Playing Games:** Once a game is selected, press the appropriate button (e.g., "START" or "A") to begin playing.
4. **Exiting a Game:** To exit a game and return to the main menu, press and hold the "SELECT" and "START" buttons simultaneously.
5. **Volume Adjustment:** Use the volume wheel/buttons to adjust the audio output from the built-in speaker.



Image: Detailed view of the NEOCADE game console's interface, showing the joystick, buttons, screen, and speaker for an enhanced gaming experience.

handheld game console



Image: A selection of games available on the NEOCADE handheld console, demonstrating the variety of built-in entertainment.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the device. Do not use liquid cleaners or aerosols.
- **Storage:** Store the device in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the device frequently. Recharge the device regularly, even if not in use, to maintain battery health.
- **Safety:** The device is designed with multiple safety protections including overvoltage, overcharge, over-discharge, overcurrent, overload, and short-circuit protection.

Safety-Peace of mind



Image: Visual representation of the comprehensive safety features integrated into the NEOCADE device, ensuring safe operation.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Battery is depleted.	Charge the device fully using the provided USB-C cable.
Cannot charge external device.	Power bank battery is low or cable is faulty.	Ensure the power bank is charged. Try a different USB cable.
Game freezes or crashes.	Temporary software glitch.	Press and hold "SELECT" and "START" simultaneously to exit the game. If issue persists, power off and restart the device.
No sound from game console.	Volume is too low or muted.	Adjust the volume using the volume control.

Problem	Possible Cause	Solution
---------	----------------	----------

SPECIFICATIONS

Feature	Detail
Model Number	PB3216
Brand	NEOCADE
Battery Capacity	5000mAh
Screen Size	3.2 Inches
Controller Type	Button Control, 360° Joystick
Built-in Games	300 (Casual, Classic, Shooting, Puzzle)
Power Source	Battery Powered (1 AAA battery required, included)
Display Type	LCD
Material	Plastic
Product Dimensions	5 x 3.5 x 0.74 inches
Item Weight	11.3 ounces
Safety Certifications	CE, FCC, UL, PSE

WARRANTY AND SUPPORT

NEOCADE products are manufactured with high standards of quality and safety. This device has passed CE, FCC, UL, and PSE certifications to ensure safe usage.

For any questions, concerns, or technical assistance regarding your NEOCADE Portable Charger with Handheld Game Console, please contact NEOCADE customer support through the retailer's platform or the official NEOCADE website. Please retain your purchase receipt as proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question