



[Manuals.plus](#) /

› [DiDimo](#) /

› DiDimo Air Fryer 8-in-1 User Manual

## DiDimo DD1291

# DiDimo Air Fryer 8-in-1 User Manual

Model: DD1291

Your guide to safe and efficient operation of your new DiDimo Air Fryer.

## 1. INTRODUCTION

The DiDimo 8-in-1 Air Fryer is designed to provide a fast and easy way to prepare a variety of meals with minimal oil. Utilizing Air Crisp Technology, it circulates superheated air up to 400°F to deliver hot, crispy results. With a 4.1 QT capacity, it is suitable for cooking up to 4 lbs of fries or other dishes for 1-3 people. This appliance offers 8 cooking functions including Air Fry, Roast, Reheat, and Dehydrate, making it a versatile addition to any kitchen. Its nonstick basket and crisper plate ensure easy cleanup.



Figure 1: DiDimo Air Fryer with basket pulled out, showing a roasted chicken.

## 2. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using the appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- **Electrical Safety:** Ensure the voltage indicated on the appliance matches your local power supply. Do not immerse the cord, plug, or appliance in water or other liquid.
- **Hot Surfaces:** The appliance surfaces become hot during use. Always use oven mitts when handling hot components. Do not touch hot surfaces directly.
- **Ventilation:** Do not block any ventilation openings. Allow at least 6 inches of space on all sides of the appliance for proper air circulation.
- **Placement:** Place the air fryer on a stable, heat-resistant surface, away from walls and heat-sensitive materials.
- **Children:** Close supervision is necessary when any appliance is used by or near children.

- **Food Capacity:** Do not overfill the basket. Overfilling may prevent food from cooking evenly and could damage the appliance.
- **Foreign Objects:** Do not place paper, cardboard, or other flammable materials inside the air fryer.
- **Unplugging:** Always unplug the appliance from the outlet when not in use and before cleaning.

### 3. PRODUCT OVERVIEW AND FEATURES

#### Components:

- **Main Unit:** Houses the heating element and fan.
- **Control Panel:** Digital display with touch controls for various functions, temperature, and time.
- **Air Fryer Basket:** Removable nonstick basket for holding food.
- **Crisper Plate:** Nonstick plate inserted into the basket for optimal air circulation and crisping.
- **Viewing Window:** Allows monitoring of cooking progress without opening the basket.

#### Key Features:

- **8-in-1 Functionality:** Includes Air Fry, Roast, Reheat, Dehydrate, and other preset cooking modes.
- **4.1 QT Capacity:** Sufficient for preparing meals for 1-3 people, capable of cooking up to 4 lbs of fries.
- **Air Crisp Technology:** Utilizes 360° rapid air circulation for even cooking and crispy results with up to 99% less oil.
- **Digital Display:** Easy-to-use touch control panel with preset functions for quick operation.
- **Nonstick Basket & Crisper Plate:** Designed for easy food release and simple cleanup.
- **Compact Design:** Space-saving footprint fits easily on kitchen counters.
- **Safety Features:** PFOA and BPA free materials, odorless, corrosion resistant, built-in auto shut-off, and memory sensor.

# 6-IN-1 FUNCTIONALITY

Air Fry | Air Broil | Roast | Bake | Reheat | and Dehydrate



Figure 2: Illustration of the DiDimo Air Fryer's multi-functional capabilities.

**Space saving  
& Family Size  
A delicious feast  
for 2-4 people**



Figure 3: The compact design of the DiDimo Air Fryer, suitable for small spaces.

#### 4. SPECIFICATIONS

Feature	Detail
Model Name	DD1291
Capacity	4.1 Quarts
Product Dimensions (D x W x H)	13"D x 13.5"W x 13"H
Item Weight	9.38 pounds
Color	Black

Feature	Detail
Material	Plastic
Output Wattage	1400 Watts
Control Method	Touch
Special Feature	Timer
Air Frying Technology	Air Crisp Technology
Nonstick Coating	Yes
Dishwasher Safe	No (Basket & Crisper Plate are not dishwasher safe)

## 5. SETUP

- Unpack:** Carefully remove all packaging materials and promotional labels from the air fryer.
- Clean:** Before first use, wash the air fryer basket and crisper plate with warm, soapy water. Rinse thoroughly and dry completely. Wipe the main unit with a damp cloth.
- Placement:** Place the air fryer on a stable, level, heat-resistant surface. Ensure there is at least 6 inches of clear space around the back and sides of the unit for proper ventilation. Do not place it directly under cabinets.
- Power Connection:** Plug the power cord into a grounded electrical outlet.
- Initial Run (Optional but Recommended):** For the first use, it is recommended to run the air fryer empty for about 10-15 minutes at 350°F (175°C) to eliminate any manufacturing odors. A slight odor may be present during this initial run; this is normal. Ensure the area is well-ventilated.

## 6. OPERATING INSTRUCTIONS

### General Operation:

- Prepare Food:** Place your desired food into the air fryer basket. Ensure the crisper plate is properly seated at the bottom of the basket. Do not overfill the basket.
- Insert Basket:** Slide the basket firmly into the main unit until it clicks into place.
- Power On:** Press the Power button on the digital display to turn on the appliance.
- Select Function:** Use the touch controls to select one of the preset cooking functions (e.g., French fries, chicken, steak, bake, seafood, bacon, vegetable, dehydrating, preheat). The display will show the default temperature and time for the selected function.
- Adjust Settings (Optional):** If desired, use the temperature and time adjustment buttons (+/-) to customize the cooking settings. The temperature can be set up to 400°F.
- Start Cooking:** Press the Start/Pause button to begin the cooking cycle. The air fryer will automatically preheat if the selected function includes it.

7. **Monitor Progress:** Use the convenient easy-view window and interior light to monitor your cooking progress without pulling out the basket.
8. **Shake/Flip (If needed):** For even cooking, some foods may require shaking or flipping halfway through the cooking cycle. The air fryer may beep to remind you. Pull out the basket, shake or flip the food, and reinsert the basket. The cooking will resume automatically.
9. **Completion:** Once the cooking cycle is complete, the air fryer will beep and automatically shut off. Carefully remove the basket using oven mitts.
10. **Serve:** Transfer the cooked food to a serving plate.

**Cooking Examples:**

# Tastier and healthier

**Low-Fat**



**French fries**



**Grilled Steak**



**Chicken wings**



**Baked pizza**



**hot dog**



**Hamburg**



**Make all your favorite treats healthier**

*Figure 4: Examples of various dishes that can be prepared using the DiDimo Air Fryer.*

- **French Fries:** For crispy fries, use the dedicated preset or set to 380°F (195°C) for 15-20 minutes, shaking the basket halfway through.
- **Chicken Wings:** Cook at 375°F (190°C) for 20-25 minutes, flipping halfway.
- **Roast Vegetables:** Toss with a small amount of oil and seasonings, then air fry at 375°F (190°C) for 10-15 minutes, shaking occasionally.
- **Dehydrate:** Use the dehydrate function for fruits or jerky, following specific recipe guidelines for temperature and time.

## 7. MAINTENANCE AND CLEANING

Proper cleaning ensures the longevity and optimal performance of your DiDimo Air Fryer. Always unplug the appliance and allow it to cool completely before cleaning.




### Stainless Steels

Durable, it can be used for several years without replacement.

### Non-Stick Coatings

Make delicious food, not afraid of sticking to the pan, easy to take care of

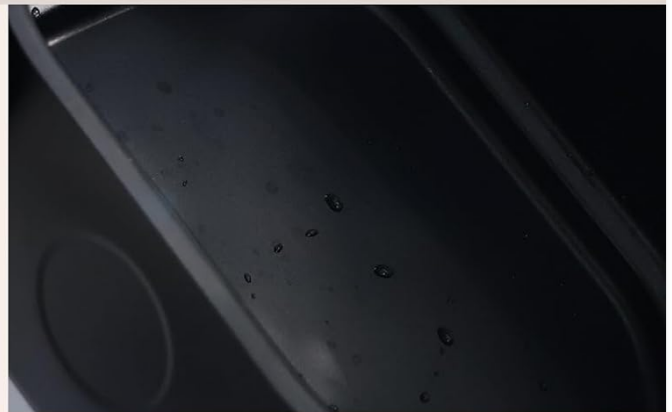

### Easy to clean

Easy to clean, easy to wash and wipe

Figure 5: Features highlighting the durable stainless steel, non-stick coatings, and easy-to-clean design.

- **Basket and Crisper Plate:** These components feature nonstick coatings for easy cleaning. Wash them with warm, soapy water and a non-abrasive sponge. Rinse thoroughly and dry completely. *Note: These parts are not dishwasher safe.*
- **Main Unit:** Wipe the exterior of the air fryer with a damp cloth. Do not use abrasive cleaners or scouring pads. Never immerse the main unit in water or any other liquid.
- **Heating Element:** If necessary, gently clean the heating element inside the air fryer with a soft brush to remove any food residue. Ensure the appliance is completely cool and unplugged.
- **Storage:** Store the cleaned and dried air fryer in a cool, dry place.

## 8. TROUBLESHOOTING

If you encounter any issues with your DiDimo Air Fryer, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Air fryer does not turn on.	Not plugged in; power outlet issue; appliance malfunction.	Ensure the power cord is securely plugged into a working outlet. Check your circuit breaker. If the issue persists, contact customer support.
Food is not cooked evenly.	Basket is overfilled; food not shaken/flipped; incorrect temperature/time.	Do not overfill the basket. Shake or flip food halfway through cooking. Adjust temperature and time as needed for specific recipes.
White smoke coming from the appliance.	Grease residue from previous use; high-fat food cooking.	Clean the basket and crisper plate thoroughly after each use. For high-fat foods, drain excess fat from the basket during cooking.
Food is not crispy.	Too much moisture; not enough oil (for some foods); basket overfilled.	Pat food dry before air frying. For certain foods, a light spray of oil can help. Ensure the basket is not overcrowded.

## 9. WARRANTY AND SUPPORT

DiDimo is committed to providing top-notch service and quality products. Your DiDimo Air Fryer is designed for durability and performance.

- **Quality Service:** If you encounter any issues while using your DiDimo Air Fryer, please do not hesitate to contact our customer support team.
- **Contact Information:** For assistance, inquiries, or warranty claims, please refer to the contact details provided on the DiDimo official website or your purchase documentation. We aim to respond to all inquiries within 24 hours.

# GIVE YOU A BETTER AFTER SALES SERVICE



**Convenient Purchase**



**Quality Service**

*Figure 6: DiDimo's commitment to convenient purchase and quality after-sales service.*