

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Teendow](#) /

› [Teendow Cordless Vacuum Cleaner V16STRONG001 User Manual](#)

Teendow V16STRONG001

Teendow V16STRONG001 Cordless Vacuum Cleaner User Manual

Model: V16STRONG001 | Brand: Teendow

1. INTRODUCTION

Thank you for choosing the Teendow V16STRONG001 Cordless Vacuum Cleaner. This powerful 500W stick vacuum is engineered for efficient home cleaning, featuring a specialized pet hair brush, multiple power settings, and an intelligent LED display. This manual provides essential information for the safe and effective operation and maintenance of your new vacuum cleaner.



Figure 1: Teendow V16STRONG001 Cordless Vacuum Cleaner and included accessories.

2. PACKAGE CONTENTS

Ensure all items are present before beginning assembly:

- 1 x Vacuum Body
- 1 x Long Stick
- 1 x Floor Brush
- 1 x 2-in-1 Little Flat Suck
- 1 x Hose
- 1 x Pet Brush
- 1 x Pet Brush Button
- 1 x Wall Mount
- 1 x Bed Brush
- 1 x Charger

- 1 x User Manual



Figure 2: All components as received in the package.

3. SETUP AND ASSEMBLY

3.1 Battery Installation & Charging

The vacuum comes with a rechargeable battery. Before first use, fully charge the battery. The battery pack is easily removable for convenient charging.

1. Insert the battery pack into the main vacuum body until it clicks securely into place.
2. Connect the charger to the battery pack or directly to the vacuum body.
3. Plug the charger into a power outlet. The LED display will indicate charging status.

3.2 Assembling the Vacuum

The modular design allows for various configurations:

1. **For Stick Vacuum Mode:** Attach the Long Stick to the main vacuum body. Then, attach the Floor Brush to the end of the Long Stick. Ensure all connections click securely.
2. **For Handheld Mode:** Attach desired accessories (e.g., 2-in-1 Little Flat Suck, Bed Brush) directly to the main vacuum body.



Figure 3: Teendow V16STRONG001 in typical stick vacuum configuration.

4. OPERATING INSTRUCTIONS

4.1 Powering On/Off and Suction Modes

The intelligent LED display provides real-time information and control:

- **Power On/Off:** Press the power button on the LED display to turn the vacuum on or off.
- **Adjust Suction Modes:** The vacuum offers three adjustable cleaning modes (High, Medium, Low). Press the mode button on the LED display to cycle through these settings. The display will show the current suction level.

ALL-IN-ONE HD LED DISPLAY

Smart Screen, Big Easy – One Tap and You're Done-zo!

-  Charging overvoltage/undervoltage
-  Floor brush blocked
-  Air duct blockage



Figure 4: Close-up of the intelligent HD LED display.

4.2 Using Specialized Attachments

The Teendow V16STRONG001 includes several attachments for versatile cleaning:

- **Pet Brush:** Designed to effectively remove loose fur and dander from pets. Connect the Pet Brush to the hose, then attach the hose to the main vacuum body.
- **2-in-1 Little Flat Suck:** Ideal for narrow spaces, corners, and delicate surfaces.
- **Bed Brush:** Specifically designed for cleaning mattresses and upholstery.

Your browser does not support the video tag.

Video 1: Demonstration of the Teendow Cordless Vacuum Cleaner's Pet Hair Brush attachment in use.

The powerful suction and high-speed brushless motor (90,000 RPM) ensure thorough cleaning on various surfaces, from carpets to hard floors.

Offers 240% Enhanced Suction Capability

Easily Tackles Everyday Dirt and Mess.



Figure 5: Illustration of the vacuum's powerful suction capabilities.

5. MAINTENANCE

5.1 Emptying the Dustbin

To maintain optimal suction, empty the dustbin regularly. The dustbin is designed for effortless disposal without getting your hands dirty.

1. Locate the dustbin release button on the main vacuum body.
2. Press the button to detach the dustbin.
3. Hold the dustbin over a trash receptacle and open the bottom flap to release debris.
4. Close the flap and reattach the dustbin to the vacuum body until it clicks.

5.2 Cleaning Filters

The multi-stage filtration system captures fine dust and allergens. Regular cleaning of the filters is crucial for performance and air quality.

1. Remove the dustbin as described above.
2. Carefully remove the filter components from the dustbin.
3. Tap filters gently to remove loose dust. For thorough cleaning, rinse filters under running water (ensure they are completely dry before reinstallation).
4. Reassemble the filters and dustbin once dry.

5.3 Brush Head Maintenance

The anti-hair wrap technology minimizes tangles, but occasional cleaning of the brush head may be necessary.

1. Detach the floor brush from the long stick.
2. Inspect the brush roll for any tangled hair or debris.
3. Use scissors or a tool to carefully cut and remove any wrapped hair.
4. Ensure the brush roll spins freely before reattaching.

6. TROUBLESHOOTING

If you encounter issues with your Teendow V16STRONG001, please refer to the following common solutions:

- **No Power:** Ensure the battery is fully charged and properly installed. Check the charger connection.
- **Reduced Suction:** Empty the dustbin. Clean or replace the filters. Check the brush head for obstructions or tangles. Ensure all connections are secure.
- **Unusual Noise:** Check for blockages in the hose, brush head, or main unit. Ensure all parts are correctly assembled.

For persistent issues, please contact Teendow customer support.

7. SPECIFICATIONS

Feature	Specification
Brand	Teendow
Model Name	V16STRONG
Item Model Number	V16STRONG001
Wattage	500 watts
Runtime	Up to 55 minutes
Capacity	0.65 Liters
Filter Type	Foam (Multi-stage filtration system)
Noise Level	70 dB
Control Method	Touch (HD LED touchscreen)
Number of Speeds	3
Item Weight	9 pounds
Product Dimensions	17.1"L x 12.8"W x 7.1"H

8. WARRANTY AND SUPPORT

