

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Bewinner](#) /

› [Bewinner Portable Digital Audio Player \(MP3/DSD HiFi FLAC\) with Bluetooth 5.3 and 2.4-inch HD Display - Model Bewinneriphqsxyb28 User Manual](#)

Bewinner Bewinneriphqsxyb28

Bewinner Portable Digital Audio Player (MP3/DSD HiFi FLAC) User Manual

Model: Bewinneriphqsxyb28

INTRODUCTION

This manual provides detailed instructions for the operation and maintenance of your Bewinner Portable Digital Audio Player. Please read this manual thoroughly before using the device to ensure proper function and to maximize your listening experience. This device is designed for high-fidelity audio playback, supporting various formats including MP3, DSD, and FLAC, with Bluetooth 5.3 connectivity and a 2.4-inch HD display.

PACKAGE CONTENTS

- 1 x Bewinner HiFi MP3 Player
- 1 x USB Cable
- 1 x User Manual



Image: The Bewinner Portable Digital Audio Player shown alongside its included USB charging/data cable.

PRODUCT OVERVIEW

The Bewinner Portable Digital Audio Player features a robust zinc alloy chassis, a 2.4-inch HD display, and intuitive controls for an optimal user experience. It supports a wide range of audio formats and offers versatile connectivity options.



Image: Front view of the digital audio player, displaying the main interface with playback information and control buttons.

HIFI Music player

Hi-Res Digital Audio Player



Exquisite design

Focus on the needs of music lovers

Image: A composite image showcasing the player's design and key features such as DSD support, Hi-Res Audio, HD Audio, auto-upgrade, resume playback, and CUE functions.

SETUP

- Charging the Device:** Connect the included USB cable to the player's charging port and to a USB power adapter (not included) or a computer's USB port. The device will indicate charging status on the screen.
- Powering On/Off:** Press and hold the power button (location typically on the side or top) for a few seconds to turn the device on or off.
- Initial Language Setup:** Upon first use, you may be prompted to select your preferred language. Navigate using the scroll wheel or directional buttons and confirm your selection.
- Transferring Music:** Connect the player to your computer using the USB cable. The player will appear as a removable disk. Drag and drop your audio files into the appropriate folders on the player's internal storage or an inserted microSD card.

OPERATING INSTRUCTIONS

Basic Navigation and Playback

The player features an intuitive ALPS scroll wheel control for easy navigation through menus and music libraries. The 2.4-inch HD display provides clear visual feedback.

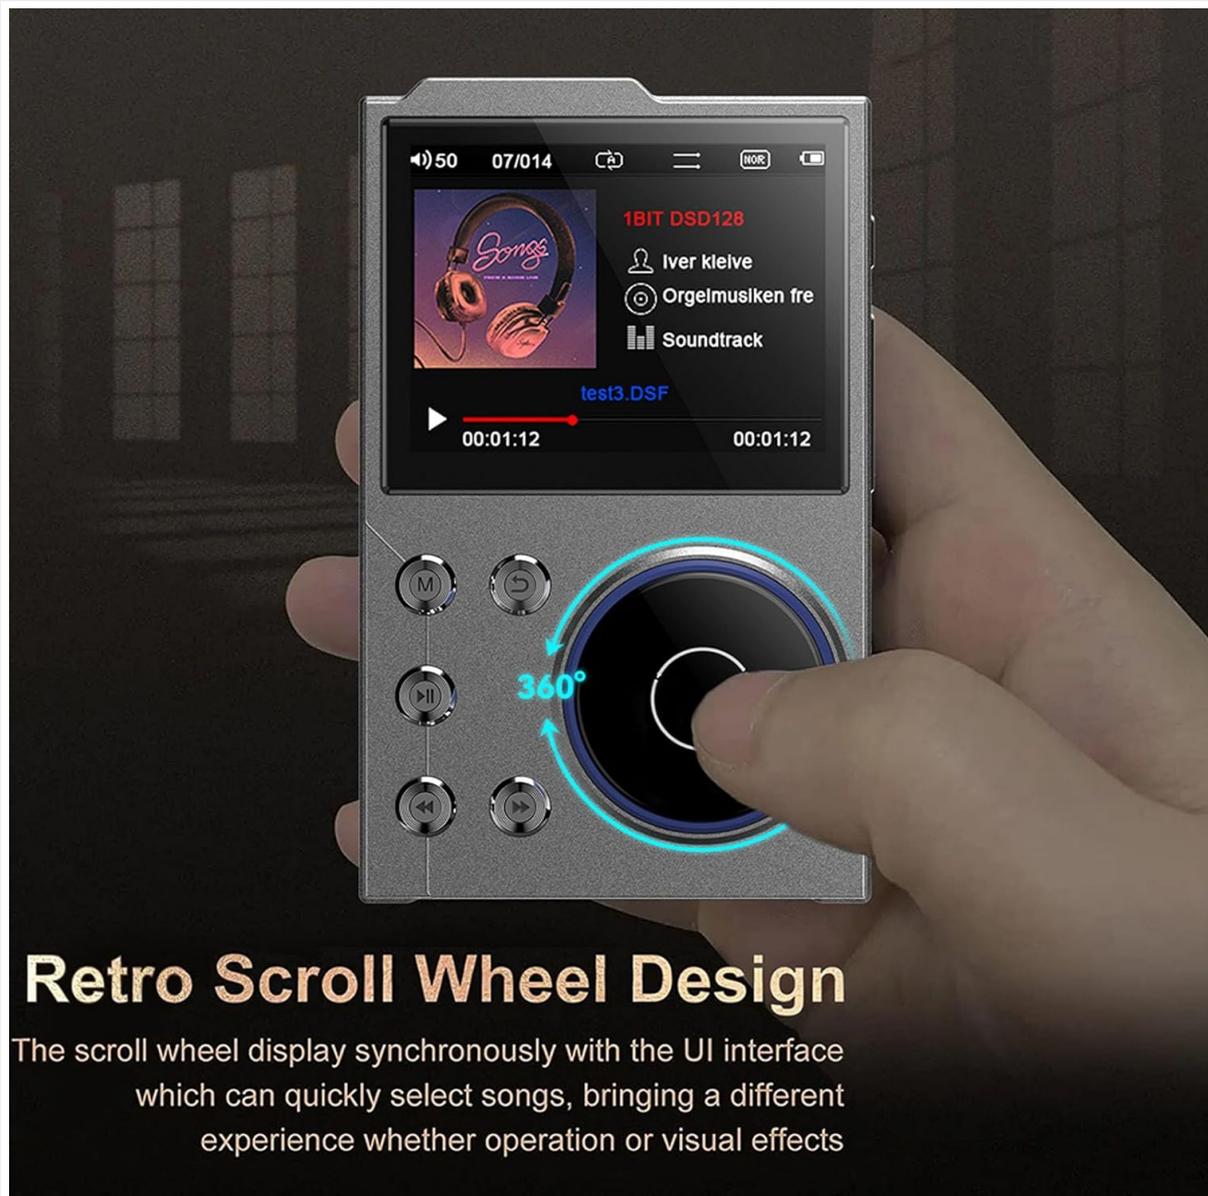


Image: A detailed view of the player's scroll wheel, highlighting its design for quick song selection and menu navigation.

- **Scroll Wheel:** Rotate to scroll through lists and options.
- **Center Button:** Press to confirm selections or play/pause music.
- **Menu/Back Button (M):** Press to go back to the previous screen or access the main menu.
- **Playback Controls:** Dedicated buttons for Play/Pause, Next Track, Previous Track, and Volume Up/Down.

Bluetooth Connectivity (Bluetooth 5.3)

The player supports two-way Bluetooth 5.3 connectivity, allowing it to stream audio to Bluetooth-enabled devices (like headphones or speakers) or function as a Bluetooth receiver.

1. Pairing with Headphones/Speakers:

- Go to the Bluetooth settings menu on your player.
- Enable Bluetooth and set the player to "Scan for Devices."
- Put your Bluetooth headphones or speaker into pairing mode.

- Select your device from the list on the player's screen to connect.

2. Using as a Bluetooth Receiver:

- In the Bluetooth settings, select the "Receiver Mode" option.
- Your player will now be discoverable by other devices (e.g., a smartphone).
- Connect your smartphone to the player via Bluetooth to stream audio to the player.

Storage Expansion

The player comes with 16GB of built-in memory and can be expanded up to 256GB using a microSD card (not included). This allows for storage of approximately 14,000 songs.



Image: The side of the player with an arrow pointing to the microSD card slot, illustrating the expandable storage feature.

- **Inserting a MicroSD Card:** Gently insert the microSD card into the designated slot until it clicks into place.
- **Removing a MicroSD Card:** Push the card gently inward to release it, then pull it out.

Audio Output Functions

The player supports both headphone and line output, offering flexibility for various audio setups, including connection to home audio systems or car auxiliary inputs.

IMPROVED LINE OUTPUT FUNCTION



Both headphone and line output are supported.
Allows connection to another amplifier such as an in home audio system.

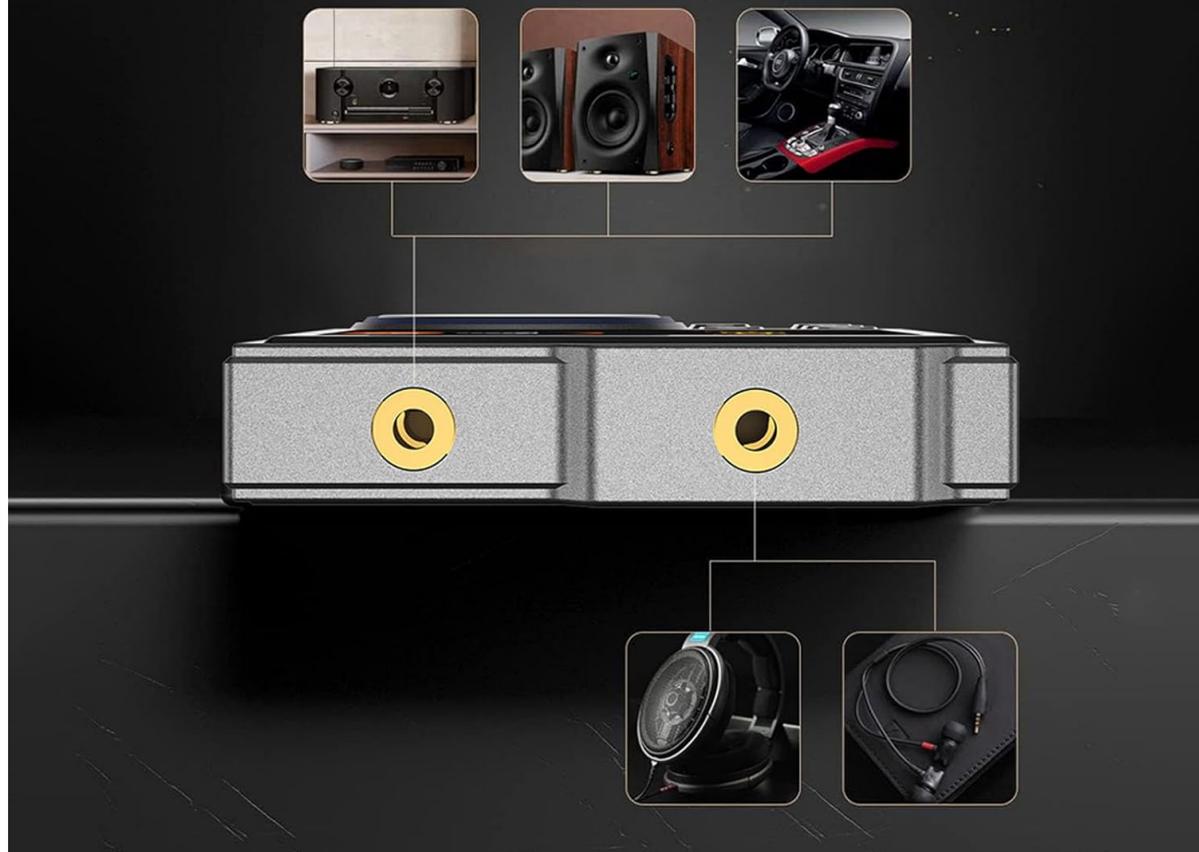


Image: An illustration of the player's headphone and line-out ports, demonstrating connections to headphones, a home audio system, and a car's auxiliary input.

- **Headphone Output:** Connect your headphones to the dedicated headphone jack for personal listening.
- **Line Output:** Use the line output to connect the player to an external amplifier, receiver, or car audio system for enhanced sound.

Equalizer Adjustment

Customize your audio experience with various equalizer presets or create your own custom settings.

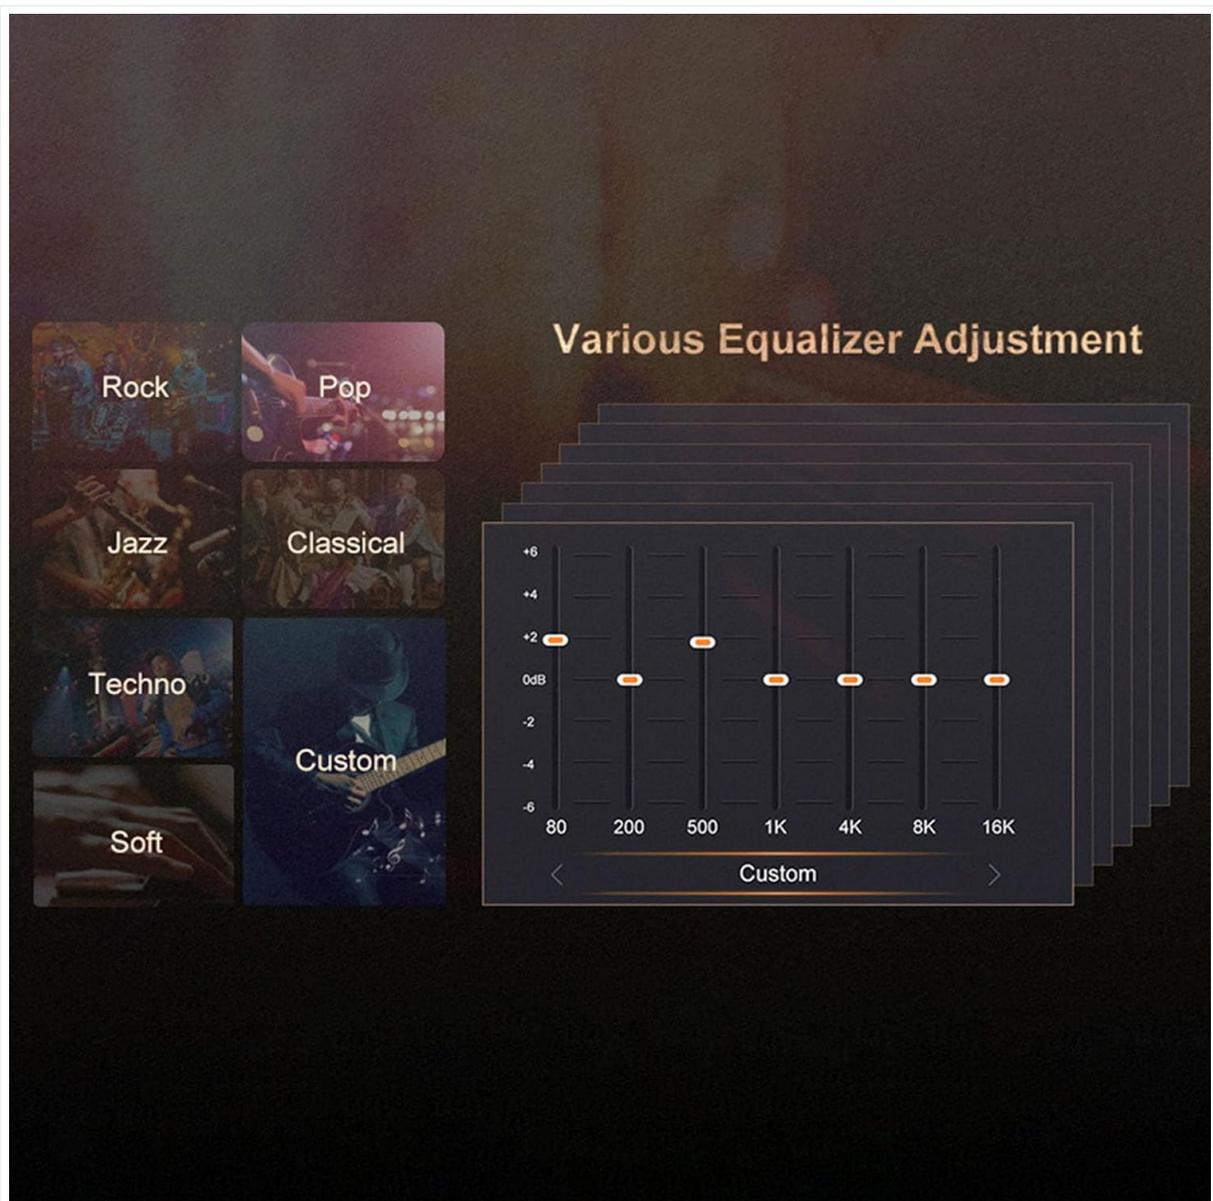


Image: The equalizer adjustment screen, displaying preset options such as Rock, Pop, Jazz, Classical, Techno, and Soft, along with a customizable graphic equalizer.

- Navigate to the "Equalizer" option in the settings menu.
- Choose from predefined presets (e.g., Rock, Pop, Jazz) or select "Custom" to manually adjust frequency bands.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the device. Avoid using liquid cleaners or abrasive materials.
- **Storage:** Store the player in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the device regularly, even if not in use for extended periods.
- **Software Updates:** Check the manufacturer's website periodically for any available firmware updates to ensure optimal performance and new features.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not power on.	Low battery.	Charge the device for at least 30 minutes.
No sound from headphones.	Headphones not properly connected; volume too low; incorrect output selected.	Ensure headphones are fully plugged in. Increase volume. Check audio output settings.
Bluetooth device fails to pair.	Device not in pairing mode; too far from player; interference.	Ensure both devices are in pairing mode and close to each other. Restart both devices.
Cannot transfer files to the player.	USB cable issue; player not recognized by computer; full storage.	Try a different USB cable or port. Ensure the player is connected in data transfer mode. Check available storage space.

SPECIFICATIONS

Brand: Bewinner

Model Name: Bewinneriphqsxyb28

Item Type: HiFi MP3 Player

Material: Zinc Alloy

Battery: Built-in Polymer Li-Ion Battery, 750 mAh

Dimensions (L x W x H): Approx. 97mm x 60.4mm x 13.9mm (3.82in x 2.38in x 0.55in)

Display Screen: 2.4-inch HD Screen

Bluetooth: Bluetooth 5.3 (Two-way connectivity)

Internal Memory: 16 GB

Expandable Storage: Up to 256 GB via Micro SD card

Connectivity Technology: Auxiliary, Bluetooth

Compatible Devices: Headphones, Speakers, Smartphone, Personal Computer

Supported Audio Formats: FLAC, APE, DFF, MP3, WAV, WMA, M4A, MP2, AAC, ALAC, OGG, AIFF, Native DSD (up to 128 bits/5.6 MHz)

Display Technology: LCD

Manufacturer: Bewinner

Country of Origin: China

WARRANTY AND SUPPORT

The Bewinner Portable Digital Audio Player comes with a manufacturer's warranty of 2 years. For warranty claims, technical support, or further assistance, please contact your retailer or the manufacturer directly. Refer to the contact information provided with your purchase documentation.

Manufacturer Warranty: 2 years

