

Nonbliep B0DL8TY23J

Nonbliep Wireless Controller Instruction Manual

Model: B0DL8TY23J

INTRODUCTION

Thank you for choosing the Nonbliep Wireless Controller. This controller is designed to enhance your gaming experience across multiple platforms. Please read this manual carefully to ensure proper setup, operation, and maintenance of your device.

This controller is compatible with Xbox One, Xbox One X|S, Xbox Series X|S, and PC Windows. It features dual vibration, a six-axis gyroscope, Turbo function, programming capabilities, and a 3.5mm stereo headset jack.

The ergonomic design conforms to the palm structure, with a streamlined shape and special materials to reduce weight, providing enhanced comfort and effortless control during extended gameplay sessions.

SETUP

1. Battery Installation

The controller requires two (2) AA batteries for operation. These batteries are not included and must be purchased separately.

1. Locate the battery compartment on the rear of the controller.
2. Open the battery compartment cover.
3. Insert two AA batteries, ensuring correct polarity (+/-).
4. Close the battery compartment cover securely.



Image: Rear view of the controller, highlighting the battery compartment and the PL/PR/SET programming buttons.

2. Pairing with Your Device

To connect the Nonbliep Wireless Controller to your console or PC:

1. Ensure the controller has fresh batteries installed.
2. Turn on your Xbox console or PC.
3. Press and hold the **Pairing Button** on the top edge of the controller (next to the USB-C port) for 3 seconds until the indicator light flashes rapidly.
4. On your Xbox console, press the pairing button on the console itself. On PC, go to Bluetooth & other devices settings and select 'Add Bluetooth or other device', then 'Bluetooth', and select the controller from the list.
5. Once successfully paired, the indicator light on the controller will remain solid.

OPERATING INSTRUCTIONS

Controller Layout

Familiarize yourself with the controller's buttons and their functions:



Image: Detailed diagram illustrating the location and names of all buttons, joysticks, and ports on the Nonbliep Wireless Controller.

- **Left Joystick:** For movement and camera control.
- **Direction-pad (D-pad):** For precise directional input.
- **View Button:** Access in-game menus or specific functions.
- **Menu Button:** Access system menus or pause games.
- **A/B/X/Y Buttons:** Standard action buttons.
- **Right Joystick:** For camera control or specific actions.
- **R1/L1 Buttons:** Shoulder buttons.
- **R2/L2 Buttons:** Trigger buttons.
- **TYPE-C Charging Port:** For wired connection to PC or charging (if rechargeable batteries are used).
- **Pairing Button:** Initiates wireless pairing.
- **3.5mm Audio Jack:** Connect compatible headsets for audio and chat.

Special Functions

Dual Vibration Feedback

The controller features dual vibration motors embedded in the side grips. These motors provide haptic feedback, enhancing immersion and realism by simulating in-game actions like impacts, explosions, and environmental effects.



Image: Controller displaying the internal vibration motors in the handgrips, indicating enhanced pressure sensors for immersive feedback.

6-Axis Motion Control

Equipped with a highly sensitive six-axis gyroscope, the controller supports motion sensing for compatible games. This allows for intuitive control of movement, direction, and vision based on the controller's orientation.



Image: Controller with an overlay illustrating the 6-axis gyro functionality and enhanced dual vibration feedback.

TURBO Function

The TURBO function allows you to assign rapid-fire capabilities to specific buttons, providing an advantage in games requiring quick, repeated inputs.

1. Press and hold the **TURBO button**.
2. While holding TURBO, press the desired action button (e.g., A, B, X, Y, R1, L1, R2, L2).
3. Release both buttons. The assigned button will now activate its function repeatedly when held down.
4. To deactivate TURBO for a button, repeat the process.



Image: Controller highlighting the TURBO button, indicating its function for rapid-fire actions.

Programming Function (PL/PR Buttons)

The PL (Program Left) and PR (Program Right) buttons on the rear of the controller can be programmed to perform complex sequences or reassign functions for a customized gaming experience.

1. Press and hold the **SET button** (located between PL and PR) for 3 seconds until the indicator light starts flashing.
2. Press either the **PL** or **PR button** that you wish to program.
3. Perform the sequence of button presses you want to assign (e.g., A, B, X, Y, D-pad directions, etc.).
4. Press the **SET button** again to save the programming. The indicator light will stop flashing.
5. To clear a programmed setting, press and hold the **SET button** for 3 seconds, then press the **PL** or **PR button** you want to clear, and then press **SET** again.

MAINTENANCE

Proper care will extend the life of your Nonbliep Wireless Controller:

- **Cleaning:** Use a soft, dry cloth to wipe the controller. For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals or abrasive cleaners.
- **Storage:** Store the controller in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** Remove batteries if the controller will not be used for an extended period to prevent leakage.
- **Avoid Drops:** Protect the controller from drops and impacts, which can damage internal components.

TROUBLESHOOTING

Controller does not turn on or stay on:

- Check if the AA batteries are inserted correctly with the correct polarity.
- Replace the batteries with fresh ones.
- Ensure the battery compartment cover is securely closed.
- If using a wired connection, ensure the USB-C cable is securely connected to both the controller and the device.

Controller does not pair with the device:

- Ensure the controller has sufficient battery power.
- Verify that the device's Bluetooth or wireless function is enabled.
- Make sure the controller is in pairing mode (indicator light flashing rapidly).
- Move the controller closer to the device to ensure it is within the 32ft effective wireless distance.
- Try restarting both the controller and the device.
- **Note:** This is a third-party controller. Some Xbox console updates may occasionally affect compatibility with unauthorized accessories. If you encounter persistent issues with Xbox consoles, check for firmware updates for the controller (if available from the manufacturer) or consult Nonbliep support.

Buttons or joysticks are unresponsive or drifting:

- Clean around the buttons and joysticks to remove any debris.
- Restart the controller and the gaming device.
- If the issue persists, contact customer support.

Vibration function is not working:

- Ensure the game you are playing supports vibration feedback.
- Check in-game settings to ensure vibration is enabled.
- Verify that the controller has sufficient battery power.

SPECIFICATIONS

Feature	Detail
Brand	Nonbliep
Model Number	B0DL8TY23J
Compatibility	Xbox One, Xbox One X S, Xbox Series X S, PC Windows

Connectivity	Wireless (up to 32ft effective distance), USB-C (wired)
Power Source	2 x AA Batteries (not included)
Special Features	Dual Vibration, 6-Axis Gyroscope, TURBO Function, Programmable PL/PR Buttons, 3.5mm Audio Jack
Item Weight	0.29 Kilograms
Item Dimensions (D x W x H)	0.1"D x 0.1"W x 0.1"H
Color	Grey

WARRANTY INFORMATION

Nonbliep products typically come with a limited manufacturer's warranty. For specific details regarding the warranty period and coverage for your Nonbliep Wireless Controller, please refer to the warranty card included in the product packaging or visit the official Nonbliep website. Keep your proof of purchase for warranty claims.

CUSTOMER SUPPORT

If you encounter any issues or have questions not covered in this manual, please contact Nonbliep customer support. You can typically find contact information (email, phone, or support portal) on the official Nonbliep website or through the retailer where you purchased the product.

When contacting support, please have your product model number (B0DL8TY23J) and a detailed description of your issue ready.

