

USARMT AN-MR22GA

Original AN-MR22GA Magic Remote Control

USER MANUAL

1. Introduction

This manual provides comprehensive instructions for the setup, operation, and maintenance of your Original AN-MR22GA Magic Remote Control. This remote is designed to enhance your viewing experience with LG Smart TVs, offering intuitive control through voice commands, a pointer function, and quick access to popular streaming services. It is compatible with a wide range of LG Smart TVs from 2018 to 2024, including OLED, QNED, NANOCell, and 4K LED WebOS TV models.

2. Safety Information

- Do not expose the remote control to direct sunlight, heat sources, or extreme temperatures.
- Avoid dropping or subjecting the remote to strong impacts.
- Do not disassemble the remote control. This will void the warranty and may cause damage.
- Keep batteries out of reach of children. If swallowed, seek immediate medical attention.
- Dispose of used batteries according to local regulations. Do not mix old and new batteries, or different types of batteries.
- If the remote control will not be used for an extended period, remove the batteries to prevent leakage.

3. Product Overview

The AN-MR22GA Magic Remote Control features a user-friendly design with dedicated buttons for essential functions, voice control, and a responsive pointer for easy navigation.





Figure 3.1: Front view of the AN-MR22GA Magic Remote Control, showing all buttons including the numeric keypad, navigation wheel,

voice control, and dedicated app buttons.



Figure 3.2: Angled view of the AN-MR22GA Magic Remote Control, highlighting its ergonomic design and button layout from a different perspective.

Key Features:

- **Voice Control:** Integrated Google Voice and Alexa voice control for hands-free operation.
- **Pointer Function:** Navigate your TV screen with a responsive on-screen pointer.
- **Quick Access Buttons:** Dedicated buttons for Netflix, Prime Video, Disney+, and LG Channels.
- **Universal Compatibility:** Works with LG Smart TVs from 2018-2024 (OLED, QNED, NANOCeLL, 4K LED WebOS TVs).

Button Functions:

Button	Function
Power ()	Turns the TV on or off.
Numeric Keypad (0-9)	Enters numbers for channel selection or data input.
Volume Up/Down (+/-)	Adjusts the TV volume.
Channel Up/Down (▲/▼)	Changes TV channels.
Mute ()	Mutes or unmutes the TV sound.
Home ()	Accesses the TV's Home Dashboard.

Button	Function
Voice ()	Activates voice control (Google Assistant/Alexa).
Wheel (OK)	Confirms selections and acts as a scroll wheel.
Back (↶)	Returns to the previous screen.
Settings (⚙)	Accesses TV settings menu.
Netflix	Direct access to Netflix app.
Prime Video	Direct access to Prime Video app.
Disney+	Direct access to Disney+ app.
LG Channels	Direct access to LG Channels.

4. Setup

4.1 Battery Installation

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch to open it.
3. Insert two (2) AA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Close the battery compartment cover securely.



Figure 4.1: Side view of the AN-MR22GA Magic Remote Control, illustrating the location of the battery compartment.

4.2 Pairing the Remote Control

After installing the batteries, the remote control needs to be paired with your LG Smart TV. Follow these steps:

1. Point the remote control directly towards your LG Smart TV.
2. Press the **Wheel (OK)** button.
3. The remote control will automatically register with the TV. A pairing completion message will be displayed on your TV screen once successful.

If the remote does not pair automatically, try pressing and holding the **Home** and **Back** buttons simultaneously for 5 seconds to reset the remote, then repeat the pairing process.

5. Operating Instructions

5.1 Using the Pointer Function

The Magic Remote allows you to control an on-screen pointer, similar to a mouse. Simply move the remote in the air to move the pointer on the TV screen. Click the **Wheel (OK)** button to select items.

5.2 Using Voice Control

To use voice commands:

1. Press and hold the **Voice** button (microphone icon).
2. Speak clearly into the microphone located on the remote control.
3. Release the button when you are finished speaking.

You can use voice commands to search for content, change channels, adjust volume, or launch applications.

5.3 Using Shortcut Buttons

The remote features dedicated shortcut buttons for popular streaming services:

- Press the **Netflix** button to directly launch the Netflix application.
- Press the **Prime Video** button to directly launch the Prime Video application.
- Press the **Disney+** button to directly launch the Disney+ application.
- Press the **LG Channels** button to directly launch LG Channels.





Figure 5.1: Close-up view of the AN-MR22GA Magic Remote Control, showing the dedicated shortcut buttons for streaming services and the voice control button.

6. Maintenance

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or if the TV indicates low remote battery. Always replace both batteries at the same time with new AA batteries.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and moisture when not in use for extended periods.

7. Troubleshooting

Problem	Possible Cause / Solution
Remote not responding.	◦ Check battery orientation and charge. Replace batteries if necessary. ◦ Ensure there are no obstructions between the remote and the TV. ◦ Re-pair the remote control (see Section 4.2).
Pointer not appearing or moving.	◦ Ensure the remote is paired. ◦ Move the remote slightly to activate the pointer. ◦ If the pointer is off-screen, shake the remote gently to recenter it.

Problem	Possible Cause / Solution
Voice control not working.	◦ Ensure the remote is paired and batteries are sufficient. ◦ Speak clearly and hold the voice button while speaking. ◦ Check TV's network connection for voice assistant functionality.
Shortcut buttons not launching apps.	◦ Ensure the TV is connected to the internet. ◦ Verify the apps are installed and updated on your TV.

8. Specifications

- **Model Number:** AN-MR22GA
- **Product Dimensions:** 7 x 2 x 0.5 inches
- **Item Weight:** 4 ounces
- **Batteries Required:** 2 AA batteries (not included)
- **Connectivity Technology:** NFC (for pairing)
- **Compatible Devices:** LG Smart Televisions (2018-2024 models)
- **Special Feature:** Voice Search, Pointer Function
- **Manufacturer:** USARMT
- **Country of Origin:** China

9. Warranty and Support

For product support or inquiries, please contact the manufacturer, USARMT. Information regarding specific warranty terms may be available through your point of purchase or the manufacturer's official channels.

This product is subject to a standard return policy, typically allowing for refund or replacement within 30 days of purchase, as per retailer terms.

For further assistance, please refer to the official USARMT store on Amazon:[USARMT Store](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DL93VYGN>

More documents and user manuals: <https://manuals.plus/>