

[Manuals.plus](#) /

› [AIKE](#) /

› AIKE AK1801 Automatic Air Freshener Spray Dispenser User Manual

AIKE AK1801

AIKE AK1801 Automatic Air Freshener Spray Dispenser User Manual

Model: AK1801

1. PRODUCT OVERVIEW

The AIKE AK1801 Automatic Air Freshener Spray Dispenser is designed to provide continuous and customizable fragrance in various environments. This programmable device offers flexible scheduling options to suit your needs, ensuring a pleasant atmosphere.



Figure 1: Front view of the AIKE AK1801 Automatic Air Freshener Spray Dispenser.

2. KEY FEATURES

- **Programmable Spray Frequency:** Set spray intervals from 1 to 60 minutes.
- **Customizable Operating Hours:** Define specific time windows (e.g., 9:30 AM – 5:30 PM) for operation.
- **Selectable Active Days:** Choose working days (Mon-Fri, Mon-Sat, or daily).
- **Battery Powered:** Operates on two D-type 1.5V batteries (not included) for long-lasting use.
- **Dual Installation Options:** Can be screw wall-mounted or placed freestanding.

- **Durable Construction:** Made from ABS and corrosion-resistant stainless steel.
- **Tamper Prevention:** Features a built-in lock.

3. REFILL COMPATIBILITY

This dispenser is compatible with "Glade Automatic Spray Refill 269ml" and other refill bottles that feature standard nozzles. It is **not compatible** with "Air Wick" refill bottles due to their custom nozzle design.

Refill Can Compatibility:

- 1 Compatible with "**Glade Automatic Spray Refill 269ml**" and other refill cans with a standard nozzle. (not included)
- 2 Not compatible with "**Air Wick**" refill cans, as they have a custom nozzle that does not fit.



Figure 2: Refill can compatibility diagram. Shows Glade and other standard refills are compatible, while Air Wick custom refills are not.

4. SETUP AND PROGRAMMING

Please read these instructions carefully before use. Do not insert the fragrance can into the dispenser before

completing all settings to avoid accidental spraying. Ensure the red nozzle is reset before inserting the can.

4.1. Initial Setup

1. **Clear All Settings:** Press the "RESET" button to clear any previous settings. The display will show "00:00".
(Do not install the spray can when setting up.)
2. **Turn On the Switch:** Press the "ON/OFF" button to power on the device.

4.2. Setting Working Time (Start and End Time)

1. **Set the Start Time:** Long-press the "MODE" button until "START" flashes on the screen. Use the "HOUR" and "MIN" buttons to adjust the desired start time. (Long-press to accelerate time adjustment).
2. **Set the End Time:** Press the "MODE" button again until "STOP" flashes on the screen. Use the "HOUR" and "MIN" buttons to adjust the desired end time.

4.3. Setting Spray Interval

1. **Display Spray Count:** Press the "MODE" button until "SPRAY" flashes. This displays the number of times the device has sprayed.
2. **Set Spray Time Interval:** Press the "MODE" button again until "INTERVAL" flashes. Use the "MIN" button to set the desired time period between sprays (e.g., 15 minutes).

4.4. Setting Working Days and Current Time

1. **Set Working Days:** Press the "MODE" button until "WEEK" flashes. Use the "WEEK" button to select the desired working days (e.g., 1.2.3.4.5 for Mon-Fri, 1.2.3.4.5.6 for Mon-Sat, or 1.2.3.4.5.6.7 for daily).
2. **Set Current Time:** Press the "MODE" button until "CLOCK" flashes. Use the "HOUR" and "MIN" buttons to adjust the current time. Then, press the "WEEK" button to set the current day of the week.
3. **Exit Settings:** Press the "MODE" button to exit the setting mode.

Note: If the device loses power or the batteries are removed, the settings will be reset.



Figure 3: Control panel for setting up the dispenser's schedule.

5. OPERATING INSTRUCTIONS

5.1. Battery Installation

1. **Open the Dispenser:** Press down the top button on the dispenser to open the front cover.
2. **Insert Batteries:** Insert two D-type 1.5V alkaline batteries into the battery compartment, ensuring correct polarity. (Batteries are not included).

Lasts for Months



Please use 2 x 1.5V D-size alkaline batteries.

*Batteries not included



Figure 4: Battery installation for the AIKE AK1801 dispenser.

5.2. Installing the Spray Can

1. **Ensure Pump is Up:** Before inserting the spray can, ensure the internal pump mechanism is in the fully pushed-up position.
2. **Insert Spray Can:** Carefully insert the compatible air freshener spray can into the dispenser, aligning the nozzle with the spray mechanism.

5.3. Spray Test

After installing the spray can and setting up the schedule, you can perform a spray test:

1. **Turn ON the Switch:** Ensure the device is powered on.
2. **Initiate Spray:** Press the "SPRAY" button. The device will spray after a 3-second delay.

Warning: Do not point the nozzle directly towards yourself or others during the spray test.

6. INSTALLATION

The AIKE AK1801 offers two installation methods:

- **Freestanding:** Place the dispenser on a flat surface such as a desk or shelf.
- **Wall Mount:** Use the provided screws and wall anchors to securely mount the dispenser to a wall.



Notices & Support

1. Please read the manual carefully before use
2. Do not install the spray can during programming to avoid accidental spraying
3. Reset the red nozzle before inserting the can
4. Need help? Message us on Amazon.

Figure 5: Dimensions and included accessories for wall mounting.

7. MAINTENANCE

- **Cleaning:** Wipe the exterior of the dispenser with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Battery Replacement:** Replace batteries when the low battery indicator appears on the LCD screen or when

the spray frequency decreases. Always use two new D-type 1.5V alkaline batteries.

- **Refill Replacement:** Replace the air freshener can when it is empty. Follow the installation steps for new cans.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Dispenser not spraying.	◦ Batteries are low or incorrectly installed. ◦ Spray can is empty or incorrectly inserted. ◦ Pump mechanism is not pushed up. ◦ Device is off or not programmed.	◦ Replace batteries or ensure correct polarity. ◦ Replace spray can or re-insert correctly. ◦ Ensure the pump mechanism is pushed up before inserting the can. ◦ Turn on the device and verify programming settings.
Spray is weak or inconsistent.	◦ Low battery power. ◦ Spray can is nearly empty.	◦ Replace batteries. ◦ Replace spray can.
Settings are lost after power cycle.	◦ This is normal behavior if batteries are removed or power is lost.	◦ Re-program the device after battery installation.

9. SPECIFICATIONS

Feature	Detail
Product Dimensions	3.35 x 3.15 x 9.45 inches
Weight	1.12 Pounds
Model Number	AK1801
Power Source	Battery Powered (2 x D-type 1.5V batteries, not included)
Item Form	Aerosol
Recommended Uses	Office, Airports, Gyms, Home
Material	ABS, Corrosion-resistant Stainless Steel

10. OFFICIAL PRODUCT VIDEO: AK1801 GUIDELINES FOR USE

Your browser does not support the video tag.

Video 1: This official video from AIKE Direct provides a visual guide on how to set up and use the AK1801 Automatic Air Freshener Spray Dispenser, covering programming and installation steps.

11. WARRANTY AND SUPPORT

The AIKE AK1801 Automatic Air Freshener Spray Dispenser comes with a one-year manufacturer warranty. For support, please contact AIKE via Amazon message or their official support email. AIKE values your experience and is available to assist with any questions or issues.