

[Manuals.plus](#) /

› [COSYLAND](#) /

› COSYLAND Toddler Standing Tower (Model CS000132-4-CA) Instruction Manual

COSYLAND CS000132-4-CA

COSYLAND Toddler Standing Tower (Model CS000132-4-CA) Instruction Manual

INTRODUCTION

This manual provides essential information for the safe assembly, operation, and maintenance of your COSYLAND Toddler Standing Tower, Model CS000132-4-CA. This adjustable height kitchen step stool is designed to allow toddlers and children to safely reach counter heights, fostering independence and participation in household activities.




Image: The COSYLAND Toddler Standing Tower in its wooden finish.

SAFETY GUIDELINES

Your child's safety is paramount. Please adhere to the following guidelines:

- **Super Stable Design:** The tower features an 18mm extra-thick board and additional support feet for enhanced stability.
- **Anti-Drop Board:** A removable anti-drop board is included to prevent falls. Always ensure it is properly installed when in use.
- **Non-Slip Features:** Equipped with non-slip strips and rubber feet for extra stability and safety on various floor surfaces.
- **Adult Supervision:** Always ensure an adult is supervising the child when the tower is in use.
- **Placement:** Place the tower on a safe, even indoor floor. For maximum stability, position the top front against a kitchen island or sink.

Safety Is Our Top Priority

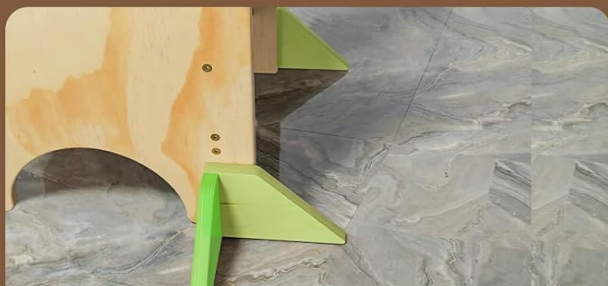


4 Reinforced & Anti-Tip Support LegsHandle



Protective Crossbar



Ergonomic Smooth

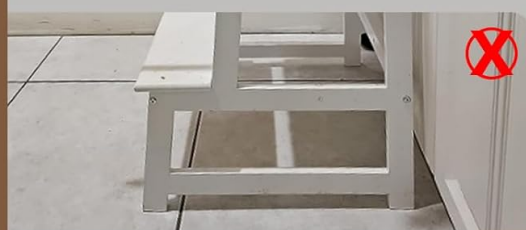

No Anti-Tip Features



Substandard Hardware Accessories



Accessories That Are Difficult To Install And Remove

Image: Illustration highlighting the safety features such as reinforced legs, protective crossbars, and ergonomic smooth surfaces.



Image: Visual guide for safe usage, emphasizing adult supervision and proper placement against a stable surface.

ASSEMBLY INSTRUCTIONS

The COSYLAND Toddler Standing Tower is designed for quick and straightforward assembly, typically taking around 10 minutes. All necessary hardware and tools are included.

1. Unpack all components and verify against the parts list provided in the packaging.
2. Follow the step-by-step diagrams to connect the side panels, steps, and safety bars.
3. Ensure all screws and fasteners are securely tightened. Do not overtighten.
4. Install the removable anti-drop board into its designated slots.
5. Attach the additional support feet at the bottom for enhanced stability.



Image: Step-by-step visual guide demonstrating the assembly process of the standing tower.

OPERATING INSTRUCTIONS

The COSYLAND Toddler Standing Tower features a three-level adjustable platform to accommodate children of different heights and ages (18 months to 6 years).

Adjusting the Platform Height:

1. Ensure the child is not on the tower before adjusting the height.
2. Locate the adjustment pins or screws on the side panels that secure the platform.
3. Carefully remove the pins/loosen the screws and slide the platform to the desired height level (Level 1: 27cm/10.6in, Level 2: 37cm/14.5in, Level 3: 47cm/18.5in).
4. Securely re-insert the pins or tighten the screws to lock the platform in place. Verify the platform is stable before allowing the child to use it.

3-Level Adjustable Height

Witness Your Child's Growth & Fits Kids of Different Heights



Image: The adjustable height feature, showing different height ranges for children aged 18 months to 3+ years.

General Use:

- Allow your child to climb onto the tower independently or assist them as needed.
- Encourage participation in kitchen activities such as washing hands, preparing food, or baking.
- The tower can also be used in bathrooms for teeth brushing or in other areas for learning and play.

A Great Helper for Toddler



KITCHEN



BATHROOM



STUDY

Image: Examples of the standing tower being used in different rooms, such as the kitchen, bathroom, and study.

MAINTENANCE

To ensure the longevity and hygiene of your COSYLAND Toddler Standing Tower, follow these maintenance tips:

- **Cleaning:** The tower is designed to be waterproof and easy to clean. Wipe away stains and spills instantly with a damp cloth. Avoid abrasive cleaners that may damage the wood finish.
- **Inspection:** Regularly check all screws, bolts, and connections to ensure they are tight. Tighten any loose hardware to maintain stability.
- **Storage:** Store the tower in a dry environment away from extreme temperatures or humidity to prevent wood warping or damage.

Waterproof & Easy to Clean

Wipe Away Stains Instantly With A Damp Cloth



Image: A child using the tower, illustrating its waterproof and easy-to-clean surface.

TROUBLESHOOTING

If you encounter any issues with your COSYLAND Toddler Standing Tower, please refer to the following common solutions:

- **Instability:** If the tower feels wobbly, check all assembly points. Ensure all screws are tightened and the additional support feet are correctly positioned. Verify the tower is on a flat, even surface.
- **Difficulty Adjusting Height:** Ensure the adjustment pins or screws are fully disengaged before attempting to move the platform. If the platform is stuck, gently wiggle it while applying slight pressure. Do not force it.
- **Missing Parts:** If any parts were missing upon delivery, please contact customer support immediately for assistance.

SPECIFICATIONS

Feature	Detail
Product Dimensions (D x W x H)	45D x 40W x 90H Centimetres
Brand	COSYLAND
Material	Wood
Colour	Wooden
Special Features	Adjustable Height, Non-Skid Feet, Slip Resistant Step
Room Type	Bathroom, Dining Room, Kitchen, Living Room, Nursery
Age Range (Description)	Toddler (18 months to 6 years)
Maximum Height	90 Centimeters
Specific Uses for Product	Counter, Shelf, Sink, Toilet
Model Name/Number	CS000132-4-CA
Item Weight	10.3 Kilograms
Number of Steps	3
Assembly Required	Yes

WARRANTY INFORMATION

The COSYLAND Toddler Standing Tower (Model CS000132-4-CA) comes with a **1-Year Manufacturer's Warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for any warranty claims. For detailed terms and conditions, refer to the warranty card included with your product or contact customer support.

CUSTOMER SUPPORT

For any questions, concerns, or assistance with your COSYLAND Toddler Standing Tower, please contact our customer support team. When contacting support, please have your model number (CS000132-4-CA) and purchase information readily available.

Contact Information:

Please refer to the contact details provided on the product packaging or the official COSYLAND website for the most up-to-date customer service information.

