

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Inwa](#) /

> [Inwa MZ-622 Outdoor Bluetooth Speakers Instruction Manual](#)

Inwa MZ-622

Inwa MZ-622 Outdoor Bluetooth Speakers Instruction Manual

Model: MZ-622

[Introduction](#) [What's in the Box](#) [Setup](#) [Operation](#) [Placement & Mounting](#)
[Specifications](#) [Maintenance](#) [Troubleshooting](#)

1. INTRODUCTION

Thank you for choosing the Inwa MZ-622 Outdoor Bluetooth Speakers. This active and passive speaker system delivers 400W peak power for a loud stereo sound experience, suitable for both indoor and outdoor environments. Featuring Bluetooth 5.2 connectivity and an auxiliary input, these speakers offer versatile audio streaming options. Their weatherproof design ensures durability against splashes and light rain, making them ideal for patios, porches, gazebos, and garages. This manual provides detailed instructions for setup, operation, and maintenance to ensure optimal performance and longevity of your speaker system.



Image: Overview of Inwa 400W Outdoor Bluetooth Speakers highlighting key features like Bluetooth 5.2, AUX input, weatherproofing, stereo system, and remote control.

2. WHAT'S IN THE BOX

Please check the package contents to ensure all items are present:

- 1 x Active Speaker
- 1 x Passive Speaker
- 1 x 12V DC Power Adapter
- 1 x Remote Control
- 1 x RCA Cable (5m)
- 1 x 3.5mm Auxiliary Input Cable
- Mounting Accessories (4 x Expansion screws, 4 x Fastener screws)
- 1 x User Manual



Easy to Install

**Metal Bracket with Pre-drilled Hole
Along with Screw, All ready for Installing**




Remote Control X1



2m Power AdapterX1



5m RCA CableX1

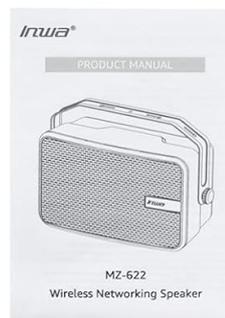

ManualX1



Expansion screwX4



FastenerX4

Image: All included components of the Inwa MZ-622 speaker system.

3. SETUP INSTRUCTIONS

3.1 Connecting the Speakers

The Inwa MZ-622 system consists of one active speaker and one passive speaker. The active speaker

contains the amplifier and controls, while the passive speaker connects to the active speaker.

1. **Connect the Passive Speaker:** Use the provided RCA cable to connect the passive speaker to the active speaker. Ensure a secure connection.
2. **Connect Power:** Plug the 12V DC power adapter into the active speaker's power input, then plug the adapter into a power outlet.
3. **Power On:** After connecting the power, the active speaker will automatically power on and enter Bluetooth mode, indicated by a flashing blue light.

Active + Passive Outdoor Speakers

2-way superior stereo quality with double the sound power

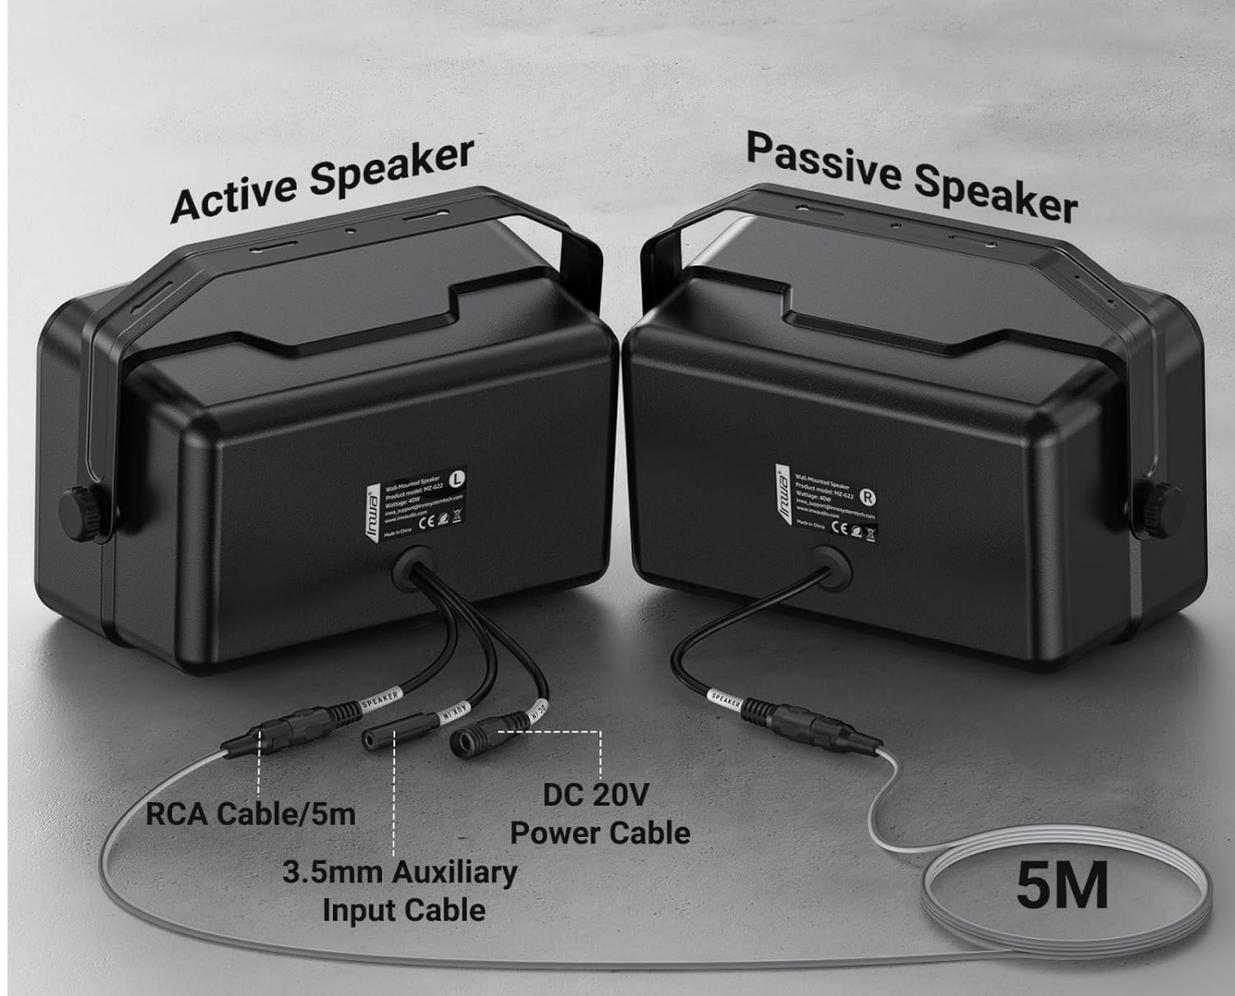


Image: Detailed view of the rear connections for the active and passive speakers.

3.2 Audio Source Connection

The speakers support both Bluetooth wireless streaming and wired auxiliary input.

3.2.1 Bluetooth Connection

1. Ensure the active speaker is powered on and the blue indicator light is flashing, indicating Bluetooth pairing mode.
2. On your smartphone, tablet, or PC, enable Bluetooth and search for available devices.
3. Select "Inwa MZ-622" (or similar name) from the list to pair. Once paired, the blue light will become

solid.



Upgraded Bluetooth 5.2 Connectivity

Makes connections faster and more stable for all your favorite devices
(smartphones, tablets, laptops, computers)

Image: Illustration of Bluetooth 5.2 connectivity with a mobile device.

3.2.2 Auxiliary (AUX) Input Connection

1. Connect one end of the provided 3.5mm auxiliary input cable to your external device (e.g., mobile phone, laptop, TV).
2. Connect the other end of the 3.5mm auxiliary input cable to the AUX IN port on the active speaker.
3. Press the 'M' button on the remote control to switch to AUX input mode. The indicator light on the active speaker will turn red.



Image: Connection diagram for AUX input with various devices.

3.3 Video Guide: Connection Method for MZ-622 Active + Passive Speakers

Your browser does not support the video tag.

Video: A step-by-step guide demonstrating how to connect the active and passive Inwa MZ-622 speakers, including power and audio cables.

4. OPERATING INSTRUCTIONS

The Inwa MZ-622 speakers can be easily operated using the included remote control. The remote control primarily functions with the active speaker.

4.1 Remote Control Functions

Flexible Remote Control

Can be hung anywhere and one-button operation, making music enjoyment easier



-  One-key Switch On/Off
-  BT mode or AUX mode
-  Bluetooth Pairing
-  Network Pairing
-  One-button Mute

Image: The remote control for the Inwa MZ-622 speakers.

- **Power Button ():** Turns the speaker system on or off.
- **Mode Button (M):** Switches between Bluetooth mode (blue indicator light) and AUX input mode (red indicator light).
- **Bluetooth Pairing Button ():** Initiates Bluetooth pairing mode.
- **Volume Up (+):** Increases the volume.
- **Volume Down (-):** Decreases the volume.
- **Mute Button ():** Mutes or unmutes the audio.
- **Play/Pause Button ():** Plays or pauses audio in Bluetooth mode.
- **Previous Track ():** Skips to the previous track in Bluetooth mode.
- **Next Track ():** Skips to the next track in Bluetooth mode.

Note: In AUX input mode, track control buttons (Play/Pause, Previous, Next) on the remote are disabled as audio control is managed by the connected external device.

5. PLACEMENT AND MOUNTING

The Inwa MZ-622 speakers are designed for versatile placement, both indoors and outdoors. Their compact

size (9.41"W x 6.54"D x 4.61"H) and included mounting accessories make installation straightforward.

5.1 Outdoor Placement Considerations

While the speakers are weatherproof and can withstand splashes and light rain, it is recommended to install them in locations that offer some protection from direct, heavy downpours or prolonged exposure to harsh elements. Ideal locations include:

- Under a patio cover
- On the underside of a porch roof
- Within a gazebo or outdoor bar area
- Inside a garage or small workshop



Image: The weatherproof construction of the Inwa speaker.

5.2 Mounting Instructions

The speakers come with metal brackets and pre-drilled holes for easy wall mounting. Use the provided expansion and fastener screws for secure installation.

1. **Choose Location:** Select a suitable mounting location, considering sound dispersion and protection from extreme weather.

2. **Mark Holes:** Hold the speaker bracket against the wall and mark the positions for drilling.
3. **Drill Holes:** Drill pilot holes at the marked positions. Insert expansion screws if necessary for added stability.
4. **Secure Bracket:** Attach the speaker bracket to the wall using the fastener screws.
5. **Attach Speaker:** Mount the speaker onto the secured bracket. Adjust the angle as desired for optimal sound direction.



Image: Example of outdoor wall mounting.

6. SPECIFICATIONS

Feature	Detail
Model Name	MZ-622
Speaker Type	Outdoor
Speaker Maximum Output Power	400 Watts
Connectivity Technology	Auxiliary, Bluetooth
Wireless Communication Technology	Bluetooth
Bluetooth Version	5.2
Audio Output Mode	Stereo
Surround Sound Channel Configuration	2.0
Woofer Diameter	4 Inches
Tweeter Size	1 Inch
Material	Acrylonitrile Butadiene Styrene (ABS)
Is Waterproof	True
Product Dimensions	6.54"D x 9.41"W x 4.61"H
Item Weight	7.78 pounds
Power Source	Corded Electric
Control Method	Remote

7. MAINTENANCE

To ensure the longevity and optimal performance of your Inwa MZ-622 speakers, follow these maintenance guidelines:

- **Cleaning:** Wipe the speaker enclosures with a soft, damp cloth. Avoid using harsh chemicals or abrasive cleaners, as these can damage the ABS material and mesh grille.
- **Weather Protection:** Although weatherproof, it is advisable to protect the speakers from extreme weather conditions such as heavy storms, prolonged direct sunlight, or freezing temperatures when not in use for extended periods.
- **Cable Management:** Ensure all cables are securely connected and not under strain. Periodically check cables for any signs of wear or damage.
- **Storage:** If storing the speakers for a long time, disconnect them from power, clean them, and store them in a cool, dry place.

8. TROUBLESHOOTING

If you encounter issues with your Inwa MZ-622 speakers, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No power/Speaker not turning on	Power adapter not connected or faulty.	Ensure the 12V DC power adapter is securely connected to the active speaker and a working power outlet. Test the outlet with another device.
No sound from speakers	Volume too low; incorrect input mode; cables loose; device not playing audio.	Increase volume on both the speaker and the connected device. Press the 'M' button on the remote to cycle through modes (Bluetooth/AUX) until the correct mode is selected. Check all audio cables (RCA, AUX) for secure connections. Ensure your audio source is playing.
Bluetooth not pairing	Speaker not in pairing mode; device Bluetooth off; interference.	Ensure the active speaker's blue indicator light is flashing. Turn Bluetooth off and on again on your device. Move closer to the speaker. Disconnect other Bluetooth devices from your source.
Remote control not working	Battery low/dead; remote out of range; line of sight blocked.	Replace the remote control battery. Ensure you are within range and have a clear line of sight to the active speaker.
Distorted audio	Volume too high; poor audio source quality; damaged cables.	Reduce the volume on both the speaker and the audio source. Test with a different audio source or cable.

9. WARRANTY AND SUPPORT

The Inwa MZ-622 speakers come with a limited warranty. For specific warranty terms and conditions, please refer to the warranty information provided with your purchase or contact Inwa customer support.

For technical assistance, troubleshooting, or any other inquiries, please visit the official Inwa website or contact their customer service department. Contact details can typically be found in the product packaging or on the manufacturer's website.

© 2026 Inwa. All rights reserved.