

AUSDOM S5 Pro

AUSDOM S5 Pro Wireless Keyboard and Mouse Combo Instruction Manual

Model: S5 Pro | Brand: AUSDOM

1. INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your AUSDOM S5 Pro Wireless Keyboard and Mouse Combo. Please read this guide thoroughly before use to ensure optimal performance and longevity of your device.

2. PACKAGE CONTENTS

- 1 x AUSDOM S5 Pro Wireless Keyboard (98 Keys)
- 1 x AUSDOM Wireless Mouse
- 1 x USB Receiver (stored in the mouse's built-in compartment)
- 1 x User Manual

3. SETUP

3.1. Battery Installation

The keyboard requires two AAA batteries, and the mouse requires one AA battery. Batteries are not included in the package.

1. **For the Mouse:** Open the battery compartment on the underside of the mouse. Insert one AA battery, ensuring correct polarity. Close the compartment.
2. **For the Keyboard:** Locate the battery compartment on the underside of the keyboard. Insert two AAA batteries, ensuring correct polarity. Close the compartment.

Battery Version

No need to charge, battery can be replaced at any time



Figure 3.1: Battery installation for the keyboard (2x AAA) and mouse (1x AA).

3.2. Wireless Connection (Plug-and-Play)

The keyboard and mouse connect wirelessly via a single 2.4G USB receiver. No software or drivers are required for installation.

1. Locate the USB receiver, which is stored in the built-in compartment on the underside of the mouse.
2. Plug the USB receiver into an available USB port on your computer (PC, laptop, etc.).
3. Turn on the power switch for both the keyboard and the mouse. The power switch for the mouse is on its underside, and for the keyboard, it is located on the side edge.
4. The devices should automatically connect to your computer.



Figure 3.2: The 2.4G USB receiver connects both the keyboard and mouse to your computer. The receiver is stored in the mouse.

Your browser does not support the video tag.

Video 3.1: This video demonstrates the plug-and-play setup process for the AUSDOM 2.4GHz Wireless Mouse and Keyboard Combo. It shows the USB receiver being inserted and the devices becoming operational.

3.3. Compatibility

The AUSDOM S5 Pro is compatible with Windows XP/ME/Vista/7/8/10/11 and macOS. It works with desktops, laptops, and other computers.

Wide Compatibility

Compatible with Windows XP/ME/Vista/7/8/10/11, macOS



PC



Laptop



Mac



Smart TV



Windows



Mac OS



Google

Figure 3.3: The keyboard and mouse combo is compatible with PC, Laptop, Mac, Smart TV, Windows, Mac OS, and Google Chrome OS.

3.4. Switching Operating Systems

The keyboard supports quick switching between Windows and Mac layouts.

- To switch to Windows OS: Press **Fn + P**.
- To switch to Mac OS: Press **Fn + O**.

4. OPERATING THE KEYBOARD

4.1. Key Features

The 98-key layout combines a numeric pad and media keys in a compact design. It features ergonomic curved keycaps and a responsive scissor-switch mechanism for quiet and precise typing.

Quiet & Comfortable

Quiet typing experience with a tactile feel close to a short-axis mechanical keyboard, more comfortable than other scissor keyboards




50% Shorter

Comfortable to the touch
with a slight paragraph feel.



Easy Typing
Short key travel

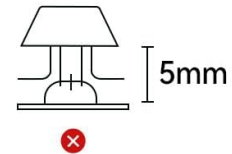

Traditional keys
Long key travel

Figure 4.1: The keyboard features a scissor-switch mechanism with 3.8mm key travel, offering a quiet and comfortable typing experience.

4.2. Function Keys and Shortcuts

The keyboard includes dedicated function keys (F1-F12) and media keys for quick access to various commands.

- **Power Indicator / Fn Lock:** Indicates power status or activates Fn lock.
- **Caps Lock Indicator:** Shows when Caps Lock is active.
- **NumLock Indicator:** Shows when NumLock is active.
- **Media Keys:** Play/Mute, Volume Up/Down, Search, Multi-Windows display, Switch Applications, Screen brightness adjustment, Previous/Next Track, Play/Pause, Print Screen.
- **Voice Assistant:** Dedicated key for activating voice assistant.
- **Reset Keyboard:** Press and hold **Fn + Win + Esc** for 3 seconds to reset the keyboard.

Shortcuts For Easy Access



Figure 4.2: Overview of keyboard shortcuts and mouse buttons.

4.3. Ergonomic Design

The keyboard features an ergonomic tilt angle for comfortable typing, reducing strain during prolonged use.



Figure 4.3: The keyboard is designed with a comfortable tilt angle to enhance typing experience.

5. OPERATING THE MOUSE

5.1. Adjustable DPI

The wireless mouse offers three adjustable DPI levels (800/1200/1600) for smooth cursor control and precise tracking. Press the DPI button located on the top of the mouse to cycle through the sensitivity settings.

5.2. Mouse Buttons

- **Left/Right Click:** Standard mouse functions.
- **Scroll Wheel:** For vertical scrolling.
- **Forward/Back Buttons:** Located on the side, these buttons allow for quick navigation in web browsers and applications.
- **Silent Click:** The mouse features quiet clicks, ideal for environments where noise reduction is desired.

3-Level Adjustable Mouse



Figure 5.1: Detailed view of the ergonomic wireless mouse with its adjustable DPI and dedicated navigation buttons.

6. MAINTENANCE

To ensure the longevity and optimal performance of your AUSDOM S5 Pro combo, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the surfaces of the keyboard and mouse. For stubborn dirt, slightly dampen the cloth with water or a mild cleaning solution. Avoid excessive moisture.
- **Storage:** When not in use for extended periods, turn off both devices to conserve battery life. Store them in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Replacement:** Replace batteries when performance degrades. Ensure correct battery type (AAA for keyboard, AA for mouse) and polarity during installation.

7. TROUBLESHOOTING

- **No Connection:**
 - Ensure the USB receiver is securely plugged into a working USB port on your computer.
 - Verify that both the keyboard and mouse are powered on.
 - Check if the batteries are correctly installed and have sufficient charge. Replace if necessary.
 - Try plugging the USB receiver into a different USB port.
 - Reset the keyboard by holding **Fn + Win + Esc** for 3 seconds.

- **Lag or Intermittent Connection:**

- Move the devices closer to the USB receiver.
- Ensure there are no large metal objects or other wireless devices interfering with the 2.4G signal.
- Replace batteries if they are low.

- **Mouse Cursor Jumps or is Unresponsive:**

- Clean the optical sensor on the underside of the mouse.
- Ensure you are using the mouse on a suitable surface (not highly reflective or transparent).
- Adjust the DPI setting using the DPI button on the mouse.

- **Keyboard Keys Not Responding:**

- Check battery levels and replace if needed.
- Ensure the keyboard is powered on and connected.
- Reset the keyboard as described in Section 4.2.

8. SPECIFICATIONS

Brand	AUSDOM
Model Number	S5 Pro
Connectivity Technology	2.4GHz Wireless (USB Receiver)
Keyboard Layout	98 Keys (with Numeric Keypad)
Keyboard Switch Type	Scissor Switch
Mouse DPI Levels	800 / 1200 / 1600 (Adjustable)
Keyboard Battery	2 x AAA batteries (not included)
Mouse Battery	1 x AA battery (not included)
Product Dimensions	15.86 x 5.31 x 0.78 inches
Item Weight	1.72 pounds

9. WARRANTY AND SUPPORT

AUSDOM products come with a standard manufacturer's warranty. For specific warranty details, please refer to the product packaging or contact AUSDOM customer support.

If you encounter any issues or have questions regarding your AUSDOM S5 Pro Wireless Keyboard and Mouse Combo, please visit the official AUSDOM website or contact their customer support team for assistance. You can find contact information on the product packaging or on the AUSDOM brand store page: [AUSDOM Store](#).