

[Manuals.plus](#) /

› [Afterglow](#) /

› Afterglow Outdoor Patio Propane Fire Heater Model PD-F210017 Instruction Manual

Afterglow PD-F210017

Afterglow Outdoor Patio Propane Fire Heater

Model: PD-F210017

INTRODUCTION

This manual provides essential information for the safe assembly, operation, maintenance, and troubleshooting of your Afterglow Outdoor Patio Propane Fire Heater, Model PD-F210017. Please read all instructions carefully before use and retain this manual for future reference.



The Afterglow Outdoor Patio Propane Fire Heater, featuring a stackstone brown finish, provides warmth and ambiance to outdoor spaces.

IMPORTANT SAFETY INFORMATION


WARNING: Failure to follow these instructions could result in fire, explosion, property damage, personal injury, or death.

- **FOR OUTDOOR USE ONLY:** Never operate this appliance indoors or in an enclosed area. Ensure adequate ventilation.
- **PROPANE GAS ONLY:** Use only liquid propane (LP) gas. Do not connect to a natural gas supply.
- **GAS LEAK CHECK:** Before each use, perform a leak test on all gas connections using a soapy water solution. Never use an open flame to check for leaks.
- **CLEARANCES:** Maintain minimum clearances from combustible materials: 36 inches (91 cm) from sides and rear, 72 inches (183 cm) from top.
- **FLAMMABLE MATERIALS:** Keep flammable liquids and vapors away from the heater. Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.

- **CHILDREN AND PETS:** Keep children and pets away from the heater, especially during operation.
- **HOT SURFACES:** Surfaces of the heater become hot during operation. Avoid direct contact.
- **CYLINDER STORAGE:** LP gas cylinders must be stored outdoors in a well-ventilated area and out of reach of children.
- **REGULATOR:** Use only the pressure regulator and hose assembly supplied with this heater.

PRODUCT COMPONENTS AND FEATURES

Your Afterglow fire heater is designed with several key components for performance and safety.

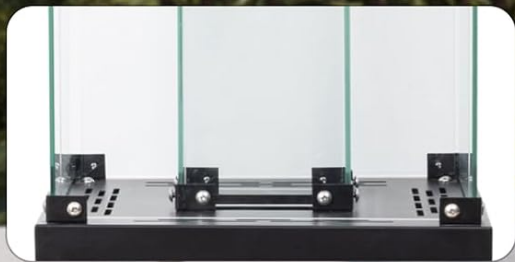

Tempered Windproof Glass



Stainless Steel Burner




Unique Finish Design



Features include tempered windproof glass for flame protection, a durable stainless steel burner, and a unique finish design.

STAINLESS STEEL BURNER

Benefit from the durable structure for long-lasting use.

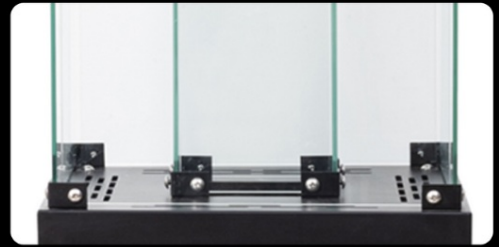

TEMPERED WINDPROOF GLASS

The clear flame view adds ambiance to your outdoor space.

The stainless steel burner ensures durability, while the clear tempered glass enclosure provides a visible flame and protection.

SETUP AND ASSEMBLY

Follow these steps to assemble your fire heater. A standard 20lb propane gas tank (not included) is required for operation.

1. **Unpack Components:** Carefully remove all parts from the packaging. Verify all components are present according to the packing list.
2. **Attach Wheels/Feet:** Depending on your preference for mobility or stability, attach the 4 universal wheels (2 lockable) or the 4 adjustable feet to the base of the heater. For added stability, use the 4 ground fixers.



4 Ground Fixers

4 Adjustable Feet

4 Universal Wheels
(2 Lockable)

The heater includes options for mobility with universal wheels (two lockable) or stability with adjustable feet and ground fixers.


3. **Install Propane Tank:** Open the access door on the base of the heater. Place a standard 20lb propane tank into the designated compartment. Connect the regulator hose to the propane tank valve, ensuring a tight seal.
4. **Assemble Glass Panels:** Carefully install the tempered glass panels around the burner area as per the detailed instructions in your included user manual. Ensure all glass supports are securely fastened.
5. **Optional Heat Reflector:** If desired, install the optional heat reflector on top of the glass enclosure. This accessory helps direct heat downwards for increased warmth in colder conditions. Remove it for less heat in warmer weather.



The optional heat reflector can be installed for enhanced warmth or removed for cooler operation.

OPERATING INSTRUCTIONS

Follow these steps for safe ignition and operation of your fire heater.

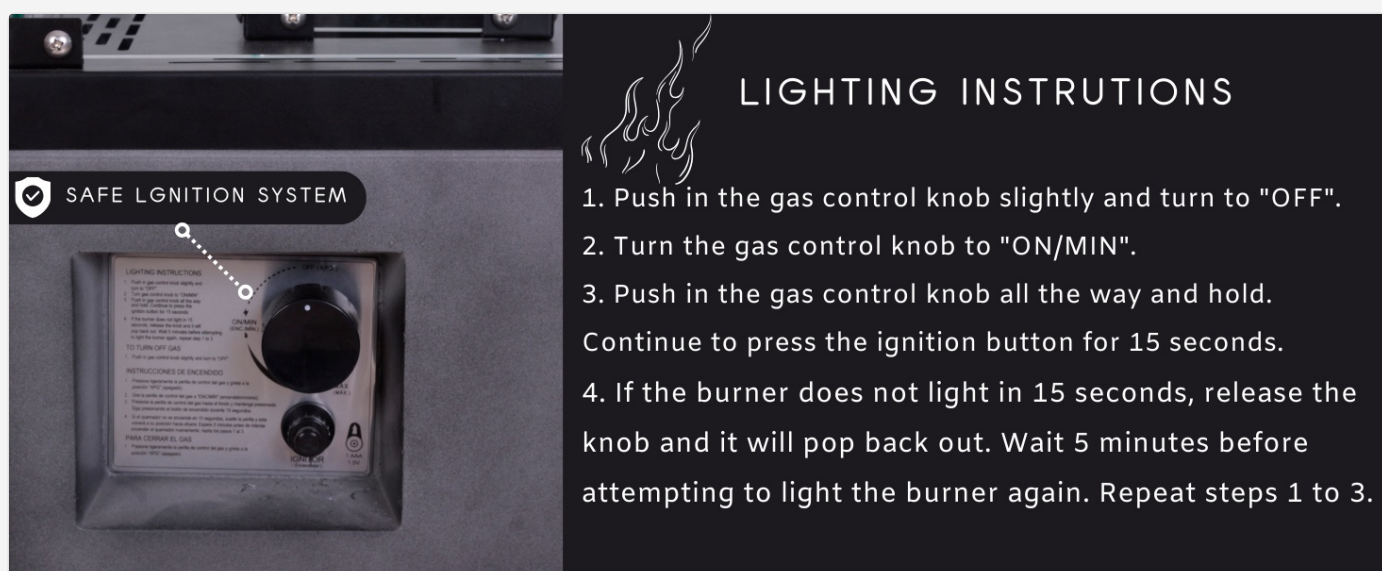

The control panel features a safe ignition system for easy and reliable startup.

1. **Open Gas Supply:** Ensure the propane tank valve is fully open.
2. **Prepare for Ignition:** Push in the gas control knob slightly and turn it to the "OFF" position.
3. **Turn to ON/MIN:** Turn the gas control knob to the "ON/MIN" position.
4. **Ignite Burner:** Push in the gas control knob all the way and hold. Continue to press the ignition button for 15 seconds.
5. **Troubleshooting Ignition:** If the burner does not light within 15 seconds, release the knob, and it will pop back out. Wait 5 minutes before attempting to light the burner again. Repeat steps 1 to 3.
6. **Adjust Flame:** Once lit, release the control knob. You can adjust the flame height by turning the control knob between "MIN" and "MAX" settings.
7. **To Turn Off:** Push in the gas control knob slightly and turn it to the "OFF" position. Close the valve on the propane tank when the heater is not in use.

MAINTENANCE

Proper maintenance ensures the longevity and safe operation of your fire heater.

- **Cleaning:** Regularly clean the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents. Ensure the burner area is free from debris.
- **Glass Panels:** Clean glass panels with a glass cleaner when cool.
- **Storage:** When not in use, especially during inclement weather or off-season, cover the heater with the provided waterproof cover. Store the propane tank separately in a well-ventilated area.

WATERPROOF COVER



Use the waterproof cover to protect your heater from rain and sun when not in use, extending its lifespan.

TROUBLESHOOTING

If you encounter issues with your fire heater, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Heater does not light	No gas flow; Ignition electrode not sparking; Low propane tank pressure.	Check propane tank valve is open; Ensure tank has fuel; Check for gas leaks; Verify ignition button is pressed correctly; Clean electrode if dirty.
Low flame or inconsistent flame	Low propane level; Regulator issue; Obstruction in burner.	Replace or refill propane tank; Ensure regulator is properly connected; Inspect burner for debris and clean if necessary.
Smell of gas	Gas leak.	Immediately turn off gas supply at the tank. Perform a leak test with soapy water. Do not operate if a leak is detected. Contact qualified service personnel.

SPECIFICATIONS

Key technical specifications for the Afterglow Outdoor Patio Propane Fire Heater.

PRODUCT DIMENSION



41,000 BTU



CSA



Requires a standard 20lb propane gas tank(not included)



The heater provides 41,000 BTU heat output and is CSA certified, requiring a standard 20lb propane tank.

- **Brand:** Afterglow
- **Model Number:** PD-F210017
- **Product Dimensions:** 16"D x 16"W x 61"H
- **Item Weight:** 99 pounds
- **Heat Output:** 41,000 BTU
- **Fuel Type:** Propane
- **Burner Type:** Radiant
- **Indoor/Outdoor Usage:** Outdoor Only
- **Special Feature:** Wheels (for portability)
- **Certifications:** CSA Certificated
- **UPC:** 850054451606

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or contact Afterglow customer service directly. Keep your purchase receipt for warranty claims.

© 2026 Afterglow. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

Open the live page

<https://manuals.plus/asin/B0DLB86PGQ>

More documents and user manuals: <https://manuals.plus/>